 




Botslab S8 Plus NaviClean Robot Vacuum Cleaner User Manual

[Home](#) » [Botslab](#) » Botslab S8 Plus NaviClean Robot Vacuum Cleaner User Manual 



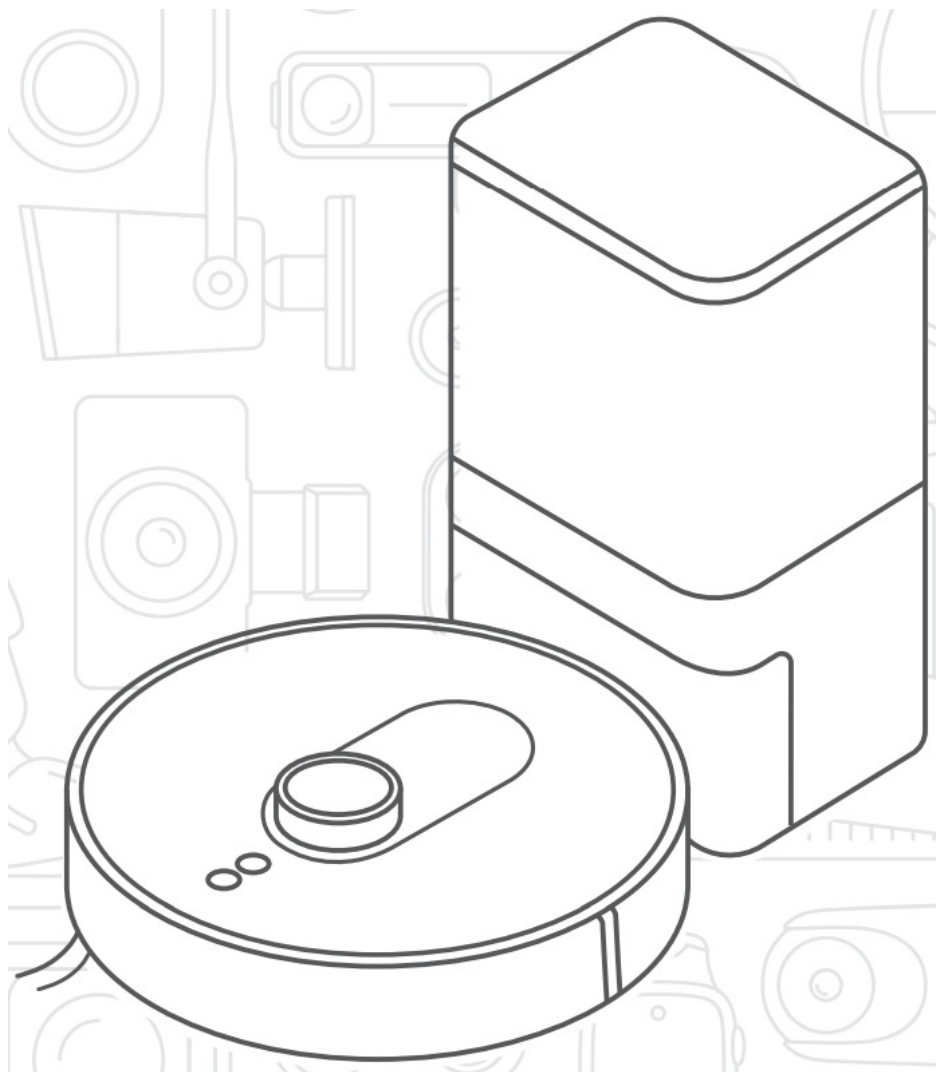

Contents

- [1 S8 Plus NaviClean Robot Vacuum Cleaner](#)
- [2 Safety Information](#)
- [3 Product Overview](#)
- [4 Installation Instructions](#)
- [5 Indicator Status](#)
- [6 After-sales Service](#)
- [7 FCC Statement](#)
- [8 EU DECLARATION OF CONFORMITY](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

S8 Plus NaviClean Robot Vacuum Cleaner

Dear customers

Thank you for choosing the artificially intelligent (AI) Botslab Robot Vacuum Cleaner! Please read the user manual carefully before using it and keep this manual for future reference.

Safety Information

- Before using the product, please read the entire safety instructions and save the manual for future reference. Any operations that do not follow the manual may cause serious injury or damage.

- **WARNING**

- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Small children and pets should be supervised when the robot is operating.
- This product can only be used with the authorized adapter, power supply cord, plug, battery, and dirt disposal base. Use of any unauthorized accessories may cause the product to generate heat, smoke, catch fire, or explode.
- Stop using the product if the Robot or any accessory is damaged. Please contact Botslab Customer Service to purchase or replace. Except for the repair technicians designated or authorized by Botslab, no one shall disassemble, repair, or modify this product.
- Do not place objects (including children and pets) on the robot at any time.
- Only use and store this product indoors in a dry location with a temperature from 0°C/32°F to 40°C/104°F.
- Always disconnect your Robot from the dirt disposal base before cleaning or maintaining it.
- Do not handle your Robot or dirt disposal base with wet hands or wipe the product with a wet cloth.
- Do not wash the Robot or dirt disposal base under running water.
- To ensure safe operation, do not use the product in a suspended area (such as a second-floor loft, open balcony, and tops of furniture) without a physical barrier.
- Ensure the dirt disposal base is placed at least 1.5 meters/4.9 feet away from stairs, other open areas, and heat sources (such as heaters).
- Do not short-circuit the battery by allowing metal objects to contact battery terminals or immerse in liquid. Do not subject batteries to mechanical shock.
- Periodically inspect the battery pack for any sign of damage or leakage. Do not charge damaged or leaking battery packs, and do not allow the liquid to come in contact with skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.
- This appliance contains batteries that are only replaceable by a skilled person.

- **CAUTION**

- This product is used for floor cleaning in a home environment. Do not use it for outdoor (such as an open balcony), non-ground (such as a sofa), commercial, or industrial environments.
- Before using the product, pull cords for blinds or curtains, and power cords to prevent them from obstructing the product.
- Remove fragile objects (such as vases) on the floor to prevent the robot from damaging valuables.
- Place the small cleaning tool in an area out of the reach of the children.
- Do not let hair, fingers, or any other body parts near the dust suction port when the robot is operating.
- Do not use this product to clean sharp objects (such as decoration debris, glass, and iron nails).
- Do not use this product to clean burning or smoking objects (such as undistinguished cigarette butts).

- **NOTICE**


- Do not use the product in a room where infants or young children are sleeping.
- High pile carpets and some deep dark carpets may not be cleaned properly.
- Do not use the bumper or top cover as handles to carry the robot.
- Do not use the mopping function on carpets or the tops of furniture.

- Using Robot in an environment with direct sunlight or strong reflective objects may affect the cleaning effect.
- After unpacking, you may discover water stains or residual water drops on the product's water tank or water outlets, which is due to the specialized water tank test employed in the factory before delivery and is a normal occurrence. This will not affect product usage.
- If you need to transport this product, please ensure that the Robot is turned off. It is recommended to use the original packaging for transportation.
- If you will not use this product for a long period of time, turn off the robot after it is fully charged and put the product in a cool and dry place. Charge the Robot at least once every three months to avoid over-discharge from the battery.
- If you live in an area prone to electrical storms, it is recommended that you use additional surge protection. Your dirt disposal base may be protected with a surge protector in the event of severe electrical storms.
- Please use this product in accordance with the manual. Liabilities for any loss or injury caused by improper use shall be solely borne by the user.
- **RECYCLING AND DISPOSAL**
- Disconnect the product from the dirt disposal base, turn it off, and remove the battery before recycling or disposal.
- Place the battery in a sealed plastic bag and recycle or dispose of it safely according to local environmental regulations.
- It is strictly prohibited to burn the product even if the product is severely damaged.

Laser safety information

- All laser sensors meet the class 1 laser product standard of IEC60825 and do not produce dangerous laser radiation.
- Execution standard: IEC60335

California residents

 **WARNING:** Cancer and Reproductive Harm – www.P65Warnings.ca.gov Due to California's Proposition 65 Law, a warning must be posted on all products that may be sold in California. The warning does not mean that our products actually will cause any harm.

Product Overview


Specifications

Robot	
Dimensions	340 x 340 x 95 mm 13.4 x 13.4 x 3.7 inches
Product weight	3.75±0.1 kg 8.26±0.22 lbs
Battery capacity	4700 mAh
Rated voltage	14.8 V
Rated power	30 W

Dirt Disposal Base	
Dimensions	220 x 180 x 380 mm 8.67 x 7.09 x 14.96 inches
Rated power	950 W
Rated output	24 V $\overline{\sim}$ 1.5 A


Box Content

 Main unit, dust bin & water tank set, mop bracket, mop pad, dirt disposal base, dust bags, small cleaning tool, user manual

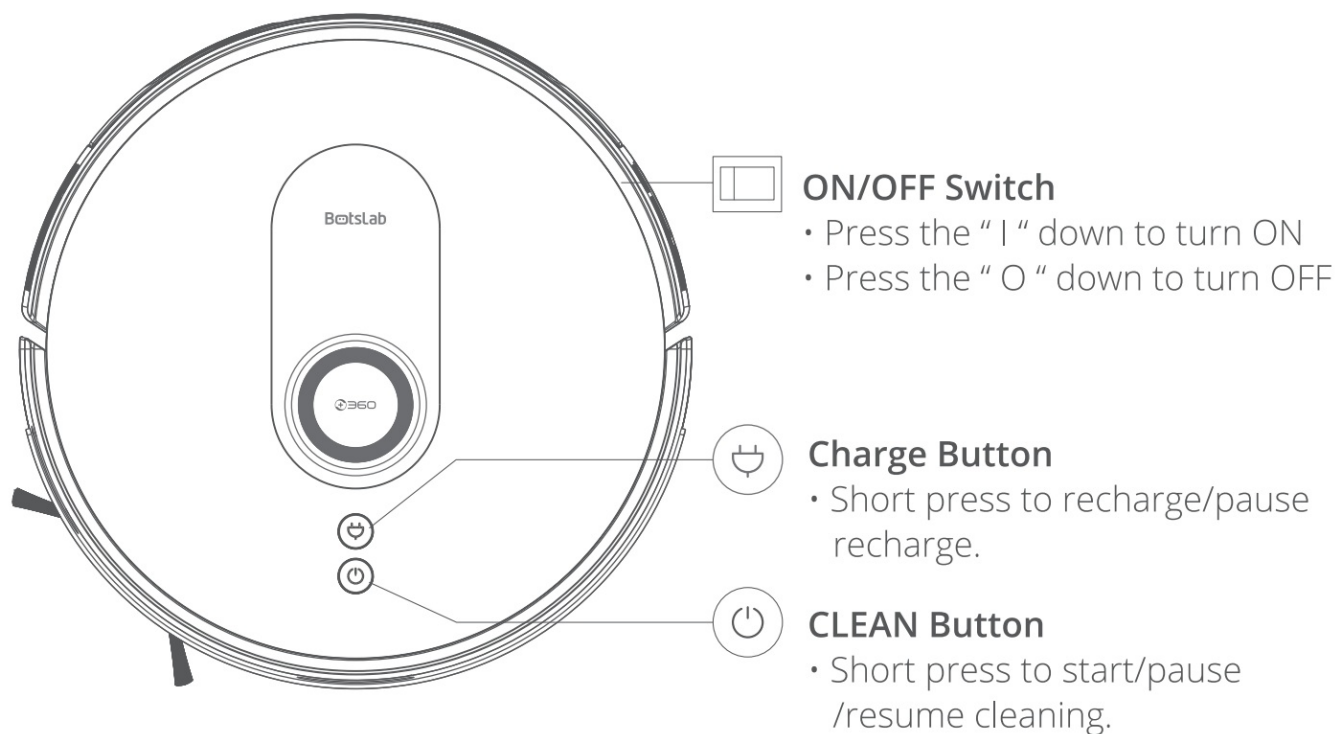


Note: After the Robot is turned on, press  +  buttons and hold for 3 seconds to reset Wi-Fi.

 
Top View

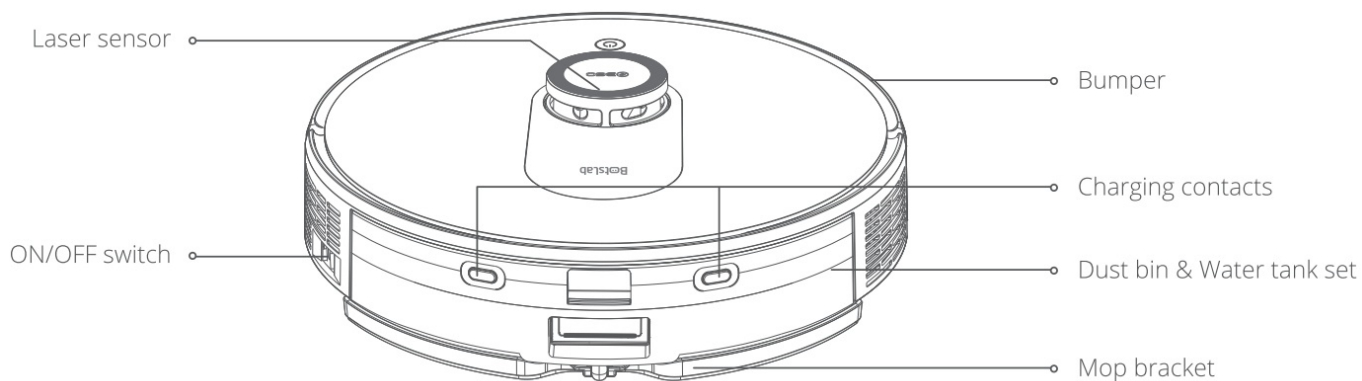


Bottom View

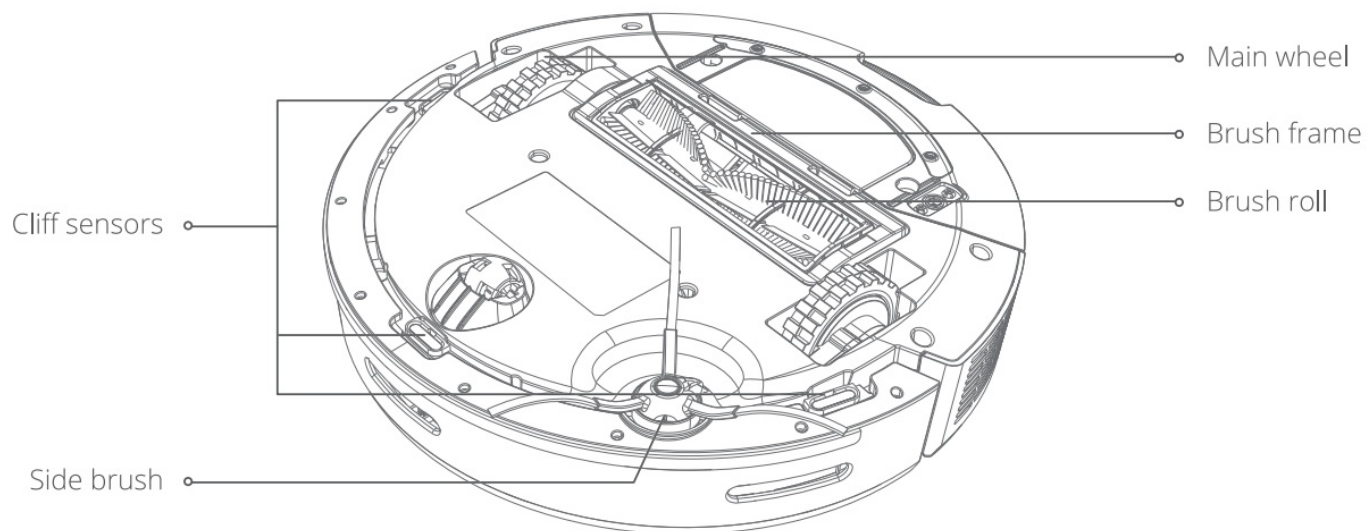 


Dust Bin & Water Tank Set

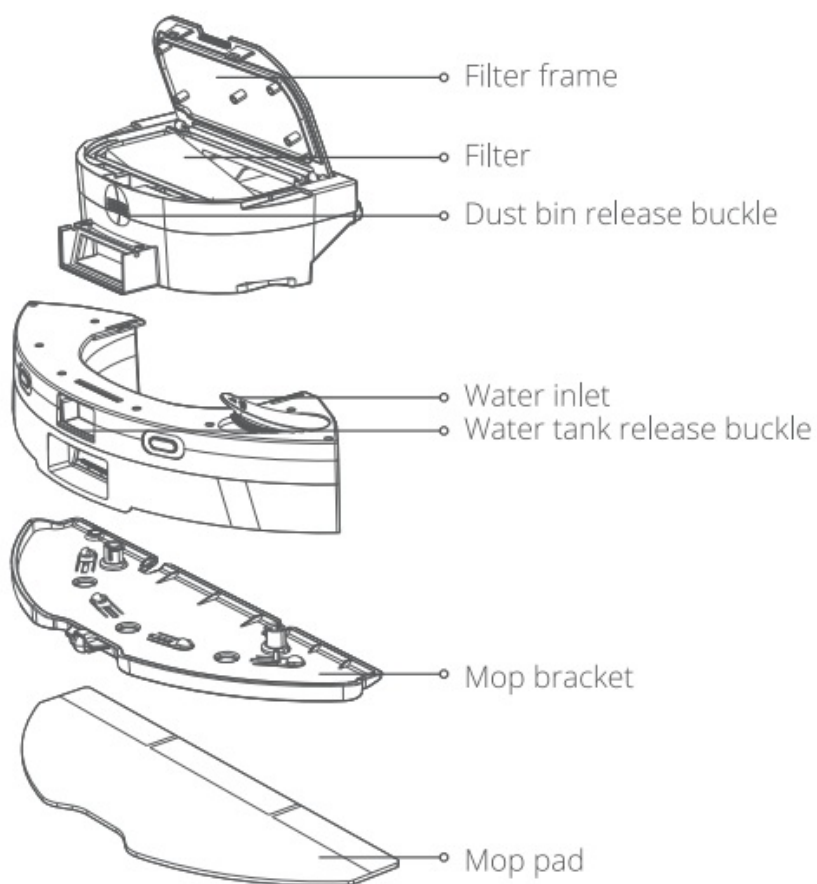 

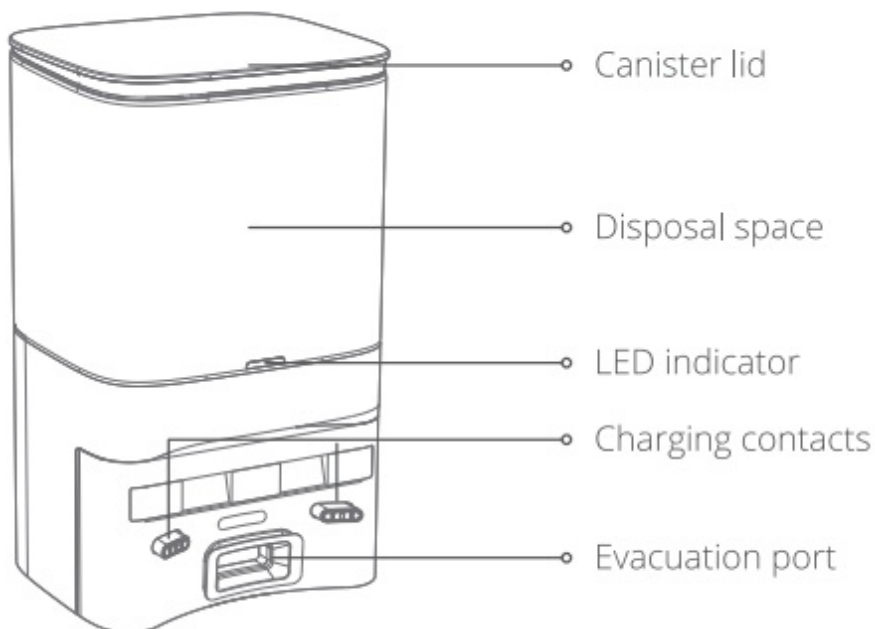 

Dirt Disposal Base

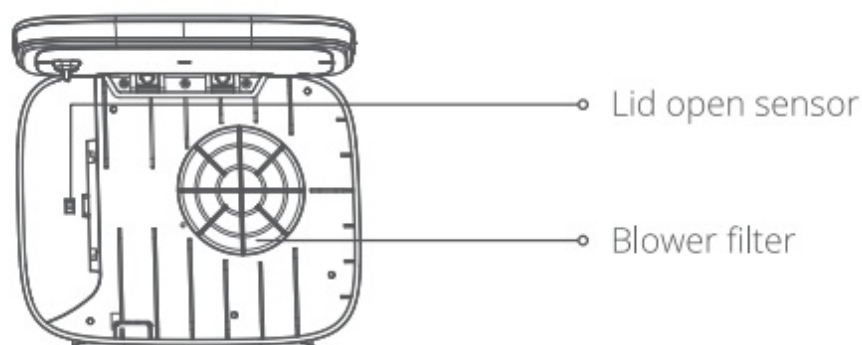 

Front View



Top View

 
-  The climbing ability may be affected after the water tank is fulfilled.
-  Do not put detergent, disinfectants, perfume, or other chemicals in the water tank.

Installation Instructions

1. Place the dirt disposal base on the horizontal hard floor and connect the power supply.

Notes:


- Organize the extra cable to prevent it from being stretched by the robot while cleaning.
- Leave 1 m (3.3 ft) on both sides and 1.5 m (4.9 ft) in the front of the base, and make sure there are no objects or strong light within this area.
- Ensure the dirt disposal base is placed at least 1.5 m (4.9 ft) away from stairs, other open areas, and heat sources (such as heaters).
- Do not put the dirt disposal base on carpets or move it frequently. If the base is moved, the robot may fail to locate itself or remove the current map. In this case, the map information (no-go zones, room names, etc.) may be lost. The robot will create and save a new map during the next cleaning.

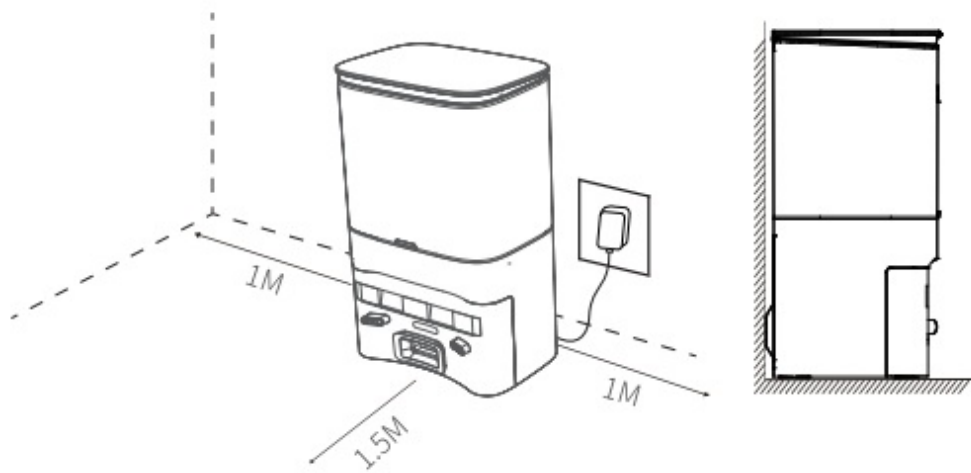


2. Lift up on the canister lid to open it and slide the dust bag card into the guide rails. Press down on the lid to close it.

Notes:

 - After powering on, the indicator light will be solid white to indicate that the dust bag is in place.
- Do not use damaged dust bags, as this will cause damage to the dirt disposal base fan.

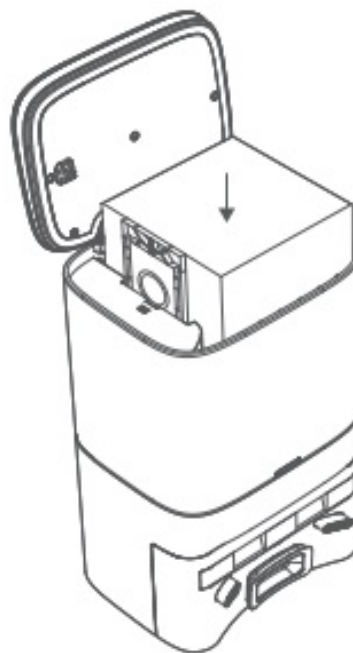

 3. Put the Robot on the floor and remove both protective strips behind the bumper.

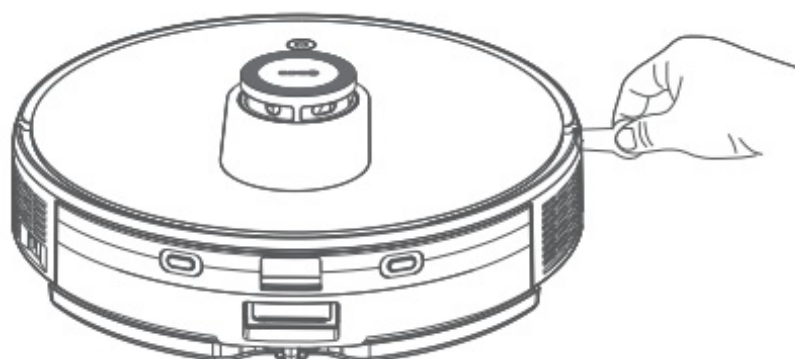

4. Power on and charge.

Turn the main switch on the left side of the robot to “I”.


Method 1: Press and hold the  button for 3 seconds to turn on the Robot.

Method 2: Attach the robot to the dirt disposal base and align its charging contacts. The power indicator on the charging dock turns off and the robot will automatically power on and start charging.

Notes:


- Clean the charging contacts on the dirt disposal base and the robot periodically.
- The robot cannot be turned on when the battery is insufficient, and it will automatically turn on when it starts charging.
- Maintain power to the dirt disposal base.
- If the robot does not start cleaning from the dirt disposal base, it may need more time to dock. If the base cannot be reached, the Robot will return to the start location after cleaning.

 5. If the room to be cleaned contains a suspended area (balcony, stairs, etc.), a physical barrier should be used to prevent access to this area and ensure safe operation. Meanwhile, creating no-go zones or no-go lines for this area on the App is highly recommended.

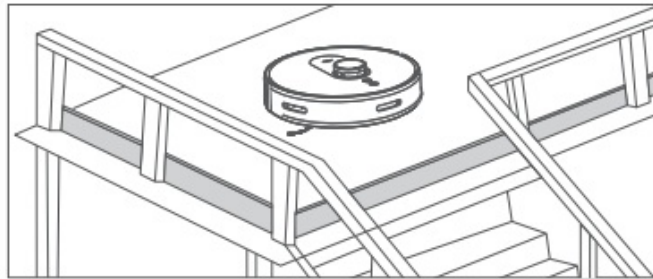

6. Download the mobile phone App

 Method 1: Search for “Botslab” in Google Play or App Store and download it.

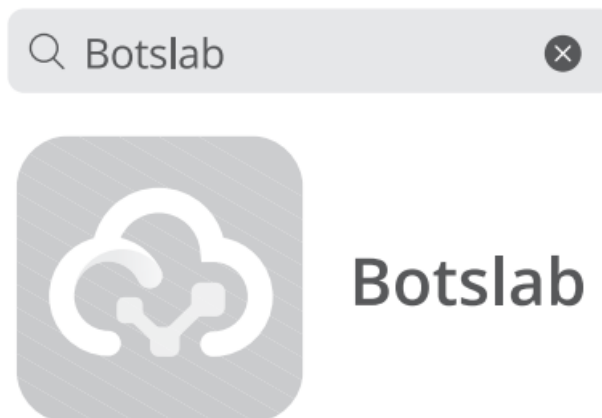

Method 2: Scan the QR code below by using a mobile phone camera or any QR code scanner App to download the Botslab App.



<https://www.botslab.com/superappdownload.html>

7. Add your Robot to the App

- Please refer to the network configuration instruction in the box to let the App find your Robot.
- Then follow the instructions on the App step by step to bind the Robot to your account.

 
Note:

- Please check out further operation instructions on the App and do not hesitate to contact us if you have any questions or comments.

Indicator Status


Robot

- Solid Blue: The robot is fully charged or cleaned properly;
- Breathing Blue: The robot is charging;
- Blinking Blue: The robot is pairing
- Solid Red: Low power;
- Blinking Red: The robot ran out of power.

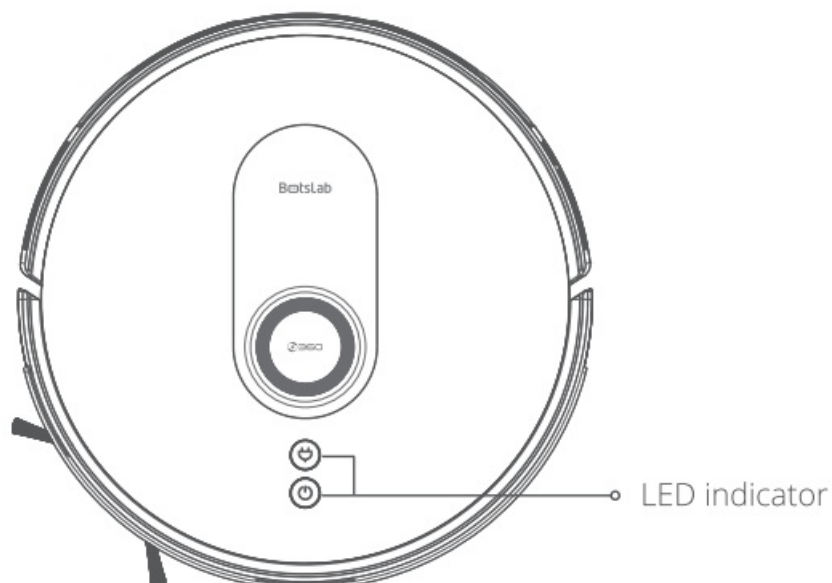

Dirt Disposal Base

 - Solid White: The base is powered on, and the robot is not on the base;
- Turns Off: The robot is charging;
- Blinking White: The robot docked successfully, or the base starts/finishes dirt disposal;
- Solid Red: The disposal bag or canister lid is not in place;
- Blinking Red: Dirt disposal error or improper operation.

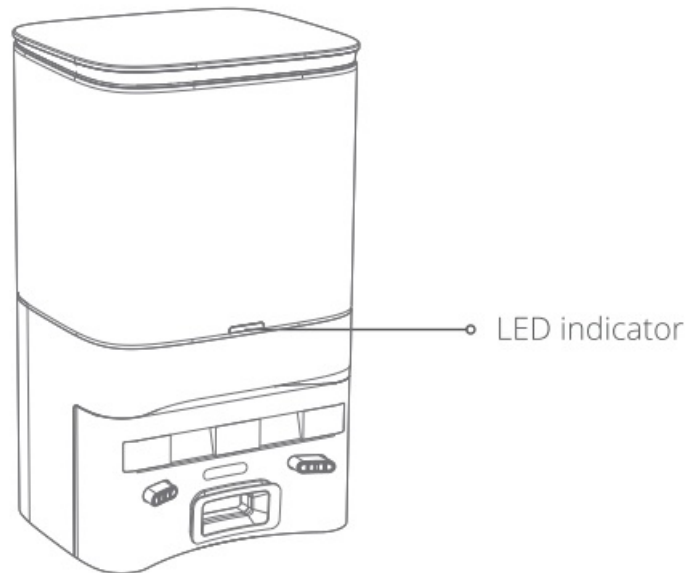

i When the robot cleaning time is longer than 5 minutes and the automatic recharging is successful, the base will automatically start a dirt collection.

After-sales Service

Warranty Content

Name	Warranty Content	Warranty Period
Main unit	Robot (includes built-in battery)	1 year
Accessories	Dirt disposal base	1 year
Consumables	Brush roll, side brush, brush frame, filter, dust bin & water tank set, mop bracket, mop pad, dust bag, small cleaning tool	/

i Warranty may vary between countries, please refer to the local laws and seller's information.

Exclusions and Limitations

1. The product is repaired without permission, wrongly used, crashed, neglected, misused, gotten wet, or damaged in an accident, modified, or unauthorized accessories are used.
2. The warranty period expires.
3. Damage is caused by force majeure.
4. Defects of products and accessories caused by the owner or user.

Contact Us

Official site: www.botslab.com

Customer service: service@botslab.com



@Botslabofficial

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.
2. any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

EU DECLARATION OF CONFORMITY

Apparatus/Equipment

Product: Botslab Robot Vacuum Cleaner

Model: S8 Plus

Supplied Accessories: Dirt disposal base, Power adaptor, and plugs

Manufacturer

Name BOTSLAB INC.

Address: 919 North Market St., Suite 950, Wilmington, New Castle, U.S., Zip code: 19801

This declaration of conformity is issued under the sole responsibility of the manufacturer.

The object of the declaration described above is in conformity with the following relevant Union harmonization directives and/or legislation(s):

Radio Equipment Directive (RED)	2014/53/EU	<input checked="" type="checkbox"/>
Low Voltage Directive (LVD)	2014/35/EU	<input type="checkbox"/>
Electromagnetic Compatibility Directive (EMCD)	2014/30/EU	<input type="checkbox"/>
Restriction of the use of certain hazardous substances (RoHS)	2011/65/EU	<input checked="" type="checkbox"/>
Ecodesign Requirements for energy-related products (ErP)	2009/125/EC	<input type="checkbox"/>

References to the relevant standards used, including the date of the standard, or references to the other technical specifications, including the date of the specification, in relation to which conformity is declared:

2011/65/EU: IEC 62321-5:2013; IEC 62321-6:2015; IEC 62321-7-1:2015; IEC 62321-8:2017

The 2.4 GHz band is limited to operate between 2412 MHz – 2472 MHz with a maximum EIRP output power of 20 dBm at 2412 MHz.

2014/53/EU:

Article 3.1a: EN 60335-1:2012+A11:2014+A13:2017; EN 60335-2-2:2010+AI 1:2012+A1:2013; EN 62233:2008; EN IEC 62311:2020; EN50665:2017

Article 3.1 b: ETSI EN 301 489 -17 V3.2.4(2020-09); EN IEC 55014-1:2021; EN IEC 55014-2:2021

Article 3.2: EN 300328 V2.2.2(2019-07)

Signed for and on behalf of BOTSLAB INC.

Place and date of issue: 919 North Market St., Suite 950, Wilmington, New Castle, U.S., Zip code: 19801

Signature: Hao Tianguang


Name, function: Hao Tianguang Certification Manager Date:2021/09/30

If you have questions or comments about your Robot, please do not hesitate to contact us:

Customer service email: service@botslab.com

Or reach us via Facebook group: @botslabofficial

Documents / Resources

	<p>Botslab S8 Plus NaviClean Robot Vacuum Cleaner [pdf] User Manual</p> <p>S8 Plus, NaviClean Robot Vacuum Cleaner, S8 Plus NaviClean Robot Vacuum Cleaner, Robot Vacuum Cleaner, Vacuum Cleaner, Cleaner</p>
---	--