



bouncepad BP-COR-FS-B Core Floorstan Ding Installation Guide

[Home](#) » [bouncepad](#) » bouncepad BP-COR-FS-B Core Floorstan Ding Installation Guide 

Contents

- [1 bouncepad BP-COR-FS-B Core Floorstan Ding](#)
- [2 Product Usage Instructions:](#)
- [3 Assembly Instructions](#)
- [4 In the Box](#)
- [5 Fixings List](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

bouncepad®

bouncepad BP-COR-FS-B Core Floorstan Ding



Specifications

- Maximum Mounting Surface Thickness: 25mm
- Compatible with Anker PowerCore 10000mAh battery pack (batterypack not provided)

Product Usage Instructions:

Assembly Instructions

1. Use the provided tools: Socket Driver, 10mm Spanner or adjustable spanner for assembly.
2. Assemble the Floorstanding Pole to the Floorstanding Base securely with the fixings provided.
3. Attach the Shell to the Floorstanding in the correct orientation (landscape or portrait).
4. Clean the tablet with the provided wipe before attaching the Mounting Plate.
5. Attach the Mounting Plate to the tablet's back, ensuring it is level and centered.
6. Secure the Flat Cable to the tablet and Mounting Plate using the Cable Clamp.
7. Feed the Flat Cable through the assembly and secure the tablet to the Shell.
8. Connect the tablet's power cable to its mains power source. If using a battery pack, connect it and place it in the Floorstanding Base.
9. Fit the Floorstanding Rubber Collar to complete the installation.

FAQ

• Q: Can I use an alternative battery pack?


A: The product is designed to support the Anker PowerCore 10000mAh battery pack. Other packs have not been tested for compatibility.

- **Q: What should I do if I receive additional fixings in the kit?**

A: Due to the modular nature of our product range, extra fixings may be included. Contact customer support if you are unsure about their use.

Core Floorstanding

Assembly Instructions

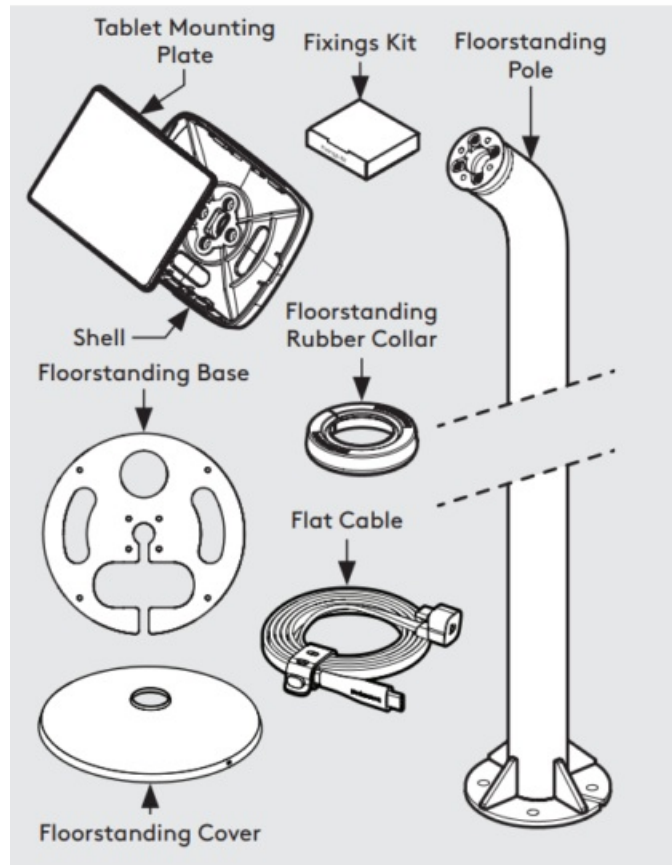


Tools Required

- **Socket Driver**
- **10mm** Spanner *or adjustable spanner
- **Sheet** Code: BP-IM-092_REV0
- **Release** Date: 15/08/2024

Copyright 2024 Spotspot Ltd. (T/A Bouncepad) all rights reserved. Confidential, no part of this publication may be reproduced or transmitted in any form without the written permission of the copyright holder.




In the Box

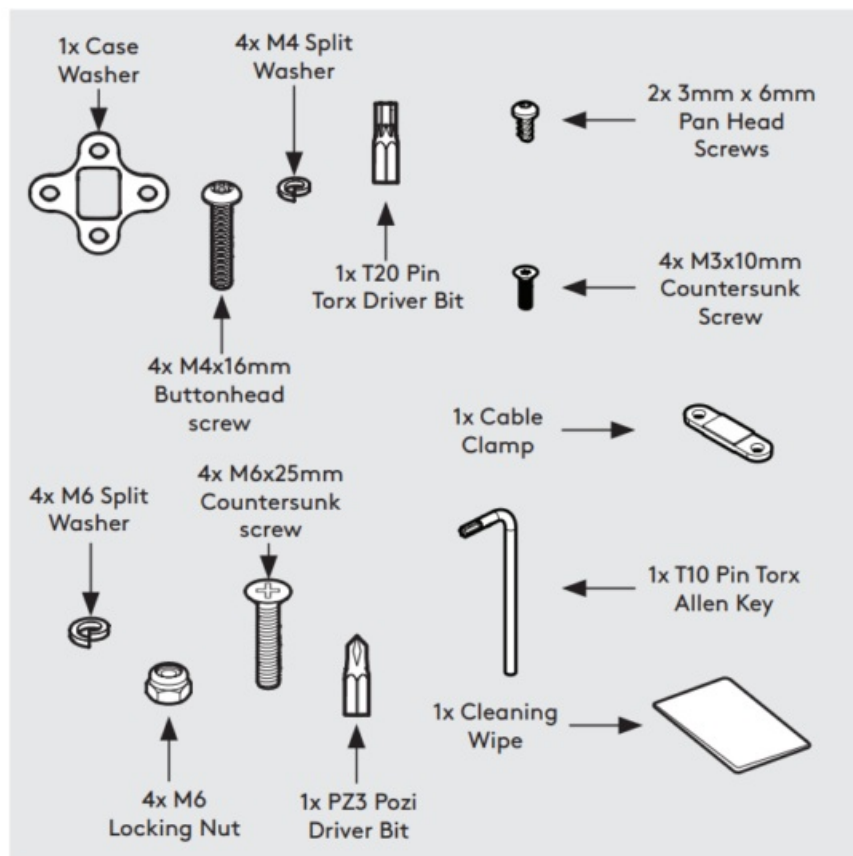


Fixings List

* Due to the modular nature of our product range you may receive additional fixings in the fixings kit

1. Orientate, locate & secure the Floorstanding Pole to the Floorstanding Base as shown. Ensure that all fixings are installed correctly.

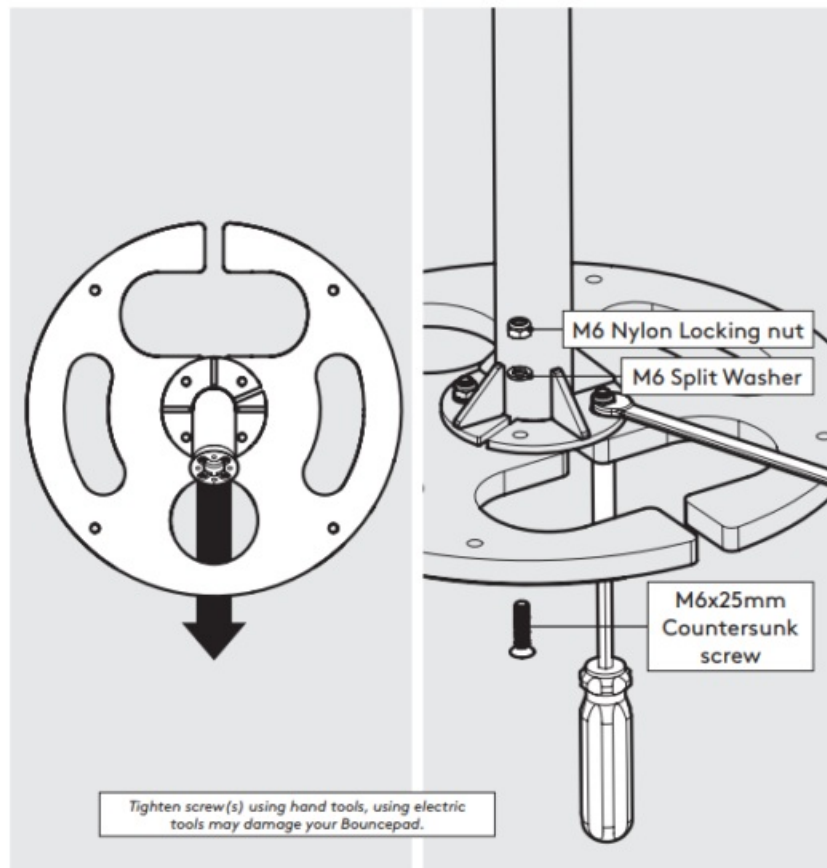


2. Locate the Floorstanding Cover over the Floorstanding Pole.
3. Locate & attach the Shell to the Floorstanding in the correct orientation.
- 4.

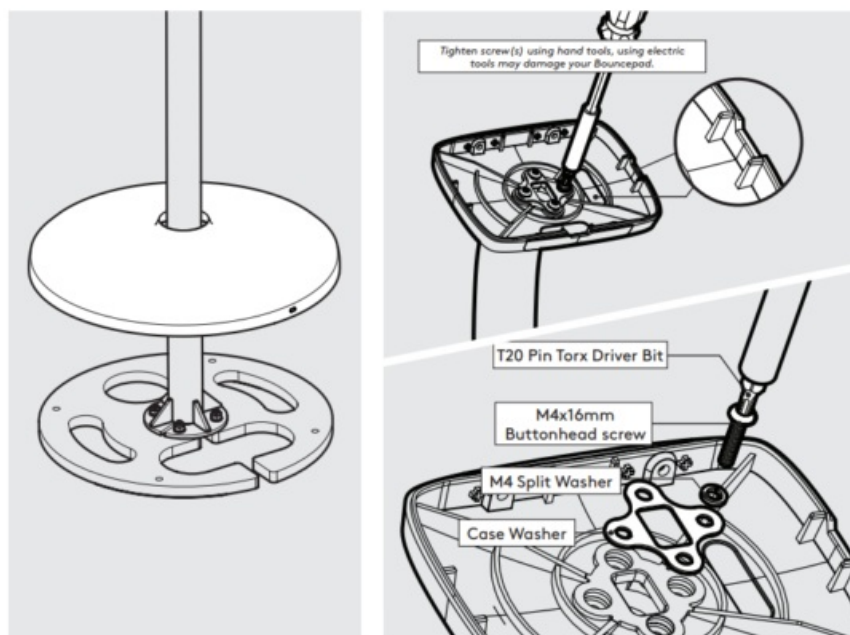

Remove the Mounting Plate adhesive backing. Attach level & centrally to the Tablet back as shown.


- 5.

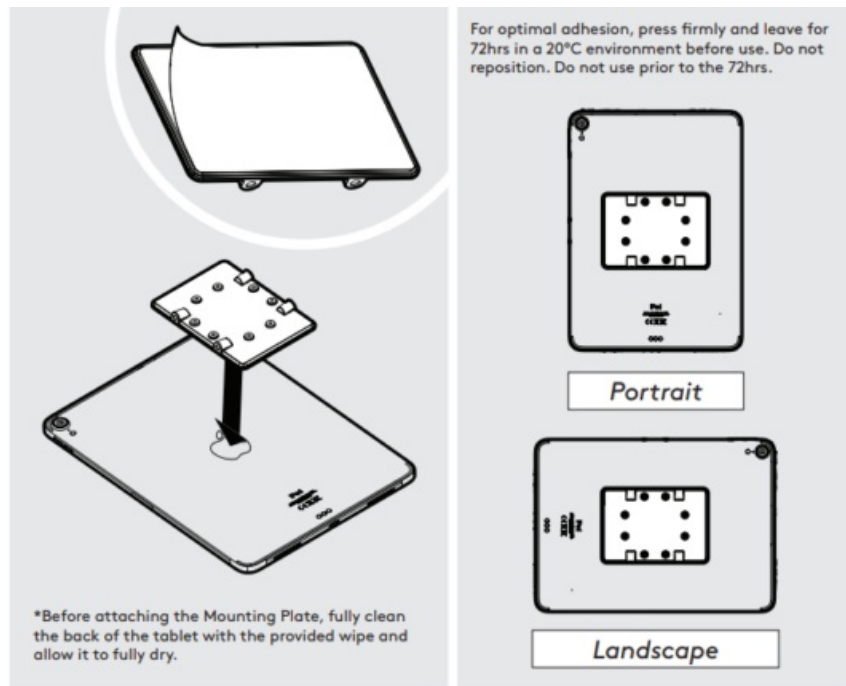

Attach the Flat Cable to the Tablet with the U-Bend Head.


6. Secure the Flat Cable to the Mounting Plate with the Cable Clamp as shown.

7.

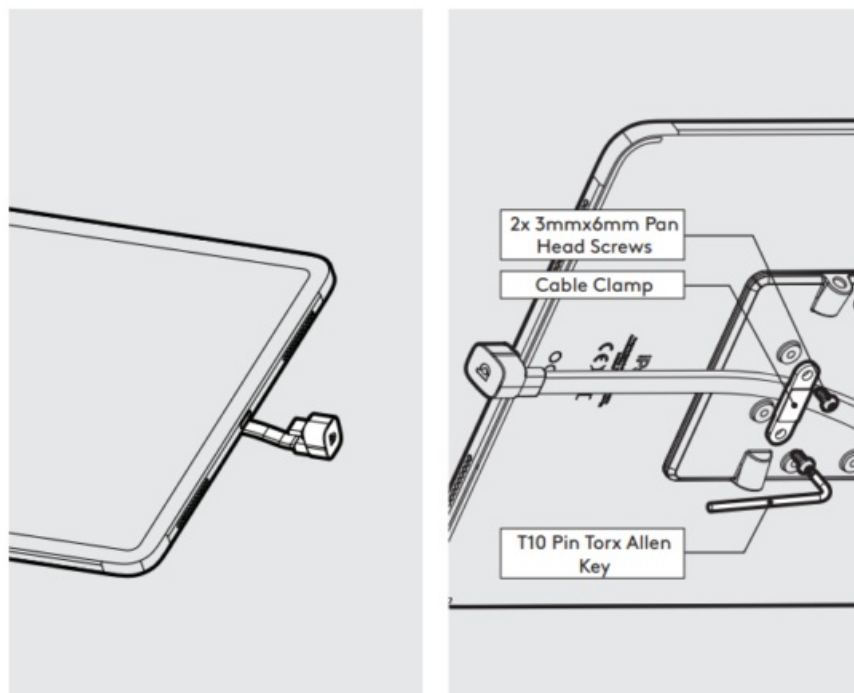


Remove the Fixing Covers. Feed the Flat Cable into the assembly & locate the Tablet in the chosen orientation.

8.

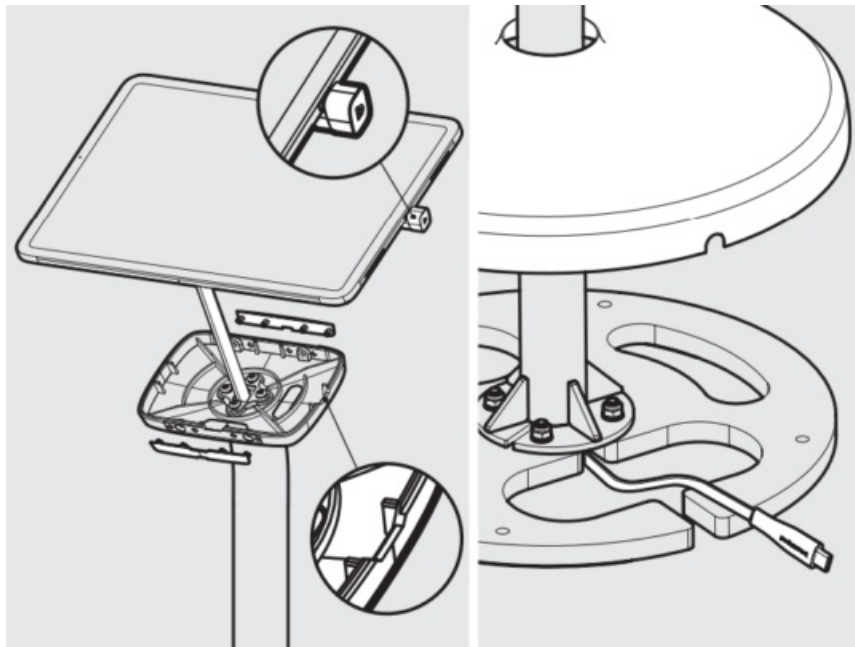


Secure the Tablet to the Shell & attach the Fixing Covers as shown.


9. 1. Connect the tablet power cable to its mains power source.

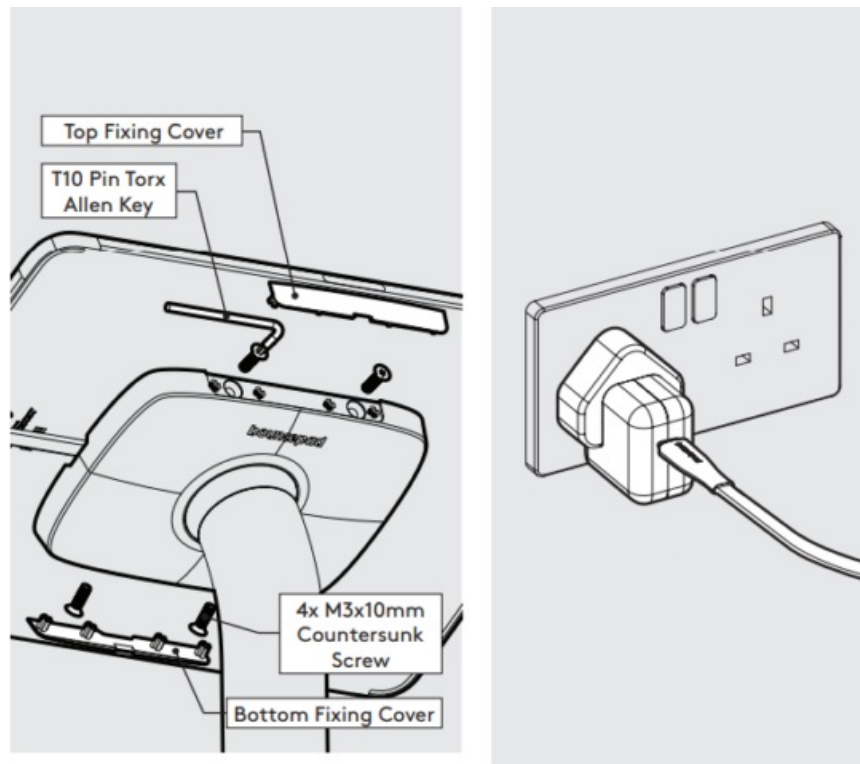


2. If installing a battery pack, connect the Tablet Cable and locate the pack into the Floorstanding Base.

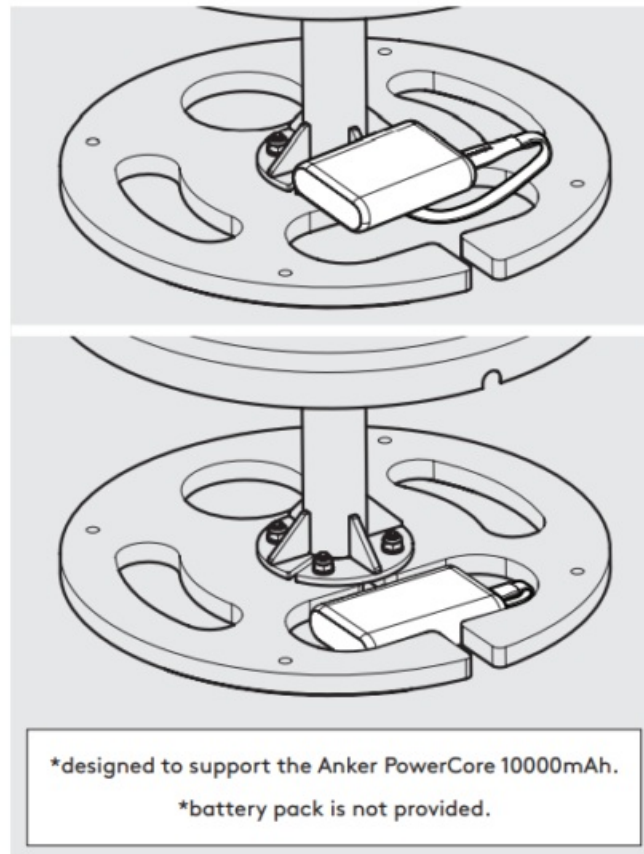


10. With the Floorstanding Cover on the ground, locate & fit the Floorstanding Rubber Collar.

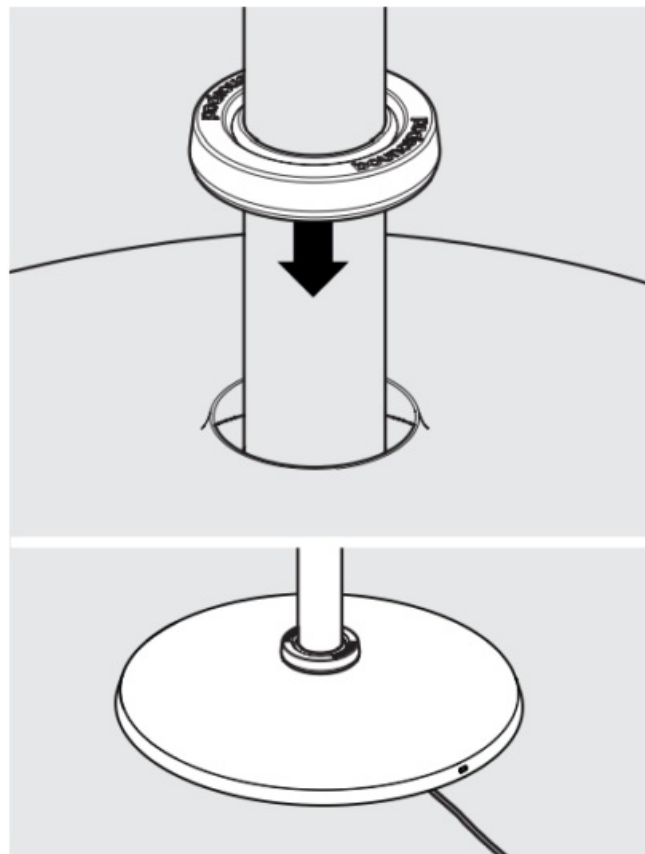


11. Use a Kensington® Microsaver product to tether to a secure object. (refer to your Kensington® instructions for full details)

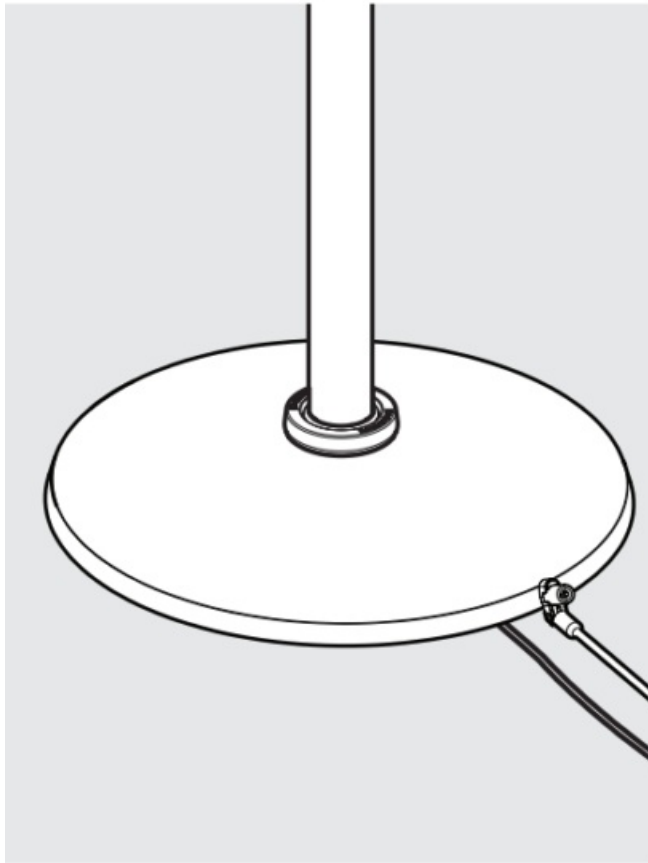

12. Installation is now complete.

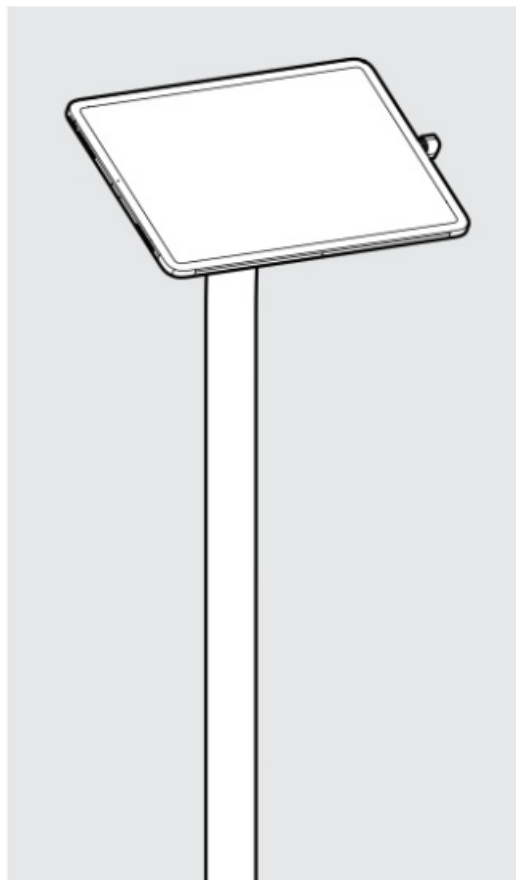

Documents / Resources

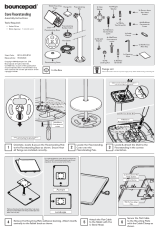

[bouncepad BP-COR-FS-B Core Floorstan Ding](#) [pdf] Installation Guide
BP-COR-FS-B, BP-COR-FS-W, BP-COR-FS-B Core Floorstan Ding, BP-COR-FS-B, Core Floors
tan Ding, Floorstan Ding, Ding

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.