



BRAUN BC03 Alarm Clock User Manual

[Home](#) » [Braun](#) » BRAUN BC03 Alarm Clock User Manual 


BRAUN

BC03
Alarm clock
User instructions
Guarantee

Contents

- [1 BC03 Alarm Clock](#)
- [2 Battery precautions](#)
- [3 Battery installation](#)
- [4 Time setting](#)
- [5 Alarm function](#)
- [6 Snooze function](#)
- [7 Light function](#)
- [8 Guarantee](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

BC03 Alarm Clock

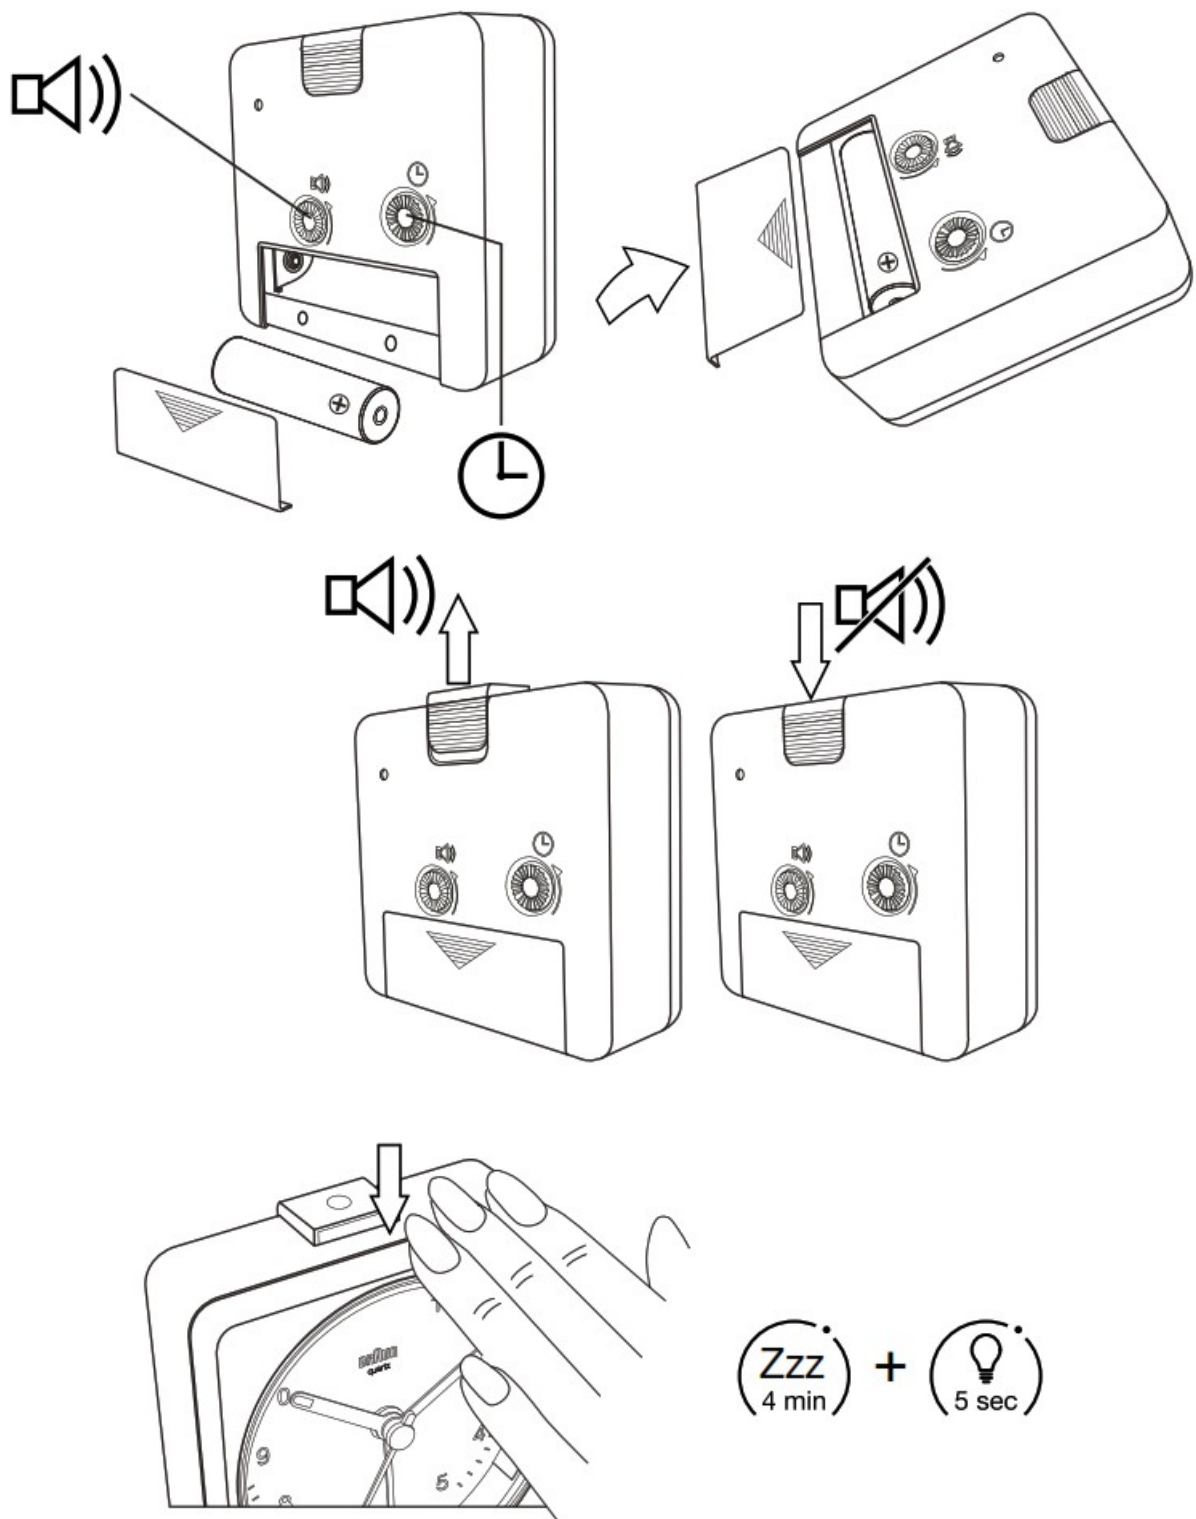

Battery precautions

1. Do not use rechargeable batteries.
2. Use only alkaline AA batteries of the same or equivalent type.
3. Insert batteries with the correct polarity
4. Keep batteries away from children.
5. Dispose of exhausted batteries according to local legal requirements. Do not dispose them by throwing away with normal household rubbish.
6. Avoid short circuiting the contacts in the battery compartment and battery terminals.
7. Remove batteries from the unit if it will not be used for a long period of time.
8. Exhausted batteries should be removed from the battery compartment to prevent over-discharging, which can

cause leakage and may cause damage to the clock.

Battery installation

1. Insert 1xAA (1.5V) battery observing the correct polarity, as shown on the diagram.
2. Replace battery cover.

Time setting

Turn the TIME SET knob on the back of the clock in the direction of the arrow until correct time is shown. Only turn in the direction of the arrow to avoid damaging the movement. Alarm setting Turn the ALARM SET knob on the back of the clock in the direction of the arrow until the desired alarm time is shown. Only turn in the direction of the arrow to avoid damaging the movement.

Alarm function

To set the alarm, pull the button up via the back of the clock so that the green alarm bar is showing. To unset the alarm, push the button at the top of the clock so that the green alarm bar is not showing.

Snooze function

When the alarm is sounding, press down on the main body of the clock and the SNOOZE/LIGHT button at the base will be activated.

The alarm will be stopped and will sound again in ~4 minutes.

Light function

Anytime, press down on the main body of the clock and the integrated foot SNOOZE/LIGHT button at the base will be activated. The dial will be illuminated for ~5 seconds.

Guarantee

2 year guarantee against material and workmanship defects (except battery). The guarantee is valid in those countries where the alarm clock is officially being sold.

Broken or cracked lens screens are not covered under the Guarantee.



Braun helpline

Should you have a problem with your product, please check your local service centre at:

www.braun-clocks.com

www.braun-watches.com

 
or contact +44 808 175 3235 (calls free within the UK)

or +44 208 208 1833.



WARNING! This product is covered by the Waste Electrical and Electronic Equipment (WEEE) directive. It should not be discarded with normal household waste but taken to your local collection centre for recycling. This product conforms to the EMC requirements as per council directive 2014/30/EU. Certain trademarks used under license from the Procter & Gamble Company or its affiliates.

Documents / Resources

	<p>BRAUN BC03 Alarm Clock [pdf] User Manual BC03 Alarm Clock, BC03, Alarm Clock, Clock</p>
---	--

References

-  [Braun-Clocks: Braun Shop online | Buy Braun Clocks & Watches](#)