



BRAUN BC08 Alarm Clock User Manual

[Home](#) » [Braun](#) » BRAUN BC08 Alarm Clock User Manual 

Contents

- [1 BRAUN BC08 Alarm Clock](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Battery precautions](#)
- [5 Getting started](#)
- [6 Function keys](#)
- [7 Product description \(Image 1\)](#)
- [8 Display details \(Image 2\)](#)
- [9 Setting the time](#)
- [10 Guarantee](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

BRAUN

BRAUN BC08 Alarm Clock



Product Information

The product is a clock that requires a single AAA size battery for operation. It has a battery compartment with a battery door that needs to be opened to insert the battery. The clock has a reset key that can be pressed with a pin to reset all values to default in case of a malfunction. The display turns on after a few seconds of inserting the battery. The product is compliant with the Waste Electrical and Electronic Equipment (WEEE) directive and should be taken to a local collection center for recycling.

Product Usage Instructions

1. Getting started:

1. Remove the battery door.
2. Insert 1xAAA size new battery into the battery compartment, following the indicated orientation.
3. Press the reset key with a pin to reset the clock.
4. The display will turn on after a few seconds.
5. Close the battery door.

2. Function keys:

- **TIME SETTING / NEUTRAL / ALARM SETTING switch:** This switch is used to toggle between different functions of the clock. Refer to the user manual for detailed instructions on each function.
- **RESET key:** Press this key with a pin to reset all values to default. Use this in case of a malfunction.

If you encounter any problems with the product, please check your local service center at www.braun-clocks.com or www.braun-watches.com. Alternatively, you can contact the Braun helpline at +44 808 175 3235 (calls free within the UK) or +44 208 208 1833.

NOTE: The above information is provided in English. For information and instructions in German, please refer to the corresponding section in the user manual.

Battery precautions



1. Do not use rechargeable batteries.
2. Use only alkaline AAA batteries of the same or equivalent type.
3. Insert batteries with the correct polarity.
4. Keep batteries away from children.
5. Dispose of exhausted batteries according to local legal requirements. Do not dispose them by throwing away with normal household rubbish.
6. Avoid short circuiting the contacts in the battery compartment and battery terminals.
7. Remove batteries from the unit if it will not be used for long period of time.
8. Exhausted batteries should be removed from the battery compartment to prevent over-discharge, which can cause leakage and may cause damage to the clock.

Getting started

1. Remove the battery door.
2. Insert 1xAAA size new battery as indicated in the battery compartment, and press the “reset” key to reset the clock. The display will turn on after a few seconds.
3. Close the battery door.

Function keys

TIME SETTING / NEUTRAL / ALARM SETTING switch

- Slide the switch to the TIME SETTING position  to set the clock time.
- Slide the switch to the ALARM SETTING position  to set the alarm time.
- Slide the switch to the NEUTRAL position to exit the setting mode and return to normal display.

+ Key

- When the setting switch is in the NEUTRAL position, press the + key to change between 12 and 24 hour display format.
- In TIME SETTING or ALARM SETTING mode press to increase the setting value. Press and hold to speed up the setting.

– Key

- In TIME SETTING or ALARM SETTING mode press to decrease the setting value. Press and hold to speed up the setting. ALARM ON / OFF slider – Shift the ALARM ON / OFF slider up to enable the alarm.
- Shift the ALARM ON / OFF slider down to disable the alarm.


SNOOZE / LIGHT touch button

- Tap to turn on the backlight for 10 seconds.
- Tap to stop the alarm and activate the 5 minute snooze function.

RESET key

- Press by using a pin to reset all values to default. In case of a malfunction, the unit has to be reset.


Product description (Image 1)

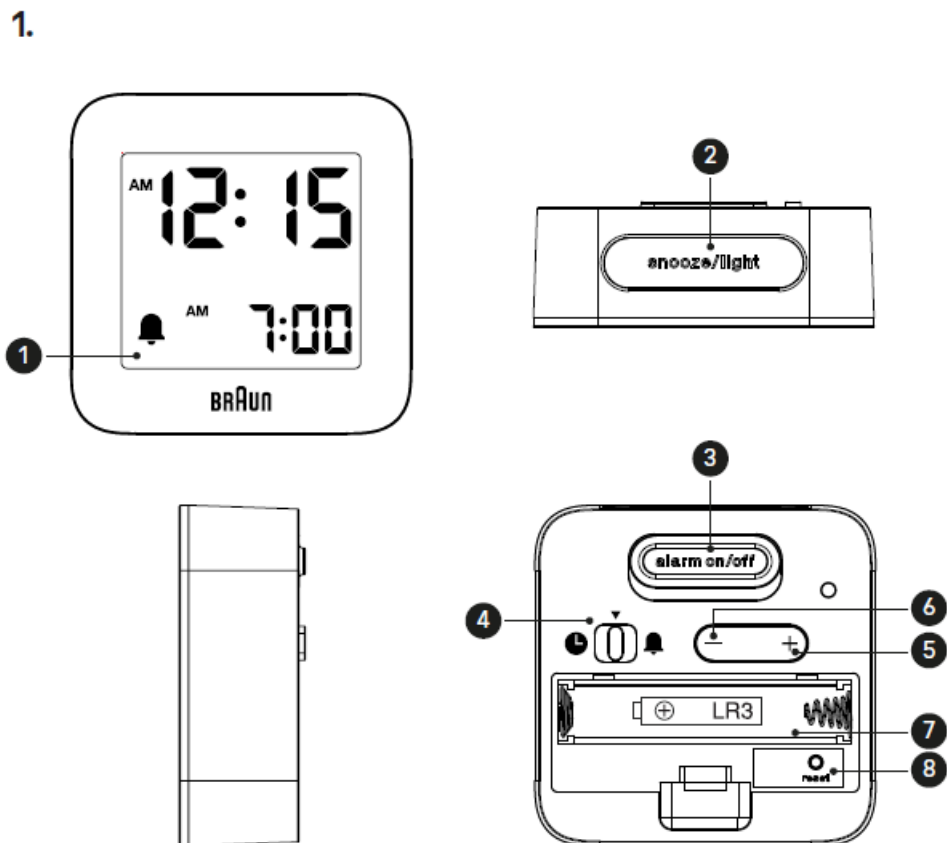

1. LCD display
2. SNOOZE / LIGHT touch button
3. ALARM ON / OFF slider
4. TIME SETTING / NEUTRAL / ALARM SETTING switch
5. + Key
6. – Key
7. Battery compartment
8. RESET key


Display details (Image 2)

2.

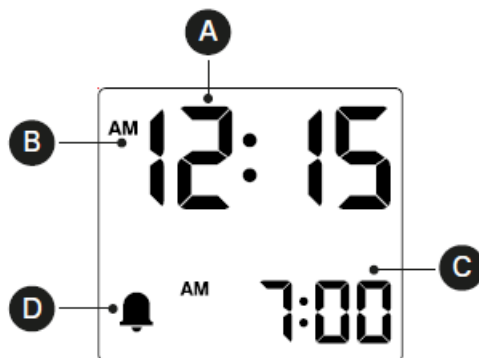


- A. Time
- B. AM / PM indicator (for 12 hour format)
- C. Alarm time
- D. Alarm icon




Setting the time

1. Slide the TIME SETTING / NEUTRAL / ALARM SETTING switch to the TIME SETTING position .
2. Press the '+' or '-' key to set the desired value. Press and hold the '+' or '-' key to speed up the setting.
3. Slide the TIME SETTING / NEUTRAL / ALARM SETTING switch to the NEUTRAL position to return the normal display and save the settings.

Setting the alarm

1. Slide the TIME SETTING / NEUTRAL / ALARM SETTING switch to the ALARM SETTING position .
2. Press the '+' or '-' key to set the desired value. Press and hold the '+' or '-' key to speed up the setting.
3. Slide the TIME SETTING / NEUTRAL / ALARM SETTING switch to the NEUTRAL position to return the normal display and save the settings.

Using the alarm and snooze function

1. Enable the alarm by shifting the ALARM ON / OFF slider up (so the green detail is visible). The bell icon  will appear on the LCD display.
2. Tap the SNOOZE / LIGHT touch button to stop the alarm and activate the snooze function. When the snooze function is activated, the bell icon  will flash.
3. To disable the alarm and snooze function, shift the ALARM ON / OFF slider down. The bell icon  will disappear.

Note: When the snooze function is activated, the alarm will automatically start again after 5 minutes. The snooze function will not stop unless the ALARM ON / OFF SLIDER is shifted down.

Battery replacement

When the LCD becomes dim, replace with a new battery at once.

Note: Exposure to an electrostatic environment may cause the clock to reset. In this event please follow the instructions as described in this manual to set the clock again.

Guarantee

2 year guarantee against material and workmanship defects (except battery). The guarantee is valid in those countries where the alarm clock is officially being sold.

Broken or cracked lens screen is not covered under the Guarantee.

Braun helpline

Should you have a problem with your product, please check your local service centre at: www.braun-clocks.com
www.braun-watches.com

or contact +44 808 175 3235 (calls free within the UK)


or +44 208 208 1833.

WARNING! This product is covered by the Waste Electrical and Electronic Equipment (WEEE) directive. It should not be discarded with normal household waste but taken to your local collection centre for recycling.

This product conforms to the EMC requirements as per council directive 2014/30/EU.

Certain trademarks used under license from the Procter & Gamble Company or its affiliates.

Documents / Resources

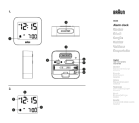	BRAUN BC08 Alarm Clock [pdf] User Manual BC08 Alarm Clock, BC08, Alarm Clock, Clock
---	--

References

-  [Braun-Clocks: Braun Shop online | Buy Braun Clocks & Watches](#)