



BRAUN BC12 Alarm Clock Instruction Manual

[Home](#) » [Braun](#) » BRAUN BC12 Alarm Clock Instruction Manual 

Contents

- [1 BRAUN BC12 Alarm Clock](#)
- [2 Product Usage Instructions](#)
- [3 User instructions](#)
- [Guarantee](#)
- [4 Battery precautions](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

BRAUN

BRAUN BC12 Alarm Clock



Product Information

The Zzz + BC12 is an alarm clock manufactured by Braun. It features a light function that can be activated by pressing down on the main body of the clock. The integrated foot SNOOZE/LIGHT button at the base will illuminate the dial for approximately 5 seconds.

The clock comes with a 2-year guarantee against material and workmanship defects, excluding the battery. The guarantee is valid in countries where the alarm clock is officially sold. Please note that broken or cracked lens screens are not covered under the guarantee.

If you encounter any issues with the product, you can contact the Braun helpline or check your local service center. The helpline can be reached at +44 808 175 3235 (calls free within the UK) or +44 208 208 1833. Additionally, you can visit the websites www.braun-clocks.com or www.braunwatches.com for further assistance.

It is important to note that this product is covered by the Waste Electrical and Electronic Equipment (WEEE) directive.

Therefore, it should not be discarded with normal household waste.

Instead, it should be taken to a local collection center for recycling. The product also conforms to the EMC requirements as per council directive 2014/30/EU.

Certain trademarks used in association with this product are licensed from The Procter & Gamble Company or its affiliates.

Product Usage Instructions

To activate the light function, press down on the main body of the clock. The integrated foot SNOOZE/LIGHT button at the base will be activated, illuminating the dial for approximately 5 seconds.

If you experience any problems with your product, please check your local service center at www.braun-clocks.com or www.braun-watches.com. Alternatively, you can contact the Braun helpline at +44 808 175 3235

Remember not to discard this product with normal household waste. Instead, take it to a local collection center for recycling in accordance with the Waste Electrical and Electronic Equipment (WEEE) directive. The product complies with the EMC requirements of council directive 2014/30/EU.

The diagram illustrates the assembly and initial setup of the alarm clock. It shows the back of the clock where the battery is inserted into the compartment. The top cover is then attached to the back. The clock face is shown with the alarm time set to 5 minutes and 5 seconds, indicated by the 'Zzz' icon and the light bulb icon.

1. Do not use rechargeable batteries.
2. Use only alkaline AAA batteries of the same or equivalent type.
3. Insert batteries with the correct polarity
4. Keep batteries away from children.
5. Dispose of exhausted batteries according to local legal requirements. Do not dispose of them by throwing away with normal household rubbish.
6. Avoid short circuiting the contacts in the battery compartment and battery terminals.

7. Remove batteries from the unit if it will not be used for a long period of time.
8. Exhausted batteries should be removed from the battery compartment to prevent over-discharging, which can cause leakage and may cause damage to the clock.

Battery installation

1. Insert 1xAAA (1.5V) battery observing the correct polarity, as shown on the diagram.
2. Replace battery cover.

Time setting

Turn the TIME SET knob on the back of the clock in the direction of the arrow until correct time is shown. Only turn in the direction of the arrow to avoid damaging the movement.

Alarm setting

Turn the ALARM SET knob on the back of the clock in the direction of the arrow until the desired alarm time is shown. Only turn in the direction of the arrow to avoid damaging the movement.

Alarm function

To set the alarm, push the button at the top of the clock so that the green alarm bar is showing. To unset the alarm, push the button at the top of the clock so that the green alarm bar is not showing.

Snooze function

When the alarm is sounding, press down on the main body of the clock and the SNOOZE/LIGHT button at the base will be activated.

The alarm will be stopped and will sound again in ~5 minutes.

Light function

Anytime, press down on the main body of the clock and the integrated foot SNOOZE/LIGHT button at the base will be activated. The dial will be illuminated for ~5 seconds.

Guarantee

2 year guarantee against material and workmanship defects (except battery). The guarantee is valid in those countries where the alarm clock is officially being sold.

Broken or cracked lens screens are not covered under the Guarantee.

Braun helpline


Should you have a problem with your product, please check your local service centre at: www.braun-clocks.com www.braun-watches.com or contact +44 808 175 3235 (calls free within the UK) or +44 208 208 1833.

WARNING! This product is covered by the Waste Electrical and Electronic Equipment (WEEE) directive. It should not be discarded with normal household waste but taken to your local collection centre for recycling.

This product conforms to the EMC requirements as per council directive 2014/30/EU.

Certain trademarks used under license from the Procter & Gamble Company or its affiliates.

Documents / Resources

| | |
|---|--|
|  | BRAUN BC12 Alarm Clock [pdf] Instruction Manual BC12, BC12 Alarm Clock, Alarm Clock, Clock |
|---|--|

References

-  [Emit Collection | Buy Online Watches & Accessories Store](#)

Manuals+.