



BRAUN BC24 Alarm Clock Instruction Manual

[Home](#) » [Braun](#) » BRAUN BC24 Alarm Clock Instruction Manual 

Contents

- [1 BRAUN BC24 Alarm Clock](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Battery precautions](#)
- [5 Getting started](#)
- [6 Function keys](#)
- [7 Product description \(Image 1\)](#)
- [8 Using the alarm and snooze function](#)
- [9 Guarantee](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

BRAUN

BRAUN BC24 Alarm Clock



Product Information

- **Product Name:** Clock BC24
- **Languages:** English, Deutsch, Italiano, Nederlands
- **Guarantee:** 2 years against material and workmanship defects (except battery)
- **Manufacturer:** Braun
- **Manufacturer's Helpline:** +44 808 175 3235 (UK), +44 208 208 1833

Product Usage Instructions

Getting started:

1. Remove the battery door.
2. Insert 1x AA size new battery as indicated in the battery compartment.
3. Press the RESET key to reset the clock. The display will turn on after a few seconds.
4. Only use alkaline batteries from a reputable brand.
5. Close the battery door.

Function keys:

TIME SETTING touch key:

- Touch the clock icon to turn on the backlight for 10 seconds.
- Touch the clock icon to stop the alarm and activate the 5-minute snooze function.
- Touch and hold the clock icon for 2 seconds to set the clock time.

ALARM SETTING touch key:

- Touch the alarm icon to turn on the backlight for 10 seconds.
- Touch the alarm icon to stop the alarm and activate the 5-minute snooze function.
- Touch and hold the alarm icon for 2 seconds to set the alarm time.

Note: Broken or cracked lens screens are not covered under the guarantee.

WARNING! This product is covered by the Waste Electrical and Electronic Equipment (WEEE) directive. It should not be discarded with normal household waste but taken to your local collection center for recycling. This product conforms to the EMC requirements as per council directive 2014/30/EU. Certain trademarks used under license from the Procter & Gamble Company or its affiliates.

Battery precautions

1. Do not use rechargeable batteries.
2. Use only alkaline AA batteries of the same or equivalent type.
3. Insert batteries with the correct polarity.
4. Keep batteries away from children.
5. Dispose of exhausted batteries according to local legal requirements. Do not dispose them by throwing away with normal household rubbish.
6. Avoid short circuiting the contacts in the battery compartment and battery terminals.
7. Remove batteries from the unit if it will not be used for long period of time.
8. Exhausted batteries should be removed from the battery compartment to prevent over-discharge, which can cause leakage and may cause damage to the clock.

Getting started

1. Remove the battery door.
2. Insert 1x AA size new battery as indicated in the battery compartment and press the RESET key to reset the clock. The display will turn on after a few seconds. Only use alkaline batteries from a reputable brand.
3. Close the battery door.

Function keys

TIME SETTING touch key.

- Touch the clock icon to turn on the backlight for 10 seconds.
- Touch the clock icon to stop the alarm and activate the 5 minute snooze function.
- Touch and hold the clock icon for 2 seconds to set the clock time.

ALARM SETTING touch key.

- Touch the alarm icon to turn on the backlight for 10 seconds.
- Touch the alarm icon to stop the alarm and activate the 5 minute snooze function.

- Touch and hold the alarm icon for 2 seconds to set the alarm time.

SNOOZE / LIGHT touch key.

- Touch to turn on the backlight for 10 seconds.
- Touch to stop the alarm and activate the 5 minute snooze function.

Rotating bezel

- In normal mode, rotate the bezel to turn on the backlight for 10 seconds.
- Rotate the bezel to stop the alarm and activate the 5 minute snooze function.
- In TIME SETTING or ALARM SETTING mode, rotate the bezel clockwise to increase the setting value.
- In TIME SETTING or ALARM SETTING mode, rotate the bezel anti-clockwise to decrease the setting value.

ALARM ON / OFF slider

- Push the ALARM ON / OFF slider up to enable the alarm.
- Push the ALARM ON / OFF slider down to disable the alarm.


RESET key

- Press by using a pointy object (a paperclip for example) to reset all values to default. Reset the unit in case of a malfunction.

Product description (Image 1)

1. ALARM SETTING touch key
2. LCD display
3. SNOOZE / LIGHT touch key
4. Rotating bezel
5. TIME SETTING touch key
6. ALARM ON / OFF slider
7. RESET button
8. Battery compartment

1.

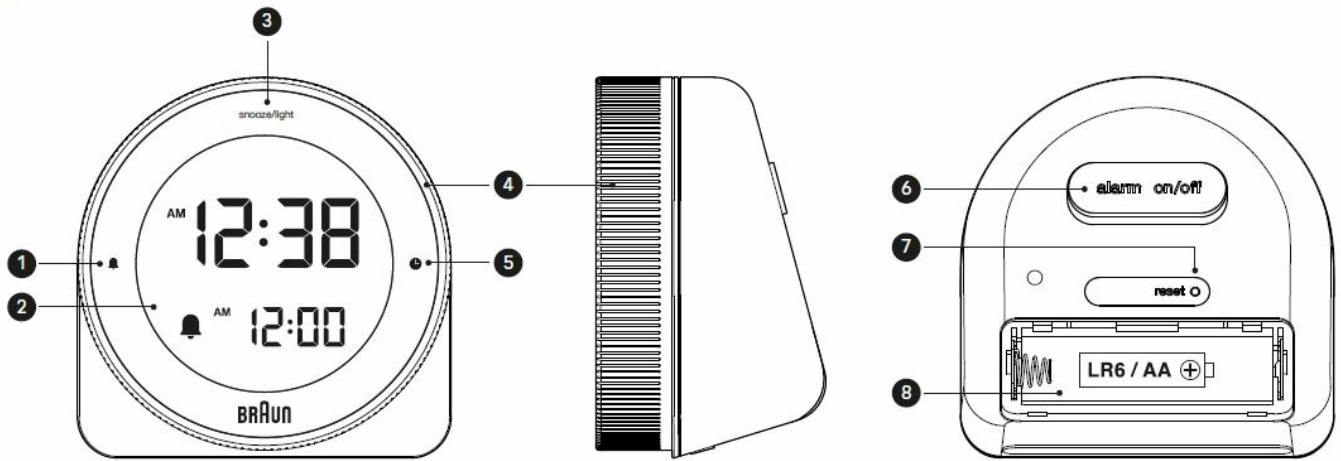

Display details (Image 2)

- A. Time
- B. Alarm icon
- C. Alarm time

2.



Setting the time

1. Touch and hold the clock icon for 2 seconds to enter the time setting mode.
2. Rotate the bezel to select 12 or 24 hour format.
3. Touch the clock icon to confirm hour format setting.
4. Rotate the bezel to set the desired time.
5. Touch the clock icon to save the settings and return to the normal display.

Setting the alarm

1. Touch and hold the alarm icon for 2 seconds to enter the alarm setting mode.
2. Rotate the bezel to set the desired alarm time.
3. Touch the alarm icon to save the settings and return to the normal display.

Using the alarm and snooze function

1. Enable the alarm by pushing the ALARM ON / OFF slider up (so the green indicator is visible). The bell icon will appear on the LCD display.
2. Touch one of the keys (SNOOZE/LIGHT / TIME SETTING / ALARM SETTING / BRAUN logo) or rotate the bezel to stop the alarm and activate the snooze function. When the snooze function is activated, the bell icon will flash.
3. To disable the alarm and snooze function, push the ALARM ON / OFF slider down. The bell icon will disappear.

Note: When the snooze function is activated, the alarm will automatically start again after 5 minutes. The snooze function will not stop unless the ALARM ON / OFF SLIDER is pushed down.

Battery replacement

When the LCD starts to dim, replace with a new battery at once.

Note: Exposure to an electrostatic environment may cause the clock to reset. In this event, please follow the instructions as described in this manual to set the clock again.

Guarantee

- 2 year guarantee against material and workmanship defects (except battery). The guarantee is valid in those countries where the clock is officially being sold.
- Broken or cracked lens screens are not covered under the Guarantee.

Braun helpline

Should you have a problem with your product, please check your local service centre at:

www.braun-clocks.com


www.braun-watches.com

or contact +44 808 175 3235 (calls free within the UK) or +44 208 208 1833.

WARNING!

- This product is covered by the Waste Electrical and Electronic Equipment (WEEE) directive. It should not be discarded with normal household waste but taken to your local collection centre for recycling.
- This product conforms to the EMC requirements as per council directive 2014/30/EU.
- Certain trademarks used under license from the Procter & Gamble Company or its affiliates.

Documents / Resources

	<p>BRAUN BC24 Alarm Clock [pdf] Instruction Manual BC24, BC24 Alarm Clock, Alarm Clock, Clock</p>
---	---

References

-  [Braun-Clocks: Braun Shop online | Buy Braun Clocks & Watches](#)
-  [Emit Collection | Buy Online Watches & Accessories Store](#)

