



# Breeze UTY-LBTUM IR Receiver Kit With Wireless Remote Controller Instruction Manual


[Home](#) » [breeze](#) » Breeze UTY-LBTUM IR Receiver Kit With Wireless Remote Controller Instruction Manual 




## Contents

- [1 Overview](#)
- [2 Specifications](#)
- [3 Documents / Resources](#)

## Overview

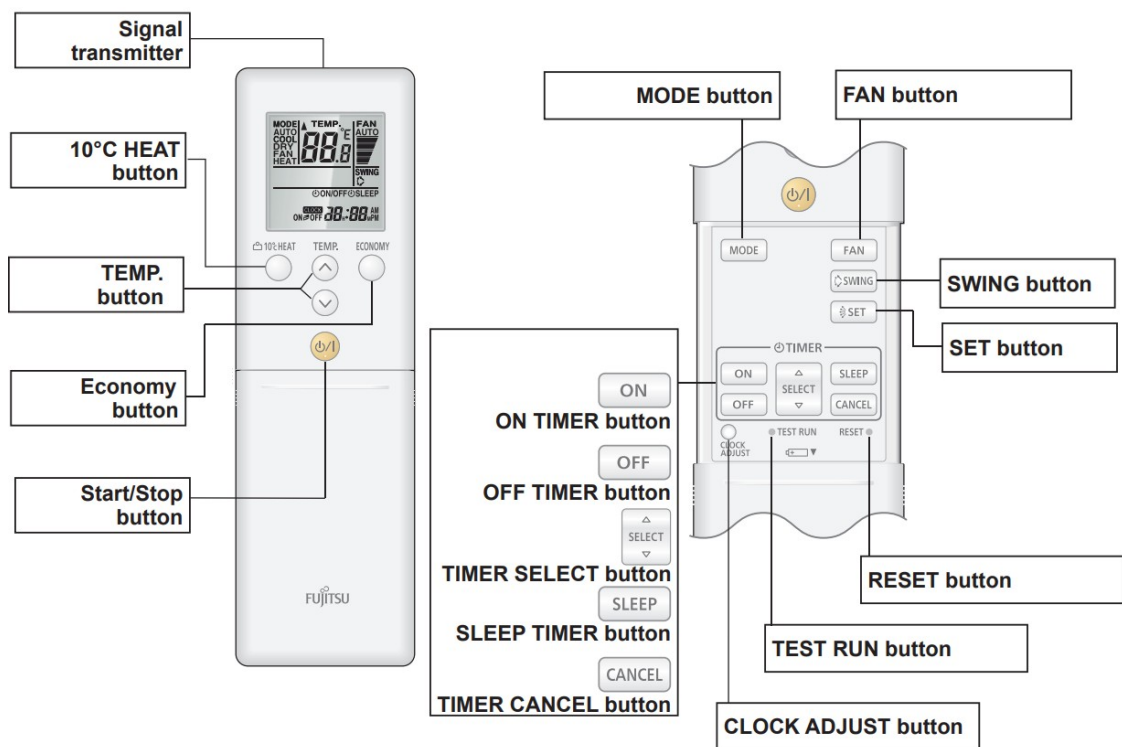

**NOTE:** Functions may differ by type of the indoor unit. For details, refer to the operation manual. Display panel

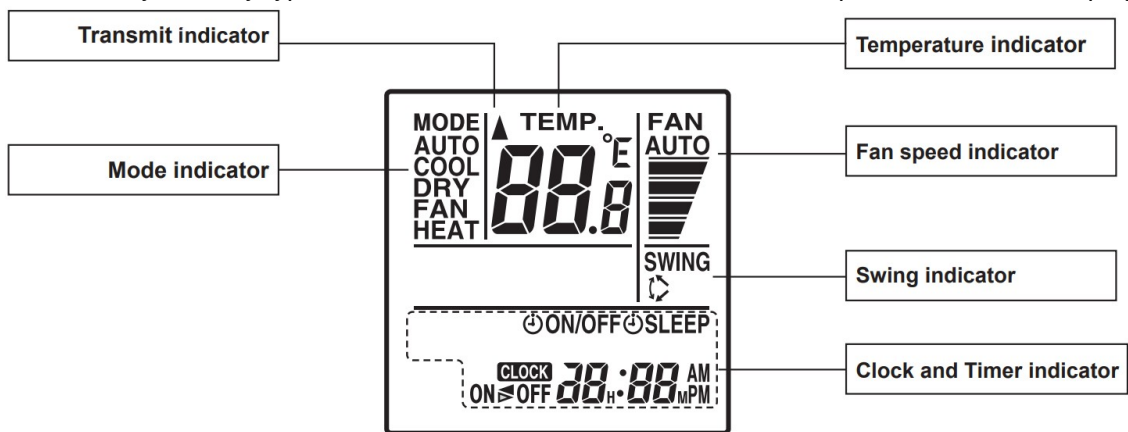


To facilitate explanation, the accompanying illustration has been drawn to show all possible indicators; in actual operation, however, the display will only show those indicators appropriate to the current operation.

## Specifications


**Controller**

**Unit: mm**

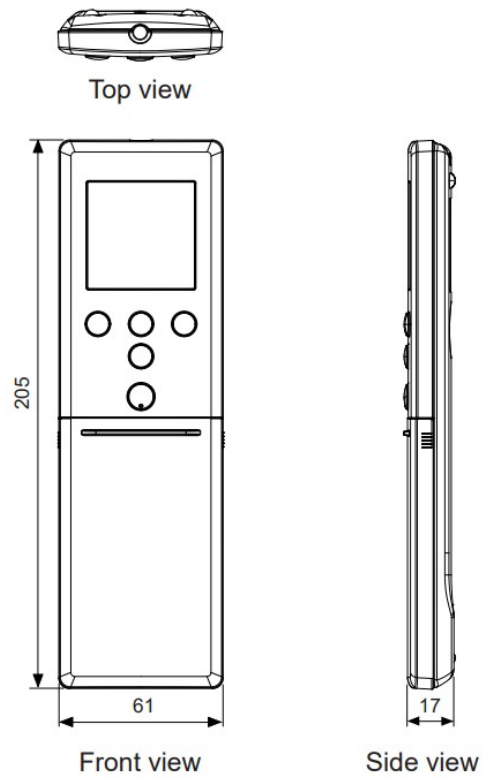

Size (H × W × D)	mm	205 × 61 × 17
Weight	g	122 (without batteries)


**Holder**  
Unit: mm

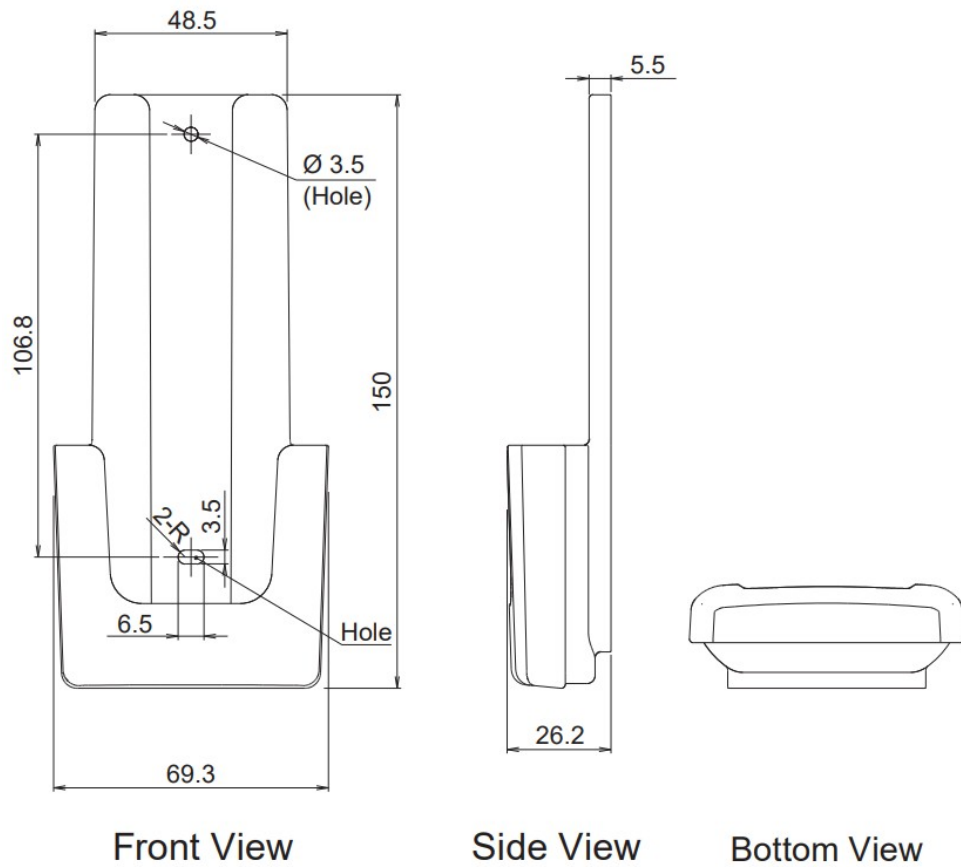

Size (H x W x D)	mm	150 x 69.3 x 26.2
Weight	g	27



**Documents / Resources**

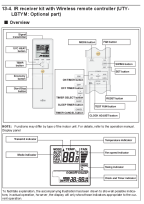	<p><a href="#">Breeze UTY-LBTUM IR Receiver Kit With Wireless Remote Controller</a> [pdf] Instruction Manual</p> <p>UTY-LBTUM IR Receiver Kit With Wireless Remote Controller, UTY-LBTUM, IR Receiver Kit With Wireless Remote Controller, Receiver Kit With Wireless Remote Controller, With Wireless Remote Controller, Wireless Remote Controller, Remote Controller, Controller</p>
---	---