



# breeze24 CZ-RD514C Wired Remote Control User Manual

[Home](#) » [BREEZE24](#) » breeze24 CZ-RD514C Wired Remote Control User Manual 

## Contents


- 1 breeze24 CZ-RD514C Wired Remote Control
- 2 Remote Control Display
- 3 Remote Control Preparation
- 4 DAILY TIMER SETTING
- 5 WEEKLY TIMER SETTING
- 6 OPERATION DETAILS
  - 6.1 Cancel Current Timer Program
  - 6.2 Disable & Enable Weekly Timer
- 7 Documents / Resources
  - 7.1 References
- 8 Related Posts



**breeze24 CZ-RD514C Wired Remote Control**




## Remote Control Display

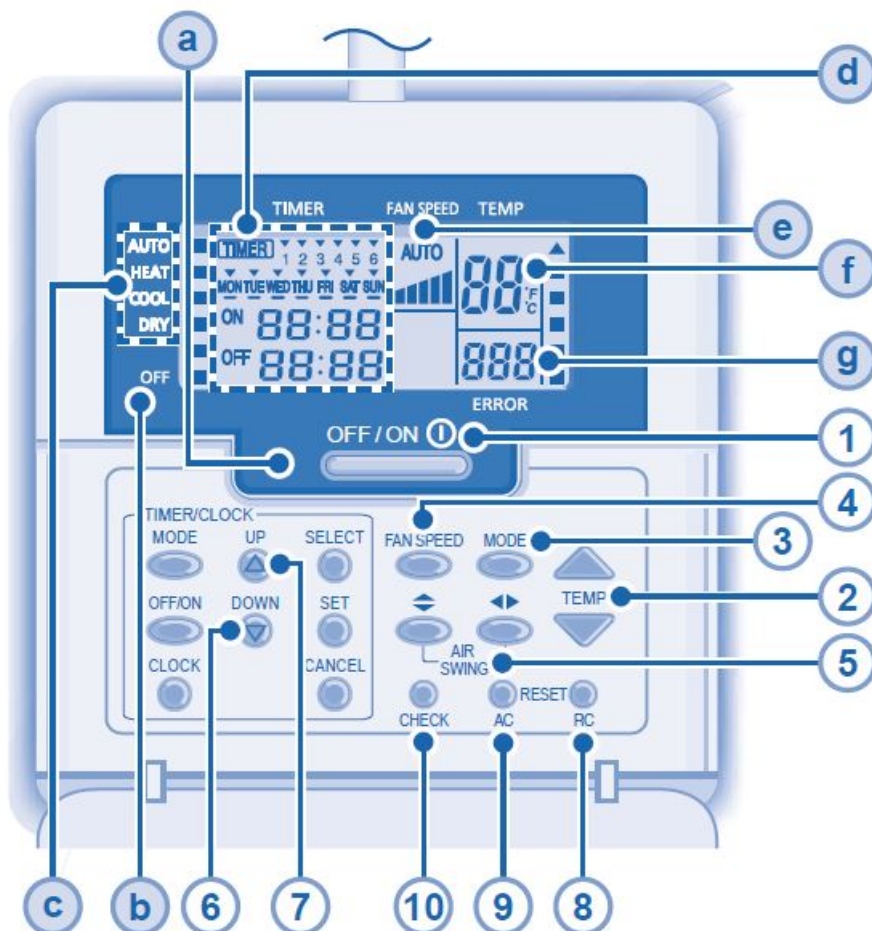



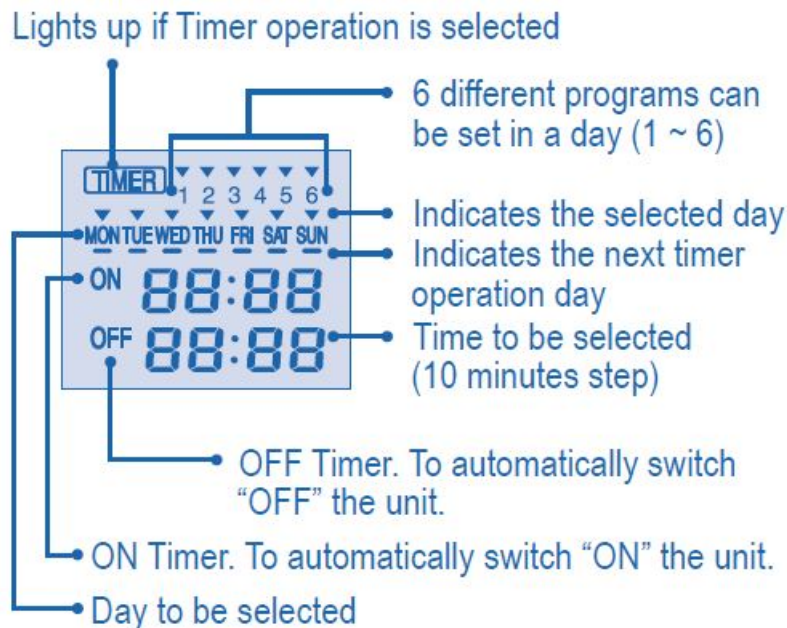

- **a**-OPERATION LED
- **b** OFF INDICATOR
- **c** OPERATION MODE SELECTION INDICATOR

- **d** TIMER/CLOCK SETTING DISPLAY



- **e** FAN SPEED DISPLAY
- **f** TEMPERATURE SETTING DISPLAY
- **g** ERROR CODE DISPLAY

## Remote Control Preparation

1. Press 
2. Press  or  selects the current day.
3. Press  to confirm
4. Repeat steps 2 and 3 to set the current time.

## Press the remote control's button

### 1. TO TURN ON OR OFF THE UNIT

- Please be aware of the OFF indication on the remote control display to prevent the unit from starting/stopping improperly.

### 2. TO SET TEMPERATURE

- **Selection range:** 16°C ~ 30°C.

### 3. TO SELECT THE OPERATION MODE

#### **AUTO mode – For your convenience**

- Unit selects operation mode during startup according to temperature setting and room temperature.

#### **HEAT mode – To enjoy the warm air**

- The unit takes a while to warm up. The power indicator blinks during this operation.

#### **COOL mode – To enjoy the cool air**

- Use curtains to screen off sunlight and outdoor heat to reduce power consumption during cool mode.

### **DRY mode – To dehumidify the environment**

- The unit operates at low fan speed to give a gentle cooling operation.

#### **4. TO SELECT FAN SPEED (5 OPTIONS)**





##### **FAN SPEED**



- For AUTO, the indoor fan speed is automatically adjusted according to the operation mode.


#### **5. TO ADJUST AIRFLOW DIRECTION**

- Keeps the room ventilated.
  - In COOL/DRY mode, if AUTO is set, the louver swing left/right and up/down automatically.
  - In HEAT mode, if AUTO is set, the horizontal louver fix is at a predetermined position. The vertical louver swing left/right after the temperature rises.
  - For Hide-Away models, AIR SWING buttons are not in use. Airflow direction can not be adjusted.
6. Press and hold for approximately 10 seconds to show the temperature setting in °C or °F.
  7. Press and hold for 5 seconds to dim or restore the unit's indicator brightness.
  8. Press to restore the remote control's default setting.
  9. Not used in normal operations.
  10. Retrieve the error code.
    - During operation, the unit stops and both a and b is OFF indicating abnormality occurs.

1. Ensure a is OFF, press  for 5 seconds.
2. Press  or . If the error code and abnormality can be identified, a will be ON continuously, then write down the error code.
3. Press  for 5 seconds to quit checking.
4. Turn the unit off and reveal the error code to authorized dealer.

### **DAILY TIMER SETTING**

- To turn ON or OFF the unit at a preset time.

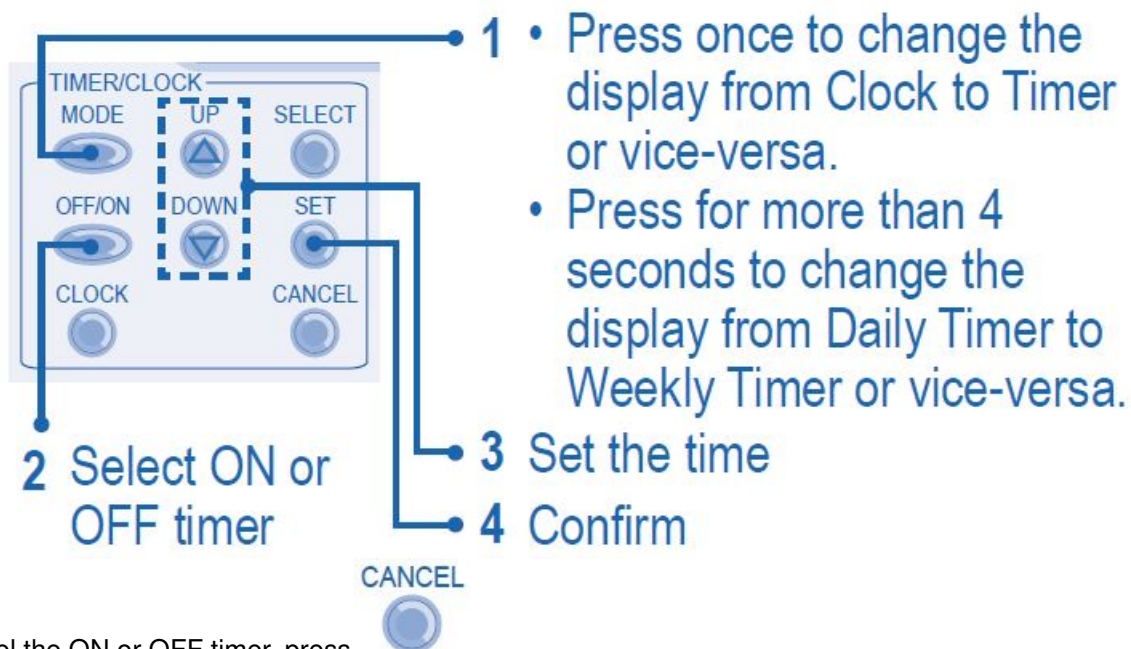

- To cancel the ON or OFF timer, press .
- Timer operation is based on the clock set in the remote control and repeats daily once set.
- The timer closest to the current time will be activated first.
- If the timer is canceled manually or due to power failure, you can restore the previous setting by pressing it.

## WEEKLY TIMER SETTING

- The daily timer and weekly timer could not be set at the same time.
- Promotes energy saving by allowing you to set up to 6 programs on any given day.

1. Press Timer or 4 seconds to change the display to the weekly timer.




2. Press the Timer or select your desired day.



3. Press to confirm your selection.

4. "1" will be blinking, press to set program 1.


5. Press Timer to select ON or OFF timer.

6. Press Timer  or  to select your desired time.

If you want to set the timer together with your desired temperature, press  to select the temperature.

7. Press  to confirm program 1. The selected day will be highlighted .

- After 2 seconds, the display will move to the next program. Repeat steps 4 to 7 to set programs 2 to 6.
- The same timer program cannot be set on the same day.








- During timer setup, if no button is pressed within 30 seconds, or if the  button is pressed, the setting at that moment is confirmed and timer setup is ended.

## OPERATION DETAILS





The timer setting will be shown at the wired remote control only but not at the indoor unit's TIMER indicator.

### Check the Current Timer Program

Perform the step below to check the timer program for a particular day.

1. Press Timer  to enter timer mode.
2. Press  to enter day setting.
3. Press Timer  or  until your desired day is shown, press  to confirm your selection.
4. Press the Timer  or  to check the set programs.









### Modify the Current Timer Program or Add New Timer Program

1. Press Timer  to enter the timer mode.
2. Press  to enter day setting.
3. Press Timer  or  until your desired day is shown.
4. Perform steps 4 to 7 of "WEEKLY TIMER SETTING" to modify the existing timer program, or add any timer





program.

### Cancel Current Timer Program

Perform the step below to cancel the timer program for a particular day.

1. Press  to enter the day.
  2. Press Timer  or  until your desired day is shown.
  3. Press  to enter the program setting.
  4. Press Timer  or  until your desired program is shown.
- Press  to cancel the program,  will disappear.

### Disable & Enable Weekly Timer

- To disable the weekly timer setting, press , then press .
- To enable the previous weekly timer setting, press , then press .

### NOTE

- When the wired remote control is installed ECONAVI, AUTO COMFORT, and MILD DRY operation setting from the wireless remote control might be disabled. But POWERFUL, QUIET, PATROL, e-ion operation setting could be operated according to the wireless remote control.
- When the wired remote control is in operation, the timer setting from the wireless remote control will be canceled.

### Panasonic Corporation

Website: <http://panasonic.net/>.

### Documents / Resources





[breeze24 CZ-RD514C Wired Remote Control](#) [pdf] User Manual  
CZ-RD514C Wired Remote Control, CZ-RD514C, Wired Remote Control, Remote Control

## References

- [P Panasonic Holdings Corporation](#)

Manuals+.