



brennenstuhl MZ 44 Mechanical Timer Socket Instruction Manual

[Home](#) » [brennenstuhl](#) » brennenstuhl MZ 44 Mechanical Timer Socket Instruction Manual 

brennenstuhl®

MZ 44 Mechanical Timer Socket Instruction Manual

Contents

- [1 Twenty-four-hour timer childproof.](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

Twenty-four-hour timer childproof.

For use in the open air.

- Up to 96 on/off switching times per day can be set.
- Shortest switching time: 15 minutes.
- When used in the open air, install the timer so that the socket is facing upwards and the dial downwards.

Setting the switching programs:

Black selector pins are arranged around the dial.

Using a pointed object, such as a ballpoint pen, press down one or more pins until they lock home for the desired switching time (15 mins.).

Example: Switching time from 12 noon to 1 pm:

press down 4 pins between 12.00 and 13.00.

After selecting the switching times, turn the dial until the exact time coincides with the arrow marked on the dial.

Time-stop in case of power-cut.

Voltage rating: 220-240 V

Max. load: 16 A / 3500 watts



Hugo Brennenstuhl

GmbH & Co. KG

D-72074 Tübingen

www.brennenstuhl.de

Documents / Resources

	brennenstuhl MZ 44 Mechanical Timer Socket [pdf] Instruction Manual MZ 44, Mechanical Timer Socket, MZ 44 Mechanical Timer Socket
---	--

References

-  [brennenstuhl® | Licht- und Stromverteilung](#)