



BroadLink RM4 Mini Remote Sensor Accessory User Guide

[Home](#) » [BroadLink](#) » BroadLink RM4 Mini Remote Sensor Accessory User Guide 


BroadLink RM4 Mini Remote Sensor Accessory



Contents

- [1 Overview](#)
- [2 Important Notices](#)
- [3 Add Device](#)
- [4 Customers Support](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)


Overview

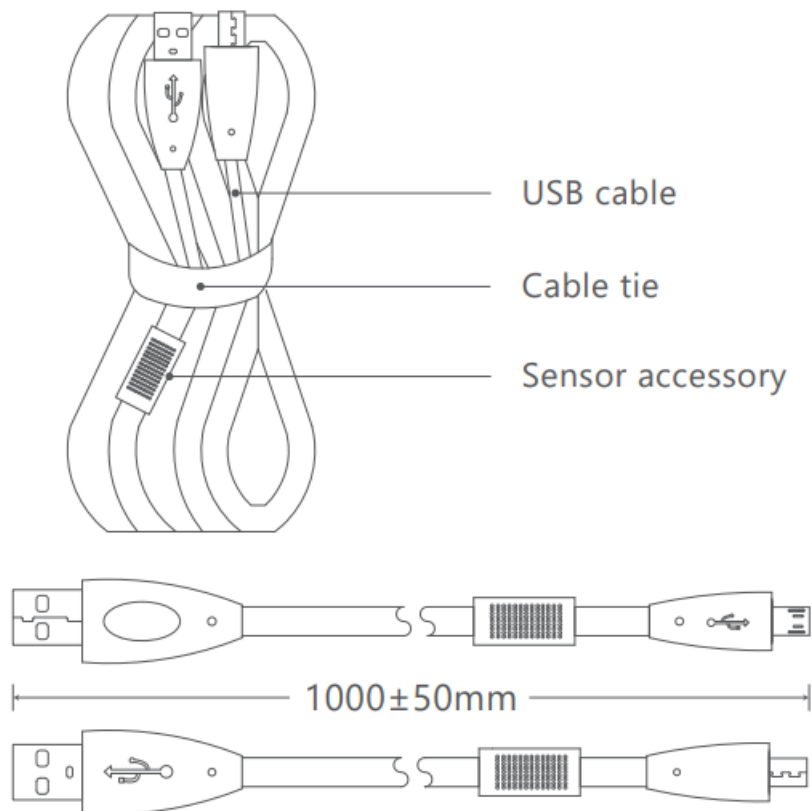

Important Notices

For indoor use in dry environment only

Add Device

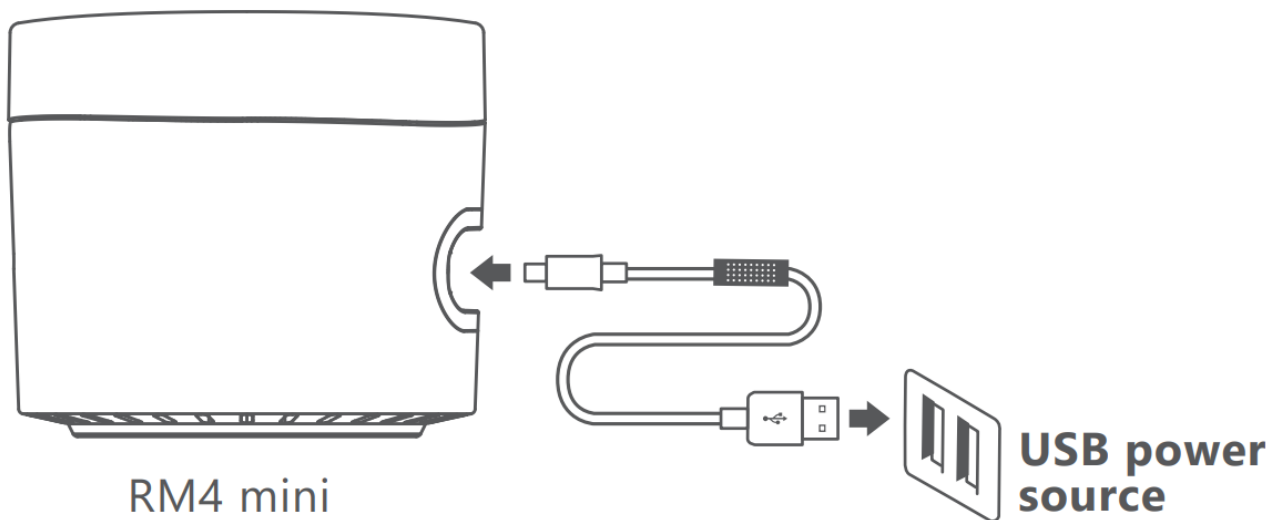

- Please connect the sensor accessory to the RM4 mini.
- Power on the device. If it is in first time use, it will be in smart configuration mode automatically, otherwise you may need to reset it.
- When the device is in smart configuration mode, follow the wizard in App to add device, name it and assign it to a room.

- The temperature & humidity data will be displayed automatically on App after device is added.



Customers Support



Global Hotline 5 x 24h Mon-Fri

North America

+1-40-4476-4482

Europe

+33-4-81-68-12-80

India & UAE

1800-103-6262 (Toll Free)

Other Asian Countries

+91-1800-103-6262

Latin America

+55-11-4118-4618

Australia & New Zealand

+61-2-4067-5400

web: www.ibroadlink.com

e-mail: support@ibroadlink.com

BroadLink



[BroadLink RM4 Mini Remote Sensor Accessory](#) [pdf] User Guide
RM4 Mini, RM4 Mini Remote Sensor Accessory, Remote Sensor Accessory, Sensor Accessory, Accessory

References

- [User Manual](#)