

BROCK Electronics WM 3002 BK Waffle Maker User Manual

Home » BROCK Electronics » BROCK Electronics WM 3002 BK Waffle Maker User Manual



Contents

- 1 BROCK Electronics WM 3002 BK Waffle
- Maker
- **2 IMPORTANT SAFETY INSTRUCTIONS**
- **3 USING THE DEVICE**
- **4 CLEANING AND MAINTENANCE**
- **5 TECHNICAL DATA**
- 6 Documents / Resources
 - **6.1 References**
- 7 Related Posts



BROCK Electronics WM 3002 BK Waffle Maker



Dear Customer:

Please read these operating instructions thoroughly before connecting your device to the mains, in order to prevent damage due to improper use. Pay particular attention to the safety information.

IMPORTANT SAFETY INSTRUCTIONS

- 1. Before commissioning this device please read the instruction manual carefully.
- 2. Please keep these instructions, the guaranty certificate, the sales receipt and, if possible, the carton with the inner packaging!
- 3. The device is intended exclusively for private and not for commercial use!
- 4. Always remove the plug from the socket whenever the device is not in use, when attaching accessory parts, cleaning the device or whenever a disturbance occurs. Switch off the device before. Pull on the plug, not on the cable.
- 5. In order to protect children from the dangers of electrical appliances, never leave them unsupervised with the device. Consequently, when selecting the location for your device, do so in such a way that children do not have access to the device. Take care to ensure that the cable does not hang down.
- 6. Test the device and the cable regularly for damage. If there is damage of any kind, the device should not be used.
- 7. Do not repair the device yourself, but take this to nearest authorized service station.
- 8. Keep the device and the cable away from heat, direct sunlight, moisture, sharp edges and such like.
- 9. Never use the device unsupervised! Switch off the device whenever you are not using it, even if this is only for a moment.
- 10. Do not use the device outdoors.
- 11. Under no circumstances must the device be placed in water or other liquid, or come into contact with such. Do not use the device with wet or moist hands.
- 12. Should the device become moist or wet, remove the mains plug from the socket immediately. Do not reach into the water.
- 13. Use the device only for the intended purpose.

Special safety notes

- 1. The baking surfaces get very hot. Touch the handles only.
- 2. Put the unit down onto a heat-resistant surface or mat.
- 3. In order to prevent heat from building up, do not put the unit directly underneath a cupboard. Ensure that there is enough space all around.
- 4. Beware of steam coming out when you open the baking section.
- 5. The waffle can burn, so never use the waffle maker near or below curtains and other inflammable materials!
- 6. A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.
- 7. If the supply cord is damaged, it must be replaced by the manufacture or its service agent or a similarly qualified person in order to avoid a hazard.
- 8. The temperature of accessible surfaces may be high when the appliance is operating.
- 9. Charcoal or similar combustible fuels must not be used with this appliance.
- 10. This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 11. Appliances are not intended to be operated by means of an external timer or separate remote-control system.
- 12. Children should be supervised to ensure that they do not play with the appliance.

BEFORE USING YOUR APPLIANCE FOR THE FIRST TIME

- Clean the plates using a damp sponge rinse and dry carefully.
- After applying a fine coating oil to the plates, close the appliance and plug it in. The indicator light (red red&green) will come on.
- Allow it to heat up for several minutes to get rid of the new smell.

USING THE DEVICE

- Put the plug into an earthed 220-240V, 50/60Hz mains socket. The indicator lights (red&green) will come on.
- Select the desired temperature using the thermostat (position1-6).
- Once the appliance reaches the right temperature, the setting indicator light(green) goes out. Open the
 appliance and lightly the oil the plates.
- Pour the waffle batter into the center of the hollow part of the pate.
- Immediately close the appliance, using the handle, so that the batter is evenly distributed over the whole surface of the plate.
- Do not hold onto the handle of the appliance during cooking, as this will prevent the batter from rising.

 Note: During cooking, the thermostat indicator light (green) will come on and got off again at regular intervals in order to ensure the cooking temperature remains constant. Equally, you can adjust the thermostat at any time during cooking if you feel that the temperature is not high enough, or again, is too high.
- The cooking time is about 5 minutes and will vary according to the composition the batter.
- In any case, it It is advisable to control the degree of cooking with the thermostat according to your own taste.

 The quantities and times are given by way of indication only.
- Once cooking is complete, remove the waffle using a spatula.

- Do not use metallic or sharp, as they could damage the coating on the plate.
- If you want your waffles to the plate, select a higher setting on the thermostat or increase the cooking time.
- After use, unplug the appliance and allow it to cool down.

Caution:

- The grilling surfaces as well as the sides and top of the appliance get very hot. Avoid any contact. Danger of burning! Only hold by the handle.
- The appliance must always be positioned horizontally during use.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not immerse the appliance in any liquid.
- The temperature of accessible surfaces may be high when the appliance is operating. WARNING: Charcoal or similar combustible fuels must not be used with this appliance.

CLEANING AND MAINTENANCE

- Before cleaning the appliance, unplug it and allow it cool down.
- Never place the appliance in water or under running water.
- To clean the outside of the appliance, use a damp sponge and dry carefully.
- To clean the plates, use a damp sponge with washing up liquid. Rinse and dry them with care.
- If there is any batter backed onto the plate, we would advise using vegetable oil to soften it and waiting 5
 minutes before removing it.
- · Never use a scouring pad or powder.
- Wind the cord around the appliance and store the appliance vertically to save space.
- This appliance conforms with the CE directives for radio interference suppression and low-voltage safety and has been built to meet current safety requirements. Subject to technical changes without prior notice!

TECHNICAL DATA

•	Voltage	.220
	240 V~50/60 Hz	
•	Power	750
	W	

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste. If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary

information about the correct disposal method from the local council or from your vendor. This product meets all the basic requirements of EU directives that apply to it.

Trademarks BROCK Electronics owner GTCL BALTIC Phone: +371 67297762

- · Warranty card
- WM 3002 BK
- Model name
- S/N:
- Serial number

Fax: +371 67297769 E-mail: gtcl@gtcl.lv www.brockgroup.eu

www.gtcl.lv

Technical Service: Tel. +371 28683856, serviss@gtcl.lv

www.brockelectronics.eu

Documents / Resources



BROCK Electronics WM 3002 BK Waffle Maker [pdf] User Manual WM 3002 BK, Waffle Maker, WM 3002 BK Waffle Maker, Maker

References

- S BROCK
- © BROCK
- @ www.gtcl.eu
- @ www.gtcl.eu
- @ gtcl.eu

Manuals+,