



BRODBECK Fixed Work Rest Instruction Manual

[Home](#) » [BRODBECK](#) » BRODBECK Fixed Work Rest Instruction Manual 



 
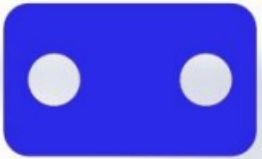 
 
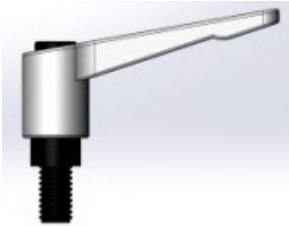 
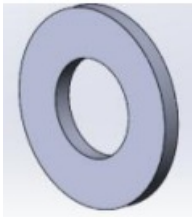 
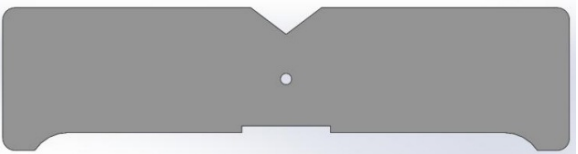 
FIXED WORK REST
ASSEMBLY INSTRUCTIONS
BRODBECK IRONWORKS LLC
REVISION B

Contents

**1 ASSEMBLY
INSTRUCTIONS**

2 Documents / Resources

ASSEMBLY INSTRUCTIONS

ITEM	DESCRIPTION	QTY	IMAGE
1	2 X 72 WORKREST BRACKET	1	
2	WORK REST SPACER	2	
3	1/2" BOLT 2.5"LG	2	
4	1/2" SPLIT LOCK WASHER	2	
5	1.5" SQ TOOL ARM 20" LG	1	
6	GRAY ADJUSTABLE HANDLE 3/8"-16 EXTERNAL THREAD	1	
7	3/8" FLAT WASHER	1	
8	2 X 72 WORK REST	1	

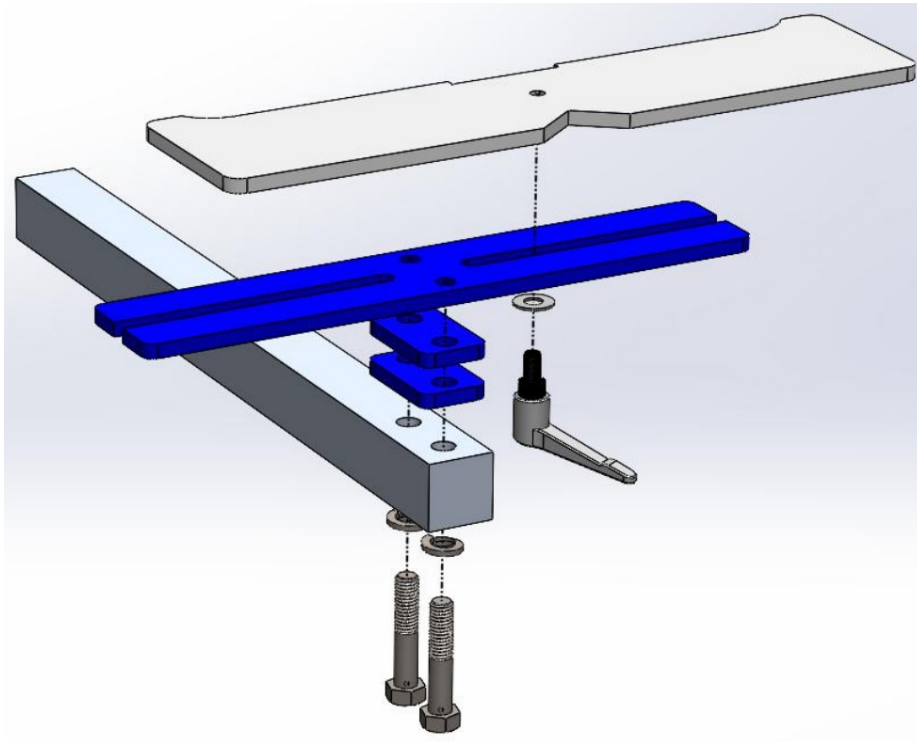
Contact Brodbeck Ironworks LLC for any questions or concerns before operating this equipment
IF YOU HAVE ANY ISSUES WITH ASSEMBLY OR MISSING PARTS PLEASE CONTACT US IMMEDIATELY

Ben Secrist 513-532-7062, Ben@brodbeckironworks.com
Vince Molina 301-221-9321, Vince@brodbeckironworks.com

TOOL LIST

– 3/4" Combo Wrench Or Socket

Fixed Work Rest Assembly



Install work rest spacers and work rest bracket using 1/2-13 x 2-1/2" hex bolts and split lock washers on the arm. Attach 3/8" threaded handle with one flat washer and slide into slot on work rest bracket.

Documents / Resources

	BRODBECK Fixed Work Rest [pdf] Instruction Manual Fixed Work Rest, Work Rest, Rest
---	---