



BROMIC US-BH3130012-2 Master Remote For Use With The Dimmer Controller User Guide

[Home](#) » [Bromic](#) » BROMIC US-BH3130012-2 Master Remote For Use With The Dimmer Controller User Guide 

Contents

- [1 BROMIC US-BH3130012-2 Master Remote For Use With The Dimmer Controller](#)
- [2 REQUIREMENTS](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)



BROMIC US-BH3130012-2 Master Remote For Use With The Dimmer Controller



REQUIREMENTS

The Master Remote features 6 zones as indicated by the red led lights at the top of the remote. Each zone can be programmed to control a single dimmer or multiple dimmers. You will need physical access to the dimmers and should remove the covers prior to beginning the programming of the master remote. You will not need the individual remotes for this process. They can be stored to be used as back up. We recommend labeling the dimmers and matching remotes for future reference.



Bromic Master Remote

- US - BH3130012-2
- AU - 2620277-2
- EU - BH3130021-2




Bromic Dimmer Controller

- US - BH3130011-2
- AU - 2620276-1
- EU - BH3130020-1

Below are the basic steps for programming a Master Remote for use with a Dimmer Controller.

Select a zone on the 42-channel remote: Zone 1-6

- Press the left or right button under the red led lights to select the desired zone. The buttons will move the selection left or right.
- Once selected the LED will go out but the zone will be remembered during the programming process.

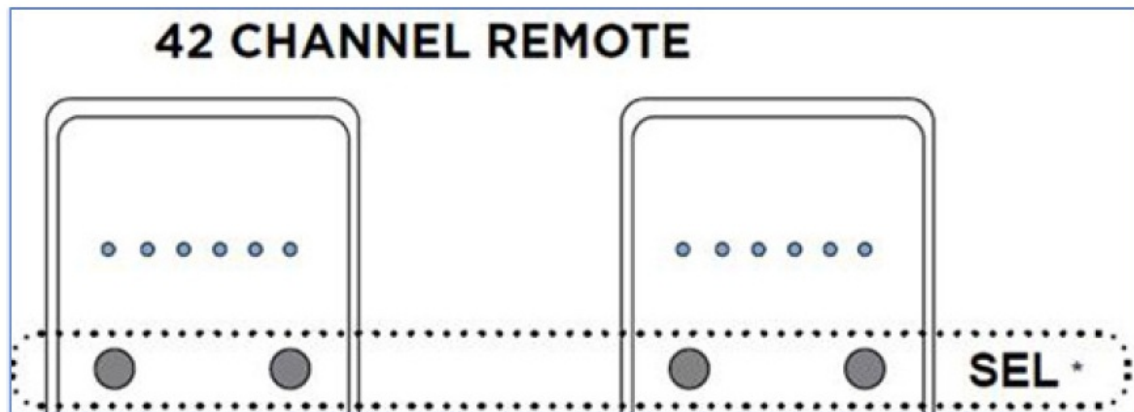

Identify the red programming button as shown circled in the photo below.

- Press and hold the programming button and you will hear a continuous beep.
- Press the top bar (100% Power) on the master remote and the beep will change to intermittent. Release both buttons and you are done.
- The programming has been completed for this dimmer



You can now add additional dimmers to the selected zone to create a group of dimmers or change the zone for individual dimmer control.

Repeat steps from step 2 for each dimmer. We recommend labeling the dimmers with the zone number for future reference. If this does not resolve the issue, you will need to schedule a troubleshooting call with Bromic Tech Support.


When contacting our Tech Team we request you submit model numbers of the heaters and controls, photos of the installed products and installation wiring along with proof of purchase to validate any warranty. Please remember to request service calls 48 hours in advance to ensure availability.

North America – Technical Support
(800) 301-1293
www.bromic.com

Austrailia – Technical Support
1300 276 642
www.bromic.com.au

Europe – Technical Support
+31 737041029
www.bromic.co.uk

Documents / Resources

	<p>BROMIC US-BH3130012-2 Master Remote For Use With The Dimmer Controller [pdf] User Guide</p> <p>US-BH3130012-2 Master Remote For Use With The Dimmer Controller, US-BH3130012-2, Master Remote For Use With The Dimmer Controller, Remote For Use With The Dimmer Controller, Use With The Dimmer Controller, With The Dimmer Controller, Dimmer Controller</p>
--	---

References

- [Luxury Commercial & Residential Outdoor Heaters | Bromic Heating USA](#)
- [Bromic Heating United Kingdom - Global Leader In Outdoor Patio Heaters](#)
- [Luxury Commercial & Residential Outdoor Heaters | Bromic Heating USA](#)
- [Luxury Commercial & Residential Outdoor Heaters | Bromic Heating Australia](#)
- [User Manual](#)