



Brook Portable X One SE Adapter Support audio function User Manual

[Home](#) » [Brook](#) » Brook Portable X One SE Adapter Support audio function User Manual 

Brook Portable X One SE Adapter Support audio function User Manual



Contents

- [1 Product Description](#)
- [2 Product Features](#)
- [3 How to install](#)
- [4 LED](#)
- [5 How to use on PS4](#)
- [6 How to use on Xbox One/PC](#)
- [7 How to use on Switch](#)
- [8 Corresponding Buttons List](#)
- [9 Use of Simulated Touchpad](#)
- [10 Turbo Function](#)
- [11 Remap Function](#)
- [12 Others](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)

Product Description



Product Features

X One SE	PS4	SWITCH	XBOX One	PC
Wired Mode	●	●	●	●
Wireless Mode	●	●	●	●
Audio Function	●	X	●	X
Motion Control	●	●	X	X
Turbo & Remap	●	●	X	●

How to install



1. Plug the X One SE into the lower connector of the controller.
2. Flip over to the back of the controller.
3. Insert the normal end of the X One SE cable into the back connector of the X One SE.
4. Press and hold the cable so that it is flat against the controller.
5. Insert the flat end of the X One SE cable into the top connector of the controller.

LED

Blue LED Permanently on	X One SE and console are currently connected.
Blue LED Blinking	Wired device is not connected Wireless device is searching for connection...
Blue LED and Red LED Blinking alternately	Wireless connection mode is ON Searching for pairing device...
Red LED Blinking	Turbo-Remap button is being pressed
LED off	Power Off / Entering Turbo-Remap Settings

How to use on PS4

1. Toggle the “PS4/Xbox One/Switch slide switch” to where it is labeled “PS”.
2. Wired Connection: Simply connect the controller to console via X One SE’s “Upgrade/Charge port”. Wireless Connection:
The first time you use the X One SE, you need to pair it with the wireless controller: go to the “Bluetooth Device” screen and select “Wireless Controller” on your console setting. After waking up the controller, press

and hold the “Wireless pairing button” of X One SE for 2 seconds to make the LED of X One SE blink red and blue alternately, and wait for a few seconds until the LED of X One SE shows a constant blue light. After that, you only need to wake up the controller every time you use the X One SE.

Note: In this mode, the X One SE enables the controller to be used with phones that support Android 10 or iOS 13 or later.

How to use on Xbox One/PC

1. Toggle the “PS4/Xbox One/Switch slide switch” to the bar labeled between “PS” and “NS”.
2. In this mode, the X One SE is set to off, please use the controller as a normal connection.

How to use on Switch

1. Toggle the “PS4/Xbox One/Switch slide switch” to where it is labeled “NS”.
2. Wired Connection:

Simply connect the controller to console via X One SE’s “Upgrade/Charge port”.

Wireless Connection:

The first time you use the X One SE, you need to pair it with the wireless controller: go to the “Controller” screen on your console. After waking up the controller, press and hold the “Wireless pairing button” of X One SE for 2 seconds to make the LED of X One SE blink red and blue alternately, and wait for a few seconds until the LED of X One SE shows a constant blue light. After that, you only need to wake up the controller every time you use the X One SE.

Corresponding Buttons List


XB1	PS4	Switch	PC
D-Pad (U/D/L/R)			
Lx / Ly			
Rx / Ry			
A		B	A
B	○	A	B
X	□	Y	X
Y	△	X	Y
LB	L1	L	LB
RB	R1	R	RB
LT	L2	ZL	LT
RT	R2	ZR	RT
LSB	L3	L3	LSB
RSB	R3	R3	RSB
MENU	OPTIONS	+	START
VIEW	SHARE	–	BACK
Xbox Guide Key	PS Key	Home	Xbox Guide Key

Use of Simulated Touchpad

For PS4 use, press and hold the X One SE's "Touchpad simulate button" plus the controller's right analog stick to simulate touchpad operation.

The default mode of the "Touchpad simulate button" is "Hold mode"; it simulates the command to press and slide your touchpad. However, you can switch to "Slide mode" by pressing "Touchpad simulate button" + RSB at the same time; in this mode, only the process of sliding on the touchpad is simulated.

To switch from "Slide mode" back to "Hold mode", you need to press the "Touchpad simulate button" + LSB at the same time.

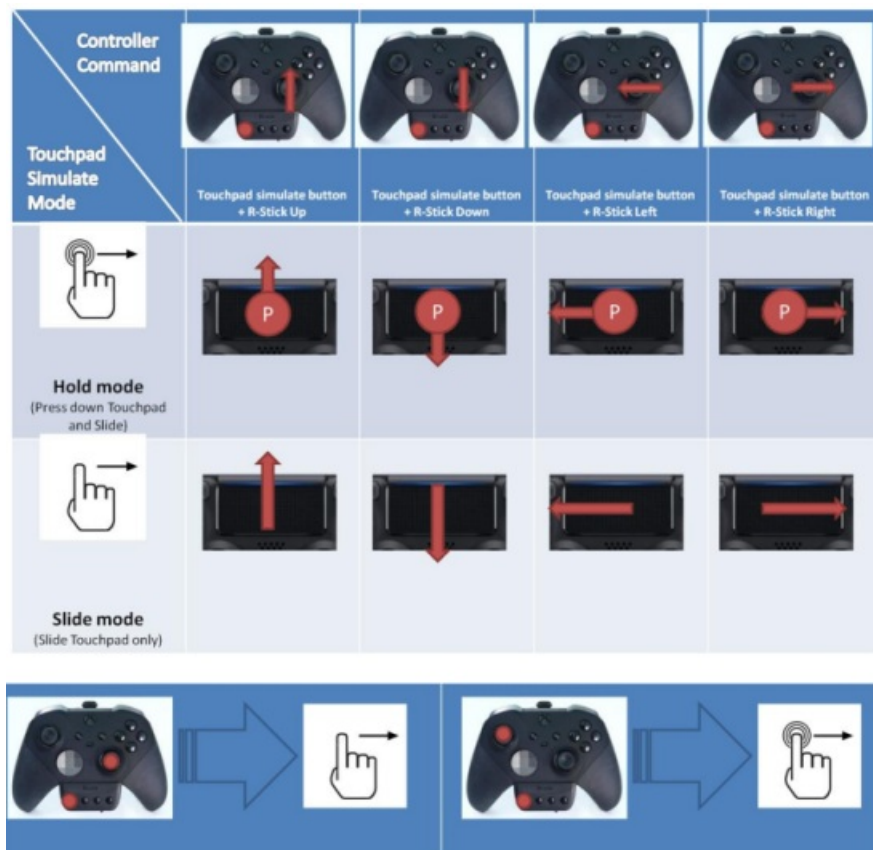

Turbo Function

Function Settings

Buttons that can be set as Turbo function buttons include: A, B, X, Y, LB, RB, LT, RT, LSB, RSB(hereinafter referred to as FK).

Press the "Turbo button" and the FK button at the same time, the controller will vibrate to indicate the successful setting.

EX: If you press "Turbo button" and "A" button at the same time, then "A" button can be turbo fire.

Cancelling Function

Cancellation of single button turbo function:

If you press the "Turbo button" and the FK button that has been configured with the turbo function, the controller will vibrate to indicate that the setting is canceled.

EX: If you press the "Turbo button" and the "A" button at the same time, the "A" button will cancel the turbo fire.

Cancellation of all button turbo function:

Press and hold the “Turbo button” for 2 seconds, the controller will vibrate 3 times to cancel all the settings.

Remap Function

Function Settings

Buttons that can be Remap include: A, B, X, Y, LB, RB, LT, RT, LSB, RSB and 4 paddles for the Xbox One Elite Series 2 itself(hereinafter referred to as FK).

Step 1. Choosing a FK button

Press the “Remap button” and FK button at the same time. The LED of the controller will turn off.

Step 2. Choosing button to be set

Press all keys that need to be assigned to FK at the same time and the controller will vibrate. When all keys are released, the LED will light up again to indicate successful setup.

EX: If you press “Remap button” and “A” button at the same time, then release the button and press X+Y button, the “A” button will be set to X+Y.

Cancelling Function

Cancellation of single button remap function:

Press the “Remap button” and the FK button with the Remap function, release it and press the FK button again to redefine the FK function.

EX: If you press the “Remap button” and the “A” button that has been set to X+Y at the same time, release the button and press the A button again, then the X+Y setting on the “A” button will be cancelled.

Cancellation of all button remap function:

Press and hold the “Remap button” for 2 seconds, the controller will vibrate 3 times to cancel all the settings.

About the use of paddles

When the Profile button on the Xbox One Elite Series 2 is toggled off, the 4 paddles on the back of the controller can be used as FKs. Note: You can set the functions of other FKs to the paddles, but not the paddles to other FKs.

Others

For the latest user guide and more information, visit Brook’s website.

P/N: X One SE

M/N: ZPP005G

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation

NOTE

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Ambient Operating Temperature0°C to +50°C

[Brook Portable X One SE Adapter Support audio function](#) [pdf] User Manual
005G, 2ADKM005G, Portable X One SE Adapter Support audio function