



BRT Sys LDSBus EC Sensor Adapter Instructions

[Home](#) » [BRT Sys](#) » BRT Sys LDSBus EC Sensor Adapter Instructions 



Before we can use this LDSBus device, it must be configured.
Let's Get Started!

Contents

- [1 BRT Sys LDSBus EC Sensor Adapter](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

BRT Sys LDSBus EC Sensor Adapter

Step 1.


Connect the LDSBus USB Adapter to the PC with a USB-C to USB-A Cable.
(Both to be purchased separately)

Step 2.

Connect one end of the cable provided to the LDSBus device if required.

Step 3.

Connect the other end of the cable to the LDSBus USB Adapter as shown in picture

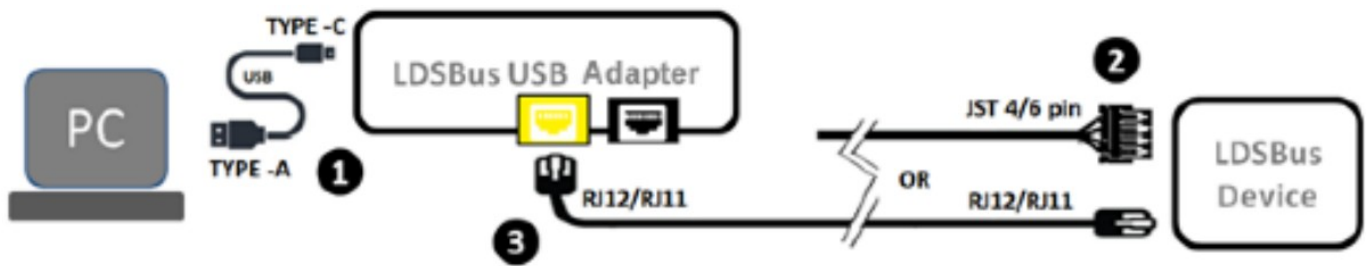

Step 4.


Scan the QR code or visit the link provided below:



<https://brtsys.com/resources/>

Step 5.

Download the LDSBus Configuration Utility. Complete the installation instructions.

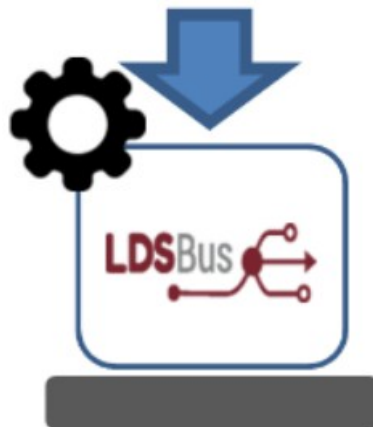

Follow the LDSBus Configuration Utility guide to configure the device name, device address and termination settings.

View the full information of this LDSBus device, application setup and installation guides for further Instructions.

 
Please visit or scan the QR code for warranty registration with the UUID and Product Key below



<https://brtsys.com/warranty>

STICKER AREA

Documents / Resources



[BRT Sys LDSBus EC Sensor Adapter](#) [pdf] Instructions
LDSBus, LDSBus EC Sensor Adapter, EC Sensor Adapter, Sensor Adapter, Adapter

References

- [🔗 Home - BRT Systems](#)
- [🔗 Resources - BRT Systems](#)
- [🔗 bridgetek](#)

Manuals+.