



BRT Systems IoTPortal Gateway User Guide

[Home](#) » [BRT Systems](#) » BRT Systems IoTPortal Gateway User Guide



Systems IoTPortal Gateway
User Guide



IoT Portal
Let's on-board your IoTPortal Gateway!

Contents [[hide](#)

[1 IoTPortal Gateway](#)

[2 Documents /
Resources](#)

[2.1 References](#)


[3 Related Posts](#)

IoTPortal Gateway

Step 1.

Power up the Gateway either through Poe or DC input.

Power LED will show red (Poe aft) or orange (Poe at/DC input).

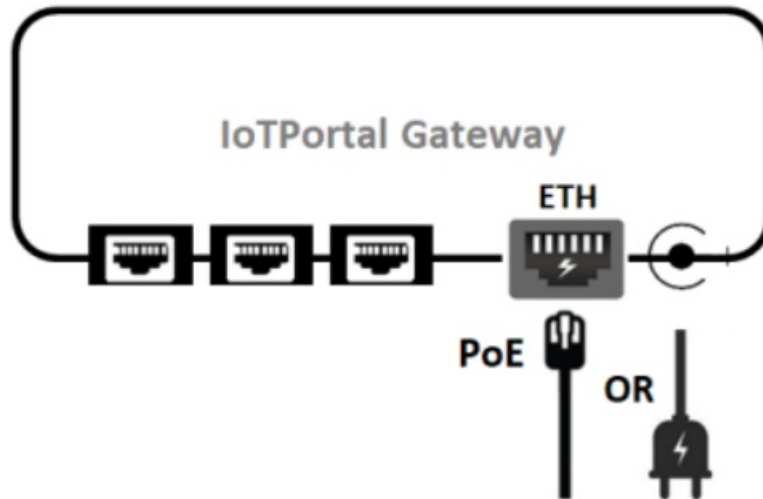


Step 2.

Download and install the IoTPortal mobile app from Google Play or App Store and sign up for an account.




Step 3.

Using the mobile app, add Gateway to IoTPortal. Click on the 'Scan' icon to add gateway. Scan QR code label on the gateway and choose 'Save.'

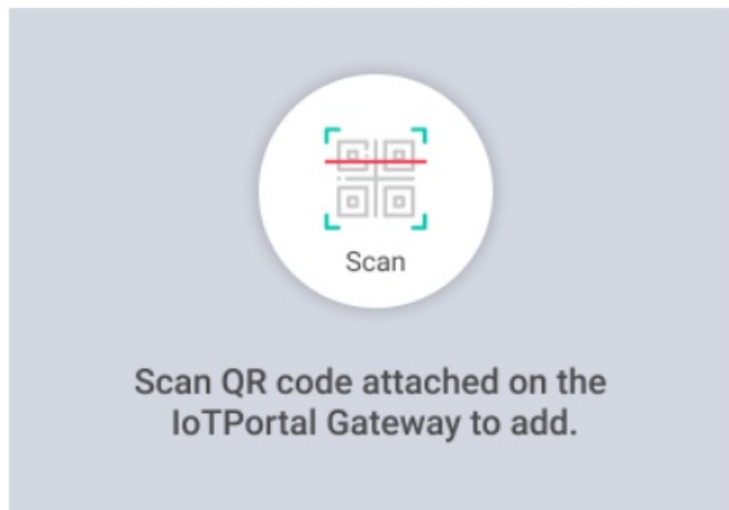


Step 4.

From the Gateway list, choose the recently added Gateway (Not On- Boarded). Select On-Board Gateway button and choose Ethernet or Wi-Fi.

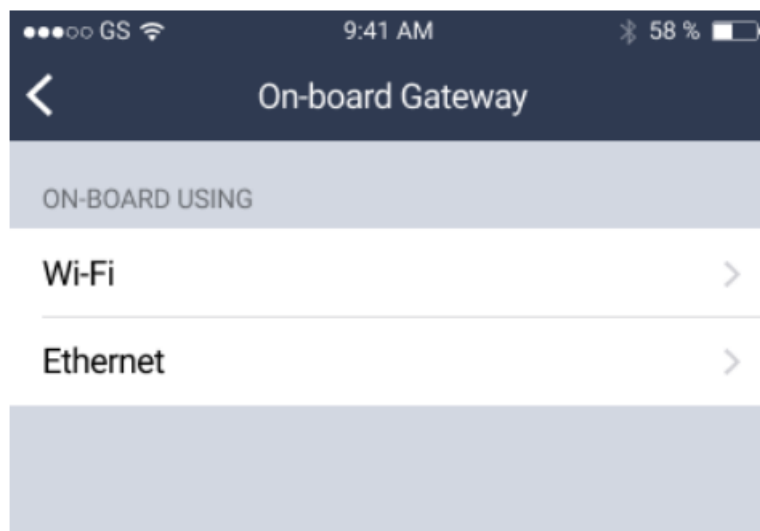

Step 5.

For Ethernet On-Boarding, connect a network cable. For Wi-Fi On-Boarding, follow the in-app instructions.

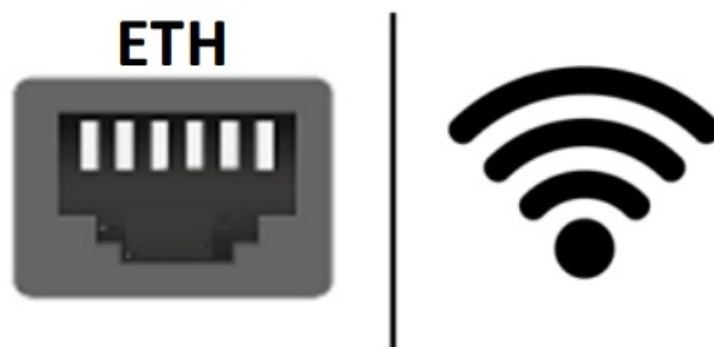

Step 6.

For more detailed instructions, documentation, how-to guides on IoTPortal Gateway and the software application, please visit: <https://bit.ly/iotportal-resources>



<https://bit.ly/lotportal-resources>

STICKER
AREA



Please visit

<http://bit.ly/system-warranty>

or scan the QR code for warranty registration with the UUID and Product Key below
STICKER AREA

Documents / Resources



[BRT Systems IoTPortal Gateway](#) [pdf] User Guide
IoTPortal Gateway, IoTPortal, Gateway

References

- [Resources - BRT Systems](#)