



BRYSTON BR-4 Infrared Remote Control Owner's Manual

[Home](#) » [BRYSTON](#) » BRYSTON BR-4 Infrared Remote Control Owner's Manual 

BRYSTON

BR-4 Infrared Remote Control Owner's Manual



BR-4 IR Remote Control

Contents

[1 General](#)

[2 Features](#)

[3 Configuring your BR-4](#)

[4 Controlling Your Equipment](#)

[5 3 Digit Serial Codes](#)

[6 IMPORTANT SAFETY](#)

[INSTRUCTIONS](#)

[7 BRYSTON LIMITED WARRANTY](#)

[8 Documents / Resources](#)

[8.1 References](#)

[9 Related Posts](#)

General

Welcome

Thank you for your purchase of Bryston's BR-4 infrared remote control. Among today's numerous options for controlling electronic equipment, the familiar IR remote control remains the most accessible and easy-to-understand option for the vast majority of listeners. Our BR-4 is designed to facilitate access to the most commonly used features in each of your compatible Bryston components at once.

Features

The BR-4 is designed to control virtually all modern Bryston electronics and to be intuitive to use while maintaining Bryston's legendary durability.

- Works with the following models: SP2, BP6, BP16, BP17, BP-17³, BP-18, BP26 Preamps
B60R, B100, B135 SST², and B-135³ Integrated Amplifiers
BCD1, BCD-3, BDP1, BDP1-USB, BDP2 Sources
BDA1, BDA2, BDA3, and BDA-3.14 D/A Converters
- Easy to feel buttons

Configuring your BR-4

Each model has a specific 3 code that must be entered to enable BR-4 control of that product. Press and hold the CODE button until the red LED flashes twice, then release the button. Usually, this takes about 5 seconds. While the LED remains steadily lit, enter a 3 digit code. The LED will flash twice after a valid code has been entered. There is no need to set any special codes when using the BR-4 remote with Bryston BCD-3 CD Player, BDA1,2 or 3 stand-alone digital to analog converter, or BDP digital player. Page 3 indicates which remote functions are available with each product.

Code	Product
711	SP1.7/SP2
712	B100/B135/BP16/BP17
715	BCD1, BCD3
716	BDA1, BDA2
717	BDA3 uses device ID 6
719	BDP3 uses device ID 9
721	BP25/BP26
722	B60/BP6
750	Select D/A to use the BDA3.14 volume control. Select Preamp to use the preamp volume control.
751	Preamp volume control is used in either D/A or Preamp mode.

Reset to factory default

Press `CODE` for 5 seconds, until the LED blinks. Release the `CODE` button. Press `795`, LED will blink 4 times.

Volume Function

By default, the volume buttons control the programmed pre-amp even when that mode is not selected

To use the BDA3.14 volume control:

Press `CODE` for 5 seconds, until the LED blinks, release the `CODE` button. Press `717`, LED will blink 2 times.

Press `CODE` for 5 seconds, until the LED blinks. Release the `CODE` button. Press `750`, LED will blink 2 times.

To use the pre-amp volume control:


Press `CODE` for 5 seconds, until the LED blinks. Release the `CODE` button. Press `751`, LED will blink 2 times."

Controlling Your Equipment

Each diagram below indicates which BR-4 buttons are available to control the specified Bryston equipment. Volume and mute controls are always enabled. To control the BCD1, press the CD button. To control the BDA and BDP products, press the DA button. Other Preamp controls (printed in blue on the remote) are enabled by pressing PREAMP.

3 Digit Serial Codes

Discrete serial codes are also available to control various functions of Bryston equipment. Certain codes can be sent either through the remote or via RS232. These codes are listed in the manual for each product. To send applicable codes by remote, quickly press and release the CODE button. Enter the three-digit code sequence quickly while pointing the remote at the device you'd like to control. See individual product manuals for available codes for each product.

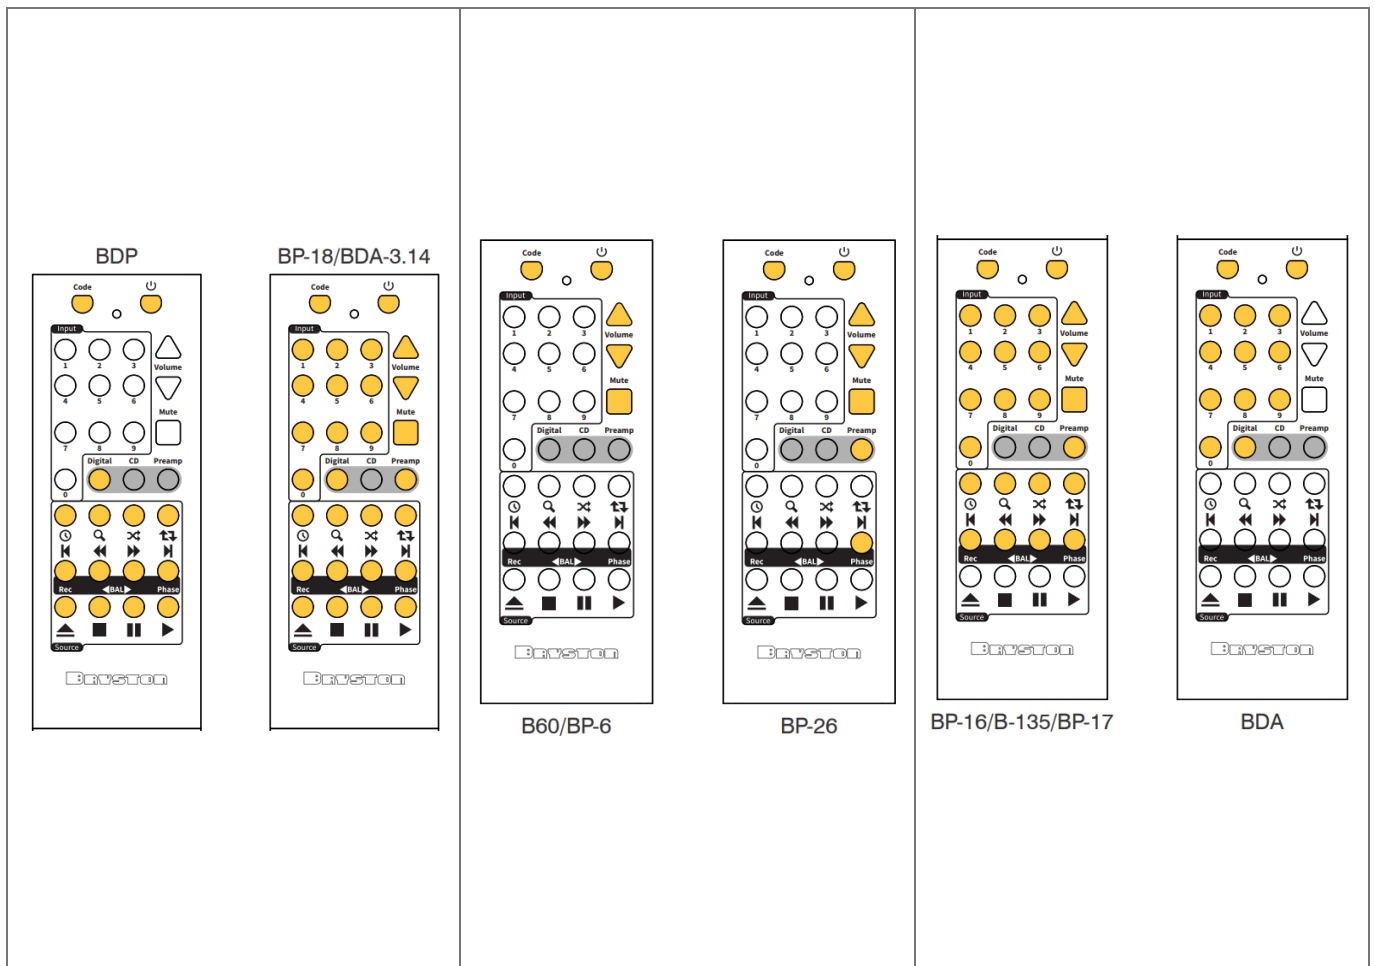

IMPORTANT SAFETY INSTRUCTIONS



The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO

RAIN OR MOISTURE. DO NOT EXPOSE THIS EQUIPMENT TO DRIPPING OR SPLASHING AND ENSURE THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ARE PLACED ON THE EQUIPMENT.

BRYSTON LIMITED WARRANTY

Bryston analog audio circuits are warranted to be free from manufacturing defects for twenty (20) years from the original date of manufacture. The warranty includes parts and labor.

Bryston Digital circuits and cables are warranted for five years from the original date of manufacture. The warranty includes parts and labor. Bryston products having motorized moving parts, excluding motorized volume controls, are warranted for three years from the original date of manufacture. The warranty includes parts and labor.

Bryston will remedy the problem by repair or replacement, as we deem necessary, to restore the product to full performance. Bryston will pay only return shipping costs for the full length of the specific product's warranty.

In the event of a defect or malfunction, contact Bryston's repair centers for return authorization. Products must be returned using original packaging material only. Packing material may be purchased from Bryston if necessary. This warranty is considered void if the defect, malfunction, or failure of the product or any component part was caused by damage (not resulting from a defect or malfunction) or abuse while in the possession of the customer. Tampering by persons other than factory authorized service personnel or failure to fully comply with Bryston operating instructions voids the warranty. This warranty gives you specific legal rights and you may also have other rights which may vary from province to province and country to country. As of 2006-02-22 Bryston will only warranty Bryston products purchased through authorized Bryston dealers. Bryston products with a date code of 0608 or higher (date code format is "we", where "yy" is the two least significant digits of the year and "WW" is the week of the year) must be accompanied by a copy of the bill-of-sale from a Bryston authorized dealer to qualify for warranty service. The warranty is transferable from the original owner to a subsequent owner as long as a copy of the bill-of-sale from the original authorized Bryston dealer accompanies the re-sale. The copy of the bill of sale to any subsequent owner needs ONLY include the Name of the Bryston Authorized Dealer and the Model and a Serial number of the Bryston product. The warranty will only be honored in the country of the original purchase unless otherwise pre-authorized by Bryston.

BRYSTON SERVICE in CANADA:

Postal address: P.O. BOX 2170, Stn. Main PETERBOROUGH, ONTARIO CANADA K9J 7Y4

Courier address: 677 NEAL DRIVE PETERBOROUGH, ONTARIO CANADA K9J 6X7

PHONE: 705-742-5325

FAX: 705-742-0882

E-mail: cdnser@bryston.ca

BRYSTON SERVICE in the USA:

Bryston Service The Gray Building, Classroom 4 168 N Main St Northfield VT 05663

PHONE: 802-334-1201

FAX: 802-334-6658

E-mail: usaser@bryston.ca

BRYSTON SERVICE outside Canada and the USA:

contact your local distributor or

CHECK OUR WEBSITE: www.bryston.ca

E-MAIL BRYSTON DIRECTLY: cdnser@bryston.ca



FAX BRYSTON DIRECTLY: 01-705-742-0882

PHONE BRYSTON DIRECTLY: 01-705-742-5325

Documents / Resources

	<p>BRYSTON BR-4 Infrared Remote Control [pdf] Owner's Manual BR-4, Infrared Remote Control</p>
---	--

References

-  [Bryston – Music for a Generation](#)
-  [Bryston – Music for a Generation](#)