



BSP Y01 Mini Game Console Instructions

[Home](#) » [BSP](#) » BSP Y01 Mini Game Console Instructions 

Contents

 
- 1 [BSP Y01 Mini Game Console](#)
- 2 [Function diagram](#)
- 3 [Instructions](#)
- 4 [Electrical parameters](#)
- 5 [Product instructions](#)
- 6 [Android Shooting PlusV3 model](#)
- 7 [iOS shootingPlus V3 model](#)
- 8 [Shaker charging/hibernation/wake-up function](#)
- 9 [Macro programming](#)
- 10 [TURBO](#)
- 11 [Operation mode](#)
- 12 [matters needing attention](#)
- 13 [Documents / Resources](#)
 - 13.1 [References](#)



BSP Y01 Mini Game Console



Function diagram

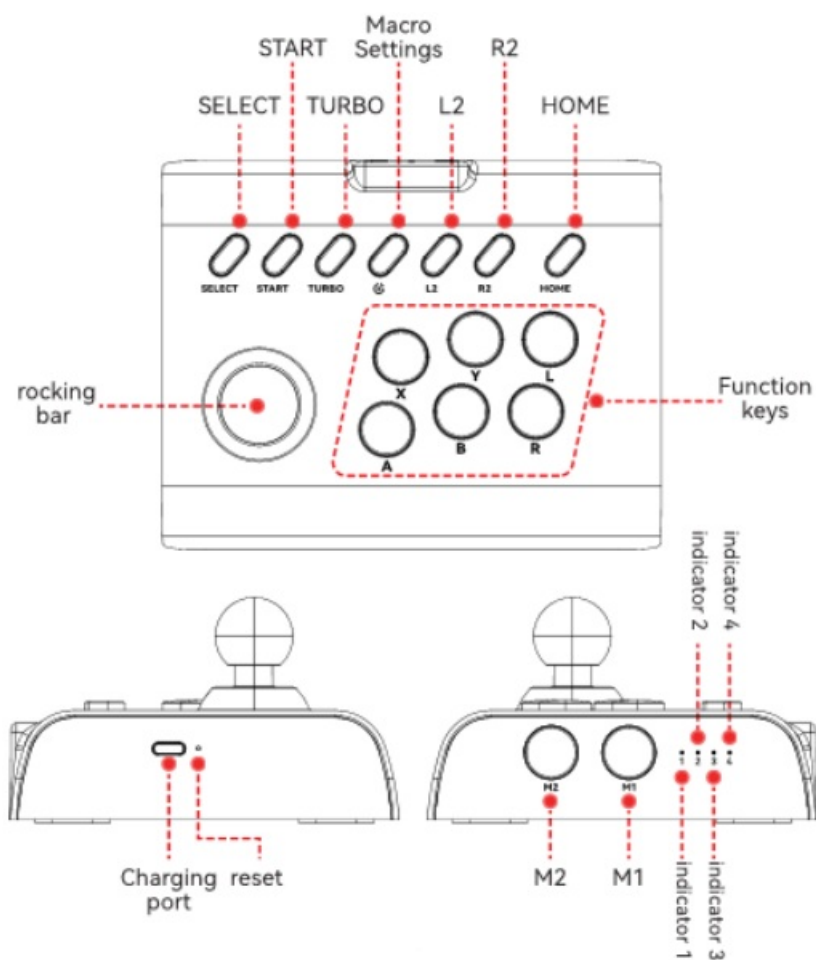

Instructions

1. This product is ergonomically designed and feels comfortable.
2. Bluetooth 5.0EDR/BLE connection is adopted, and the handle is connected to N-S and other hosts through

Bluetooth.

3. This handle is applicable to Switch, PS3/PS4, Android, iOS MFi/Apple Arcade, PC, Steam and other platforms.
4. ShootingPlus V3 APP is supported, which can be downloaded from various mobile application markets.
5. It supports Android and Hongmeng HID standard mode, and can play various game hall games that support HID standard mode.
6. MFi/AppleArcade games for iOS 13.0 and above are supported. MFi games can also be downloaded from Shanwan MFi app.
7. Support PS3/PS4/SWITCH game console Bluetooth connection to play games
8. Support Bluetooth connection of Windows 10 laptop and play X-Input games.
9. It supports USB cable and can play PC/PS3/SWITCH games.

Due to mobile phone system problems, some mobile phones may not support this device.

Due to irresistible factors such as software upgrade or source code change of the official game platform, some games cannot be connected with this product for operation, and our company will not be responsible. Our company reserves the right of final interpretation.

 
Electrical parameters

1. **Working voltage:** DC3.7V
2. **Working current:** <35mA
3. **Duration:** >10H
4. **Sleep current:** <5uA
5. **Charging voltage/current:** DC5V/500mA
6. **Bluetooth transmission distance:** <=8M
7. **Standby time:** 30 days at full power

Product instructions

SWITCH model:

On the SWITCH host, select the handle Controllers ->Change grip/order- ChangeGrip/order
Enter the SWITCH host pairing mode interface Press L+R on the controller. At the same time, press the "R2+HOME" key for 2 seconds to enter the SWITCH mode pairing, and the LED light will flash. If the pairing is successful, the "indicator 4" will be on for a long time.
It has been successfully connected. You can press the HOME key directly, and the LED will flash, and the connection will be automatically returned.

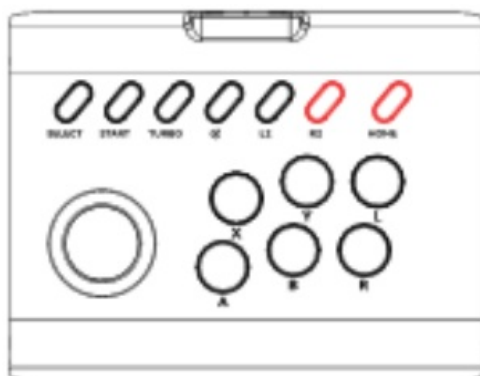


PS3/PS4/PS5 model

Connect the handle directly to the PS3/PS4/PS5 host with the TYPE-C USB data cable, press the “HOME key” to pair, and after the pairing is successful, the “indicator 1” of the shaking table will be on for a long time. It has been successfully connected. You can press the HOME key directly, and the LED will flash slowly and automatically connect back.

Be careful:


 
1. There is no touch pad function under PS4 and PS5 hosts;
2. Only PS4 games can be played under the PS5 console.

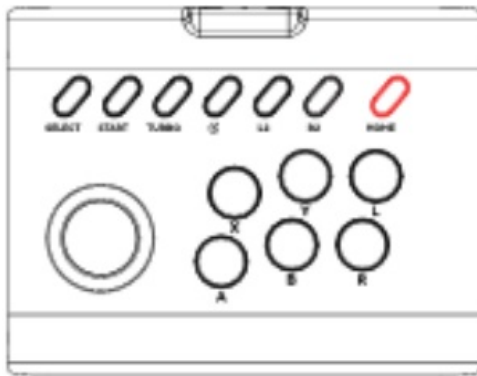

Android Shooting PlusV3 model

Harmony system is the same as Android ShootingPlus V3 mode

  At the same time, press the “A+HOME” key for 2 seconds to enter the V3 Android mode, and the rocker lamp will flash. When the Android phone searches for the “BSP-Y01” device name, select Connect. After the connection is successful, the rocker “indicator 4” will be on for a long time. You have successfully connected. You can press the HOME key directly, and the light will flash slowly and automatically connect back.

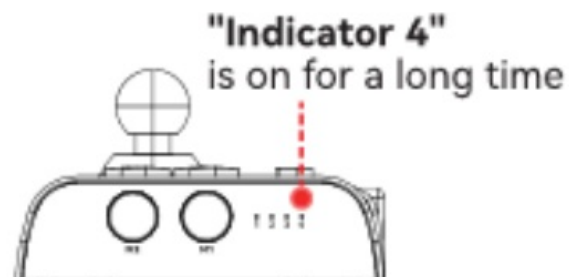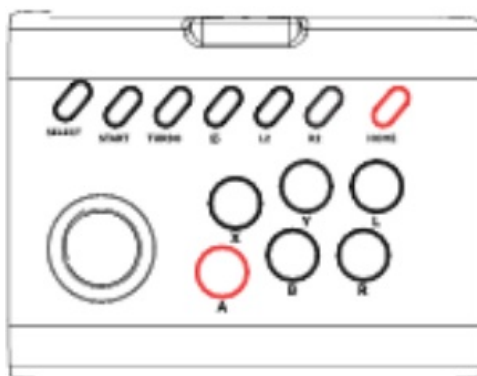

iOS shootingPlus V3 model

At the same time, press the “Y+HOME” key for 2 seconds to enter the V3 iOS mode, and the turntable lamp will flash quickly. When Apple searches for the “BSP-YO1” device name, select Connect. After the connection is successful, the rocker “indicator 3” will be on for a long time. You have successfully connected. You can press HOME directly, and the light will flash slowly and automatically connect back.

Android/Hongmeng/ios key mapping function

 
Follow the official account “ShootingPlus” and check the default operating instructions in the official account. If you need to set the mapping keys, please download and install the “Shooting- PlusV3” APP, map the keys and

adjust the key positions in the APP. ShootingPlusV3 App, iOS system can be downloaded from APP Store, and Android and Hongmeng system can be downloaded from various mobile application markets.




Android standard mode

1. At the same time, press the “X+HOME” key to enter the standard Android mode, and the rocker lamp will flash quickly. When the Android/Hongmeng mobile phone searches for the “BSP-Y01” device name, select Connect. After the connection is successful, the rocker “indicator 2” will be on for a long time. You have successfully connected. You can press the HOME key directly. and the light will flash slowly and automatically connect back.
2. Android/Hongmeng standard mode game download can download various game halls and enter the platform to download the required games.

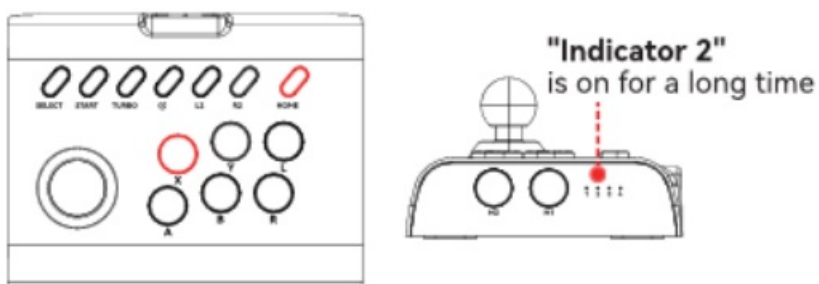


IOS MFi/Apple Arcade mode (iOS 13.0 or above):

 At the same time, press the “B+HOME” key for 2 seconds to enter the iOS MFi mode, and the rocker lamp will flash quickly. When Apple searches for the device name of “DUALSHOCK 4 Wireless Controller”, select Connect. , select Connect. After the connection is successful, the “indicator 1” of the shaking table will be on for a long time You have successfully connected. You can press the HOME key directly, and the light will flash slowly and automatically connect back. MFi games can also be downloaded from the ShanWan MFi app.

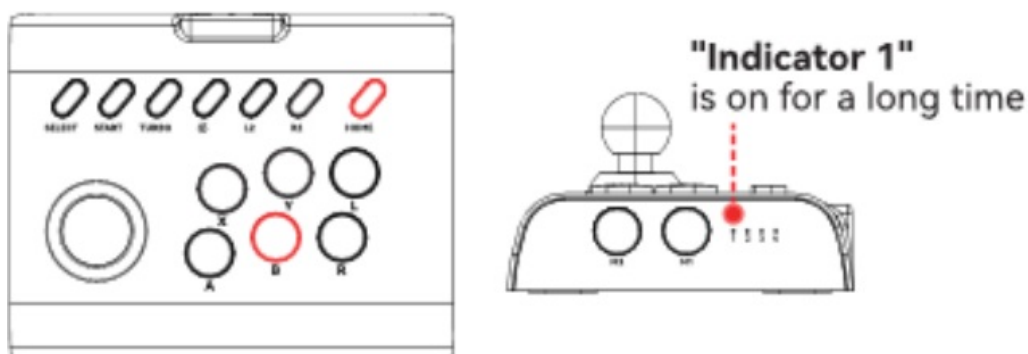

PC2.4G computer receiver mode:

 1. At the same time, press the “L+HOME” key for 2 seconds to enter the computer mode, the rocker lamp will flash quickly, the PC connection mode, and the computer receiver will be plugged into the computer. After the connection is successful, the “indicator light 3 and 4” of the shaking table will be on for a long time. You have successfully connected. You can press the HOME key directly, and the light will flash slowly and automatically connect back.
2. In the computer receiver mode, press the “SELECT+START” key for 2 seconds at the same time to Switch between PC/PS3 mode and XBOX360 mode.

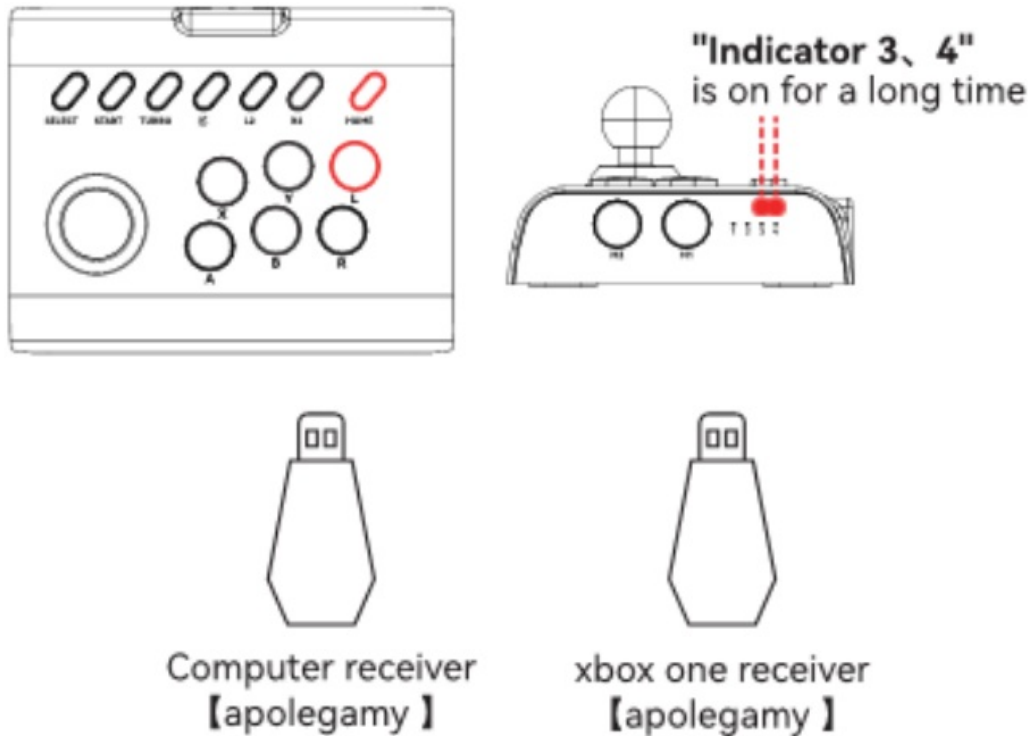

Wired mode:

1. Automatically identify each system platform in wired mode. The supported system platforms include Android, PC (D-input and X-input), PS3 and SWITCH
2. On the PC, press the HOME key for 2 seconds to switch between PC/PS3 mode and XBOX360 mode.

Bluetooth mode:

At the same time, press the “R+HOME” key for 2 seconds to enter the computer Bluetooth mode, and the console lamp will flash quickly. Open the computer to find the Bluetooth device to add, click Search, find the xbox wireless cotroller, click Connect, and the connection is successful. The console “indicator lights 2, 3, and 4” will stay on. You have successfully connected. You can directly press HOME to automatically connect back.

 
Shaker charging/hibernation/wake-up function

1. Swing table charging function:
 - A. When the power is low, the light will flash quickly,
 - B. When charging, the light will flash slowly;
 - C. When it is full, the light effect is off;
2. Shaker sleep/wake-up/shutdown function:
 - A. The handle will automatically shut down and sleep when there is no key operation within 5 minutes;
 - B. When you need to use it again, you need to press the HOME key to wake up the handle and connect it

back;

Macro programming

Macro Extension Settings:

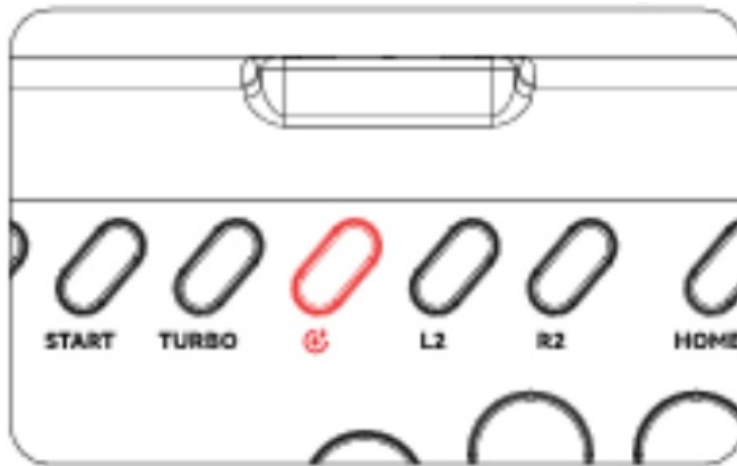

1. Press and hold the front programming key of the shaking table and then press the side M1 key. At this time, the indicator light will flash quickly. This is the setting mode. [M2 setting is the same as above]
2. When the setting mode is turned on, the HOME light will flash quickly. At this time, you can set the key, and the key that the handle presses will be entered into the M1 key. For example, press key A once, and then A will be entered into M1 [This key is for enumeration: other key positions can also be entered]
3. To set multiple keys: press A, then B, then X, then Y, and then press M1 to move in the order of A BXY
This key is set to list: 12 ABXY/up, down, left and right/LB/LT/RB/RT can be set for other play sequences
4. After pressing the key, press M1 again to complete the program- ming. At this time, the light is always on

Macro programming clear:

Press the programming key+M1 key of the handle to enter the programming mode. At this time, the Home key light flashes quickly. Do not type any key value at this time. Press the M1 key again to eliminate the key value set before the M1 key

TURBO

- Press “A” and then press “TURBO”, then the “A” key will be used to send TURBO repeatedly
- Press “A” for the second time and then press “TURBO”, then the “A” key will automatically send in succession
- Press “A” for the third time and then press “TURBO”, then the “A” key will turn off the burst (restore to the original state)
- When the “A” key is in the case of automatic continuous firing, press and hold the “TURBO+rocker up and down” to set the speed of automatic continuous firing, which is 15 times per second, 25 times per second and 8 times per second respectively.(Note: other function key settings are the same as above)

Operation mode

Bluetooth model :

Applicable system	Android/Harmony System		iOS system	
Working mode	ShootingPlus V3	Android standard mode	iOS MFi mode	ShootingPlus V3
Mode pairing (Press and hold for 2 seconds)	A+HOME key	X+HOME key	B+HOME key	Y+HOME key
indicator	Indicator light 4 is on for a long time	Indicator light 2 is on for a long time	Indicator light 1 is on for a long time	Indicator light 3 is on for a long time
remarks	Play games downloaded from Android Market	Play Android HID game hall game	Play MFi games Shanwan MFi App can be downloaded	Play iOS 13.4 or more games downloaded from App Store with single touch


Computer receiver and data line mode:

Working mode	computer / PC	PS3 / PS4 / PS5	Switch
Mode pairing (Press and hold for 2 seconds)	L key+HOME key	Plug in USB data cable	R2 key+HOME key or plug in USB
indicator	Indicator light 3, 4 is on for a long time	Indicator light 1 is on for a long time	Indicator light 4 is on for a long time
remarks	Play X-input game	Play PS3/PS4 games	Play Switch games

matters needing attention

1. Please do not store this product in a damp or high temperature place.
2. Do not knock, fall, stick, puncture, or attempt to disassemble this product to avoid unnecessary damage to the product.
3. The product has a built-in battery. Do not discard it with garbage.
4. Do not charge the handle near fire or other heat sources.
5. Non-professional personnel should not disassemble this product, otherwise it will not be included in the after-sales warranty service.

Documents / Resources

	BSP Y01 Mini Game Console [pdf] Instructions Y01 Mini Game Console, Y01, Mini Game Console, Game Console, Console
---	--

References

- [User Manual](#)

