

BSR idware GmbH RK25 Series Rugged Mobile Computer User Guide

Home » BSR idware GmbH » BSR idware GmbH RK25 Series Rugged Mobile Computer User Guide 🖺



Contents

- 1 Open Your Box
- 2 Overview
- 3 Install & Remove Battery
- 4 Install SIM, SAM, SD card
- 5 Charging &
- Communication
- 6 Documents / Resources


Open Your Box

- ☑ RK25 Mobile Computer (28-Key Model or 25-Key Mcdel)
- AC Adapter (Optional)
- Micro USB Cable (Optional)
- ☑ Snap-on Charging & Communication Cable (Optional)
- ☑ Hand Strap (Optional)
- ☑ Quick Start Guide

BSR idware GmbH

JakobeHaringer-Str.3 A-5020 Salzburg https://www.bsr.at sales@bsr.at

Overview

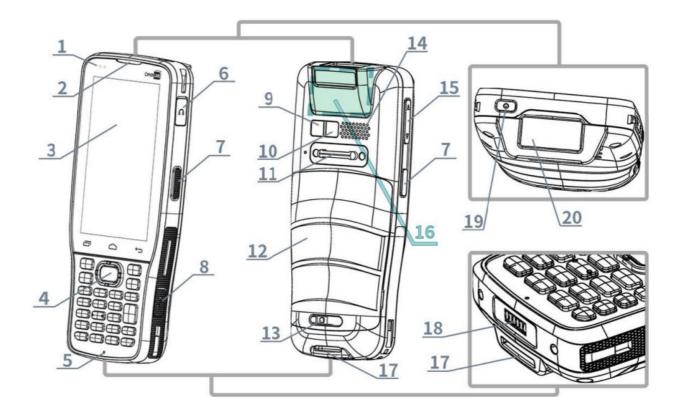

- 1. Status LED
- 2. Receiver
- 3. Touchscreen
- 4. Scan Key
- 5. Microphone
- 6. Headset Jack
- 7. Side-Trigger
- 8. Micro USB Port
- 9. Camera
- 10. Camera Flash

- 11. Wrist Band Hole
- 12. Battery (with battery cover)
- 13. Battery Cover Latch
- 14. Speaker
- 15. Volume Buttons
- 16. NFC Detection Area
- 17. Wrist Band Hole
- 18. Charging & Communication Pirs
- 19. Power Button
- 20. Scan Window

Communication with NFC

- **Step 1:** On the mobile computer, launch an NFC enabled application.
- Step 2: Hold the mobile computer without covering NFC detection area.
- **Step 3:** Simply move the mobile computer in proximity with the NFC tag or device until the application indicates data transfer is complete.




Install & Remove Battery

Please follow the steps to remove and install the main battery.

Step 1: Keep pressing down the lock button on battery latch.


Step 2: Slide the battery latch rightward to the "Unlock" position.

The battery cover slightly tilt up and is ready to be removed.

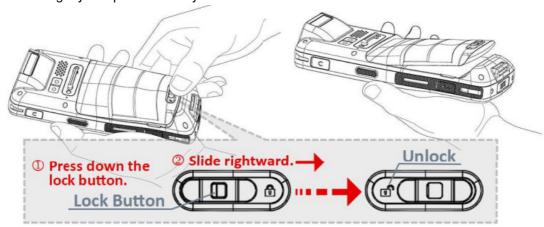


Step 3:

By holding the two sides of the battery cover, lift up the main battery (which is with the battery cover) from its lower end to remove it.

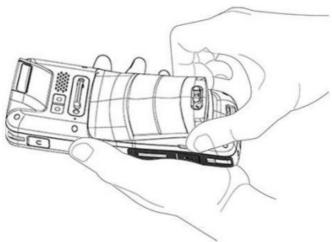


Step 4:

Insert a fully-charged main battery from its upper end, and then press down the lower edge of the battery.

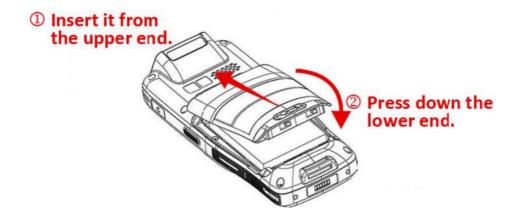

 
Step 5: Slide the battery latch leftward to "Lock" position.



Note: Please insert a charged battery, and make sure the battery latch is at the "Lock" position before powering on the device.

Install SIM, SAM, SD card


Step 1: Remove the battery which is with the battery cover.

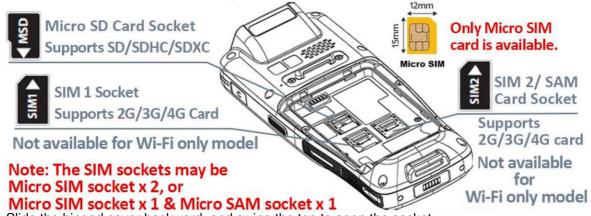

Step 2: Slide the hinged cover backward, and swing the top to open the socket.

Step 3: Place the card into the socket with its metal contacts downward.

Step 4: Close the hinged cover, and then push it toward to lock.

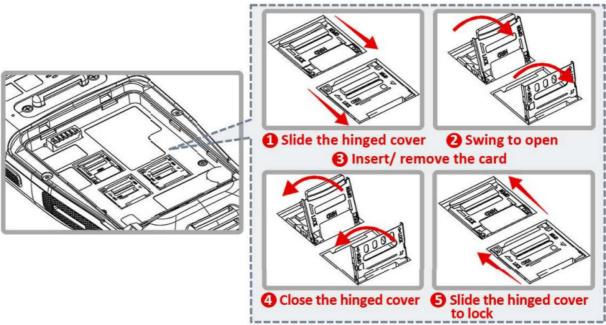


Step 5: Place the battery cover back and push the battery latch to the "Lock" position.

Charging & Communication



By USB cable:

Insert a micro USB cable into its port on the right side of the RK25 mobile computer. Connect another end to PC/Laptop for charging/data transmission.

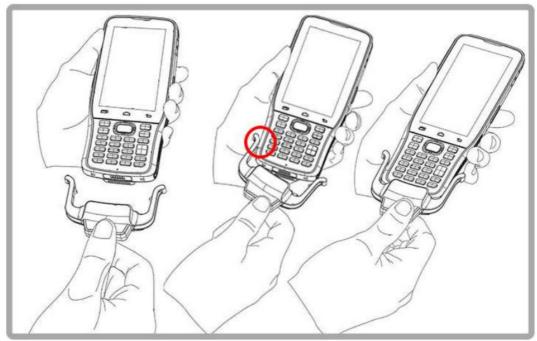

By Snap-on Charging & Communication cable:

Hold the snap-on cup toward the bottom of the RK25 mobile computer, and push the snap-on cup upwards to make it attach to the RK25 mobile computer.

Connect the USB plug to the approved adapter for external power connection, or plug it to the USB port of PC/laptop for charging/data transmission.

Important Charging Information	
Power Supply	Input: AC 100-240 V, 50/60 Hz Output: DC 5V, 2A, CipherLab approved BSMI, CCC, FCC, CE, RCM, PSE, PSB, BIS, KC
Battery Pack	3.8V, 4000mAh rechargeable Li-polymer battery CipherLab proprietary
Charging Time	Approx. 4 hours via adapter





Copyright© 2018 CipherLab Co., Ltd.

Documents / Resources



BSR idware GmbH RK25 Series Rugged Mobile Computer [pdf] User Guide RK25 Series Rugged Mobile Computer, RK25 Series, Rugged Mobile Computer, Mobile Computer, Computer