



BTF-LIGHTING RC0  
Series 2.4GHz RF 4  
Zone Remote  
Control



# BTF-LIGHTING RC0 Series 2.4GHz RF 4 Zone Remote Control Instruction Manual

[Home](#) » [BTF-LIGHTING](#) » BTF-LIGHTING RC0 Series 2.4GHz RF 4 Zone Remote Control Instruction Manual 

## Contents

- [1 BTF-LIGHTING RC0 Series 2.4GHz RF 4 Zone Remote Control](#)
- [2 Product Size](#)
- [3 Button Instruction](#)
- [4 Linking and Unlinking Instruction](#)
- [5 Unlinking Code Instructions](#)
- [6 Group Control](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)



**BTF-LIGHTING**  
Shenzhen BTF-LIGHTING Technology Co., Limited

 
 
**BTF-LIGHTING RC0 Series 2.4GHz RF 4 Zone Remote Control**



## Features



This product adopt world-wide used 2.4GHz frequency, GFSK control method, with the features of low power consumption, long distance transmitting, strong anti-interference and fast changing, communication color rate. Temperature It can adjust, control our saturation 2.4GHz and RF brightness smart lights changing. and controllers with color

## Product Size

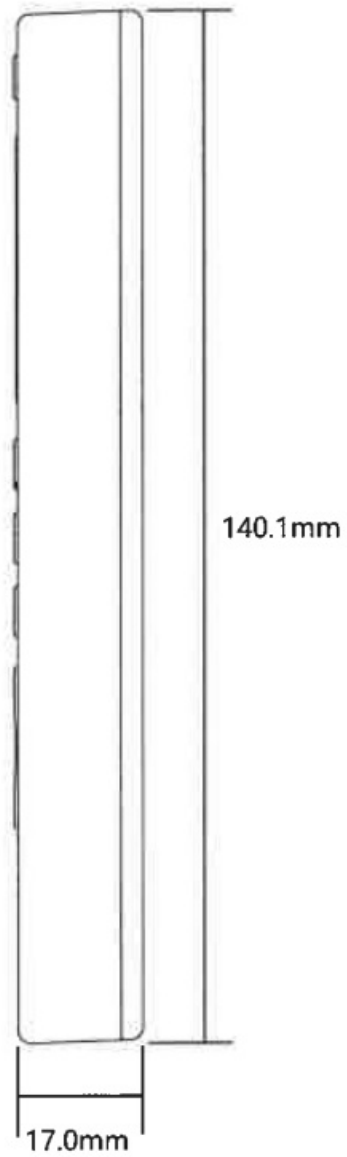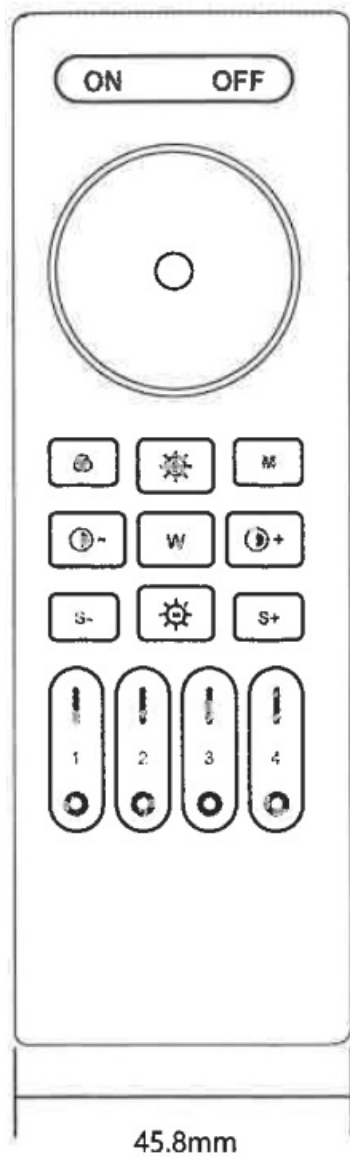

## Button Instruction

  **RC01 RF/RC01 RFB: 4-Zone Dimming Remote Control**

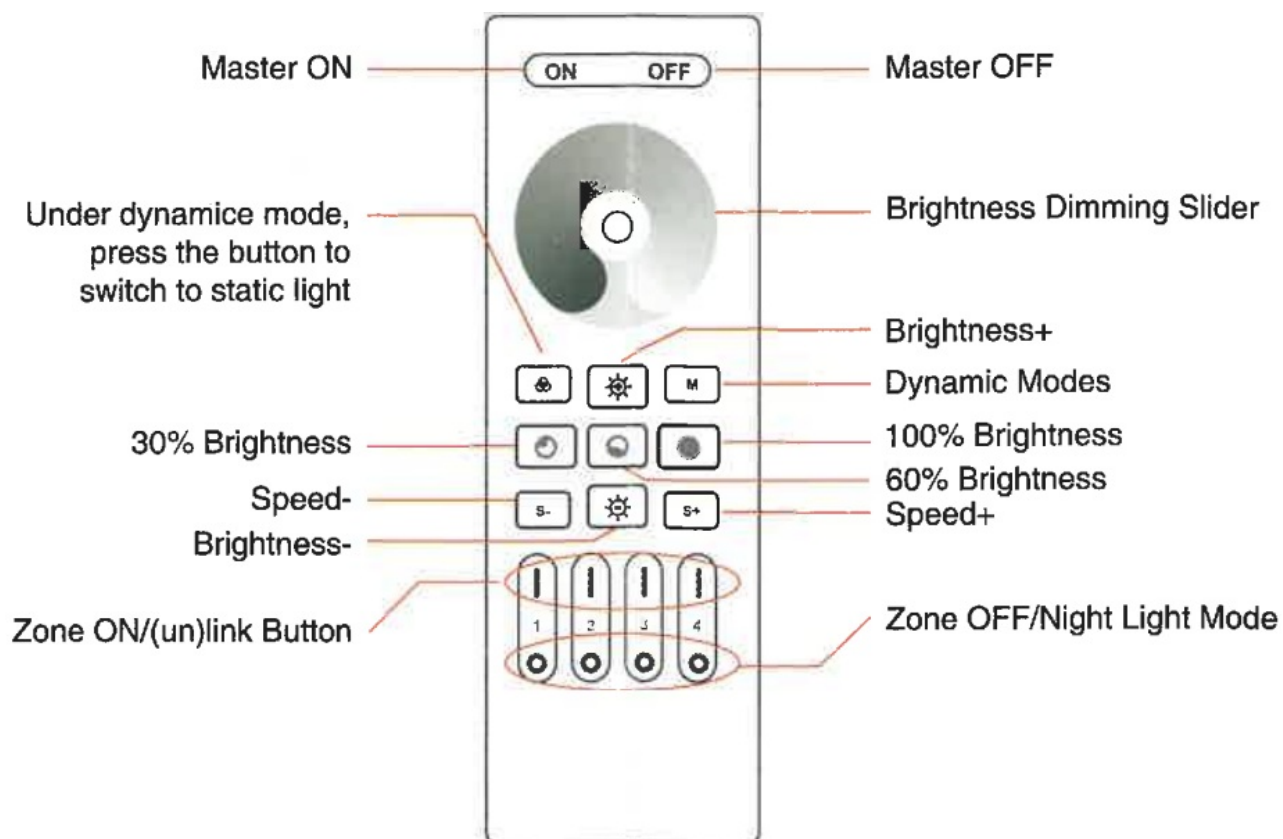

Press the button to turn ON all linked devices.



Press the button to turn OFF all linked devices.



Touch the slider to dim the brightness from 1%-100%.



Under dynamic mode, press the button to switch to static light.



Press the button to switch the dynamic modes repeatedly.



Press the button to dim the brightness up.



Press the button to dim the brightness down.



Press the button to dim the brightness down.



 
Press the button to get the 60% brightness.




Press the button to get the 100% brightness.



Lower the dynamic mode speed.



Accelerate the dynamic mode speed.

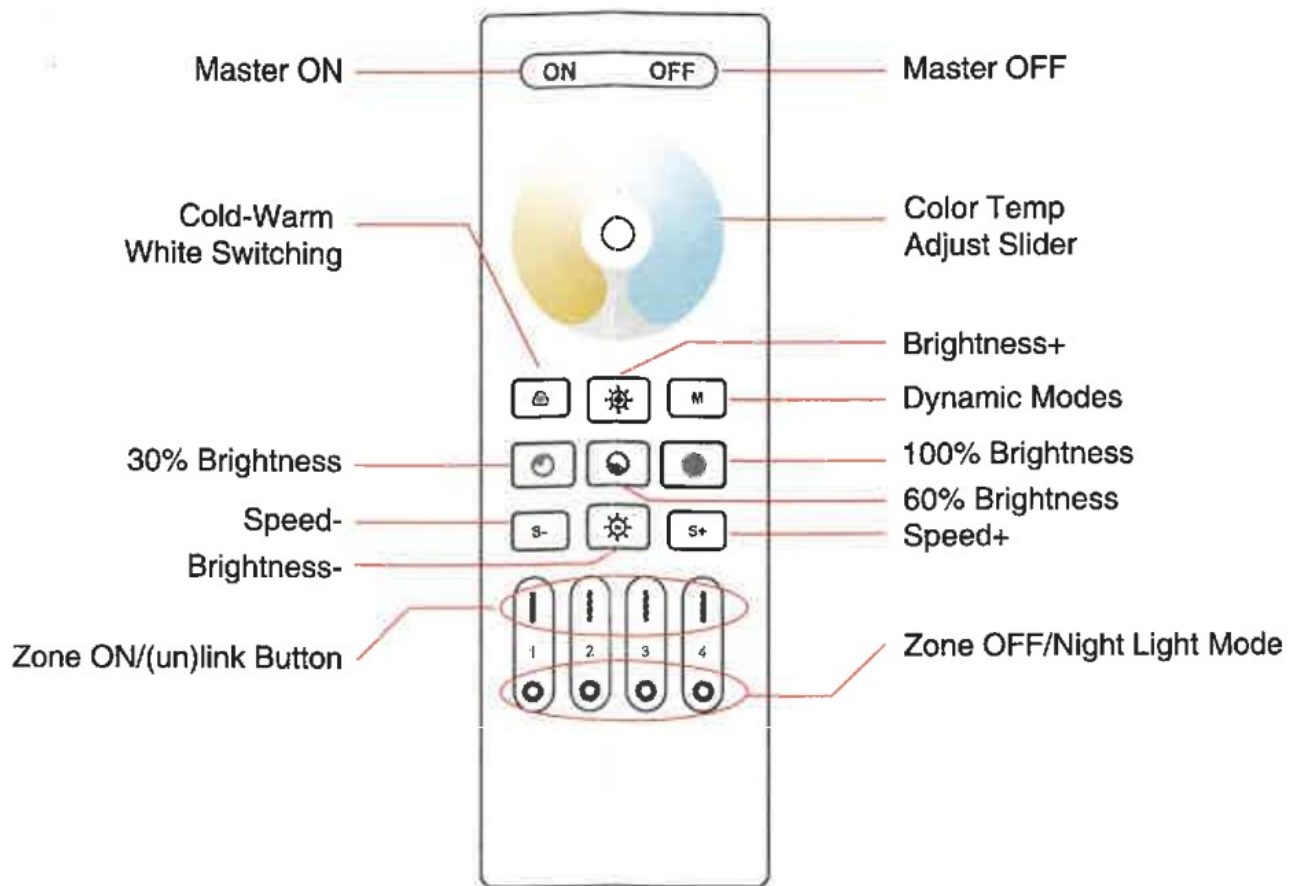 

**ON**

Press the button to turn ON all linked devices.

**OFF**

Press the button to turn OFF all linked devices.



Touch the slider to dim the brightness from 1%-100%.



Press the button to switch the cool white, nature white and warm white repeatedly.



Press the button to switch the dynamic modes repeatedly.



Press the button to dim the brightness up.



Press the button to dim the brightness down.



 
Press the button to get the 30% brightness.




Press the button to get the 60% brightness.




Press the button to get the 100% brightness.



Lower the dynamic mode speed.

 

Accelerate the dynamic mode speed.

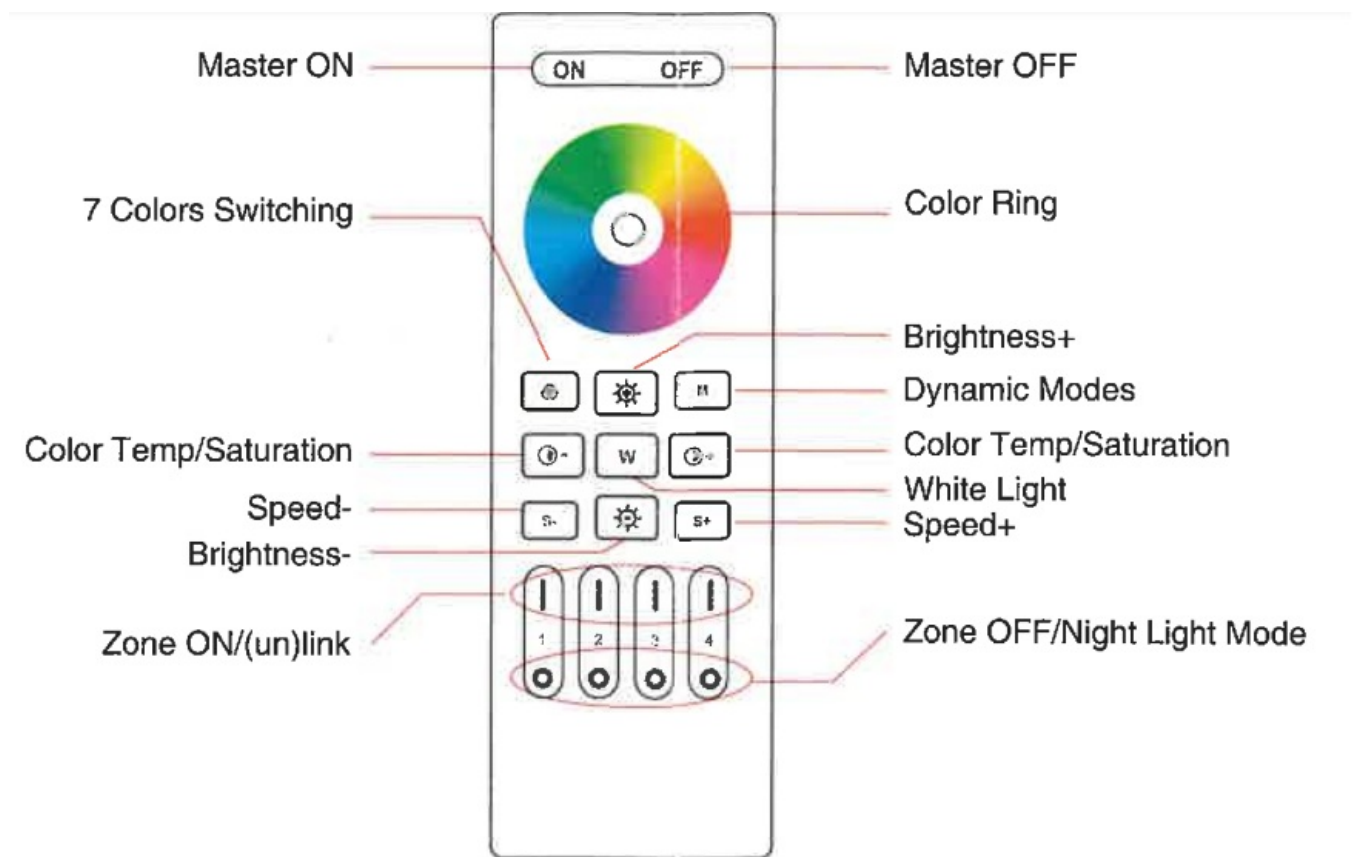 

**ON** Press the button to turn ON all linked devices.

 
**OFF** Press the button to turn OFF all linked devices.



Touch the color ring to change the colors.




Short press the button to switch the pure colors from orange, yellow, green, cyan, blue, purple and red repeatedly.



Long press the button to switch the pure colors from orange, yellow, green, cyan, blue, purple and red gradually. Press the button to get white light.



 
Under white light mode, press the button to change the white light to cold white. Under color light mode, press the button to reduce the saturation.



Under wolor light mode, press the button to add the saturation light to warm white.



 Press the button to switch the dynamic modes repeatedly.




Press the button to dim the brightness up.



Press the button to dim the brightness down.



 Lower the dynamic mode speed.




Accelerate the dynamic mode speed.

## Linking and Unlinking Instruction

 **Remark:** The light can be working after linking with the remote.


### Linking Code Instructions

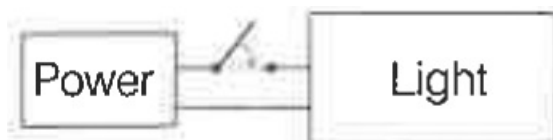

1. Switch off light, after 10 seconds then switch on again.



 2. Short press '1' button 3 times with 1 3 seconds when light on.

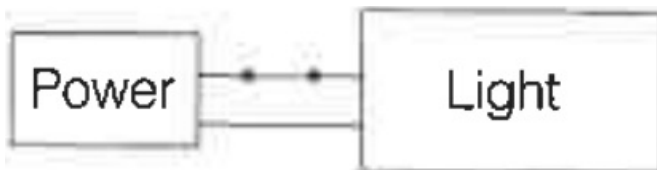


3. Lights blink 3 times slowly means linking is done successfully.



Linking failed if light is not blinking slowly, Please follow above steps again.  
(Note: Light that have linked can't link again)

### Unlinking Code Instructions

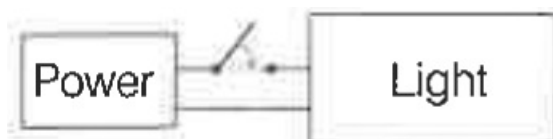 


1. Switch off light, after 10 seconds then switch on again.

2.



 Short press "I" button 5 times within 3 seconds when light on.

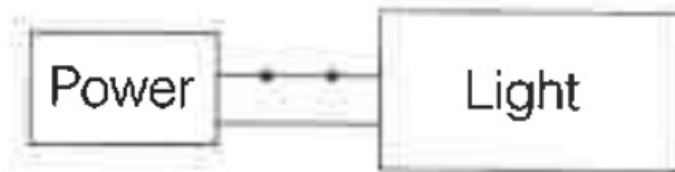


3. Lights blink 10 times quickly means unlinking is done successfully.



Unlinking failed if light is not blinking quickly, Please follow above steps again.  
(Note: Light haven't linked that don't need to unlink)

### Group Control

 You can add an endless numbers of lights to a zone on the 4 channel remote by linking the lights to different zones. This way you are completely flexible in creating different group combinations. Below you can see some grouping examples.

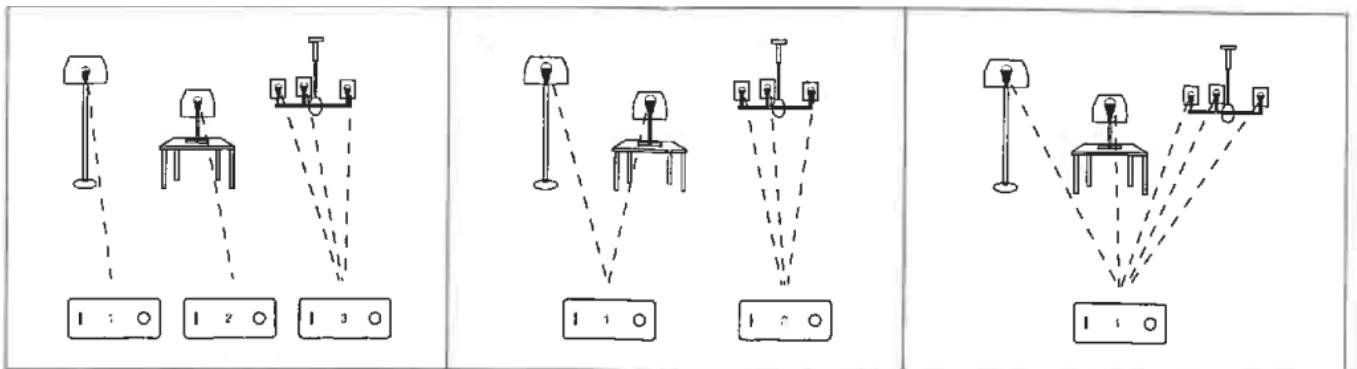

### Remark:

1. The user can re-programme freely as needed. One remote can control countless lamps or controllers, but one lamp or controller can only be controlled by five remotes (Max).
2. Please check the battery installation and controller (totally discharge the power), when you programme after switching off and switching on.




## Attention

1. This remote only control our 2.4GHz RF products; cannot control other products not made by us.
2. In the using of the remote, if the indicated lamp blinking quickly, Please change the battery in time. Please don't use poor quality battery to avoid the leaking of battery liquid to damage the remote.
3. This 2.4GHz remote is precise electronic product; don't use it in humid, high temperature, dust and high voltage environment; Saving it at indoor, dry and no static electricity environment.
4. Please don't use the remote on the wide-range metal or strong electromagnetic wave area, otherwise, it will badly affect the controlling distance.

## Made in China

## Documents / Resources

	<a href="#">BTF-LIGHTING RC0 Series 2.4GHz RF 4 Zone Remote Control</a> [pdf] Instruction Manual RC01RFB-DIMMING, RC0 Series 2.4GHz RF 4 Zone Remote Control, RC0 Series, 2.4GHz RF 4 Zone Remote Control, RF 4 Zone Remote Control, 4 Zone Remote Control, Remote Control, Control
---	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.