

# BTF-LIGHTING V3 + R8-1 RGB LED Strip Controller Kit User Guide

Home » BTF-LIGHTING » BTF-LIGHTING V3 + R8-1 RGB LED Strip Controller Kit User Guide 1



#### **Contents**

- 1 BTF-LIGHTING V3 + R8-1 RGB LED Strip Controller
- 2 Features
- **3 Technical Parameters**
- **4 Mechanical Structures and Installations**
- **5 Wiring Diagram**
- **6 Remote function**
- 7 Match Remote Control (two match ways)
- 8 Application notes
- 9 Dynamic mode list
- 10 Malfunctions analysis & troubleshooting
- 11 Documents / Resources
- **12 Related Posts**



BTF-LIGHTING V3 + R8-1 RGB LED Strip Controller Kit



Model No.: V3 + R8-1

3 channels constant voltage/Touch color wheel/Step-less dimming/Wireless remote 30m distance



#### **Features**

- Mini style controller with 3 channel constant voltage output.
- Ultra sensitive color adjustment touch wheel.
- · Smooth dimming and switch without any flickering.
- Built in 10 dynamic mode, include jump or gradual change style.
- Independent dimming function of each R, G, B channel to achieve millions of colors.
- Auto-transmitting function: Controller automaticly transmit signal to another controller with 30m control distance.
- Synchronize on multiple number of controllers.

## **Technical Parameters**


| Dimming data  |             |
|---------------|-------------|
| Dimming level | 4096 levels |
| Dimming range | 0 -100%     |
| Dimming curve | Logarithmic |
| PWM Frequency | 750Hz       |


| Warranty and Protection |                  |
|-------------------------|------------------|
| Warranty                | 5 years          |
| Protection              | Reverse Polarity |

| LED Remote's Input and Output |              |  |
|-------------------------------|--------------|--|
| Output signal                 | RF(2.4GHz)   |  |
| Working voltage               | 3VDC(CR2032) |  |
| Working current               | 5mA          |  |
| Standby current               | 10μΑ         |  |
| Standby time                  | 1 year       |  |
| Remote distance               | 30m          |  |


| Safety and EMC       |                    |  |
|----------------------|--------------------|--|
| EMC standard (EMC)   | EN301 489,EN 62479 |  |
| Safety standard(LVD) | EN60950            |  |
| Radio Equipment(RED) | EN300 328          |  |
| Certification        | CE,EMC,LVD,RED     |  |

## **Mechanical Structures and Installations**

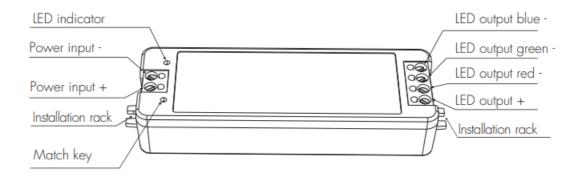


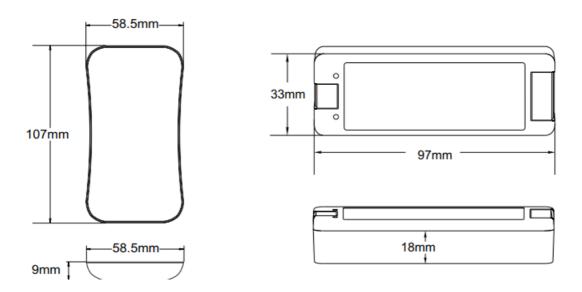

## **Wiring Diagram**

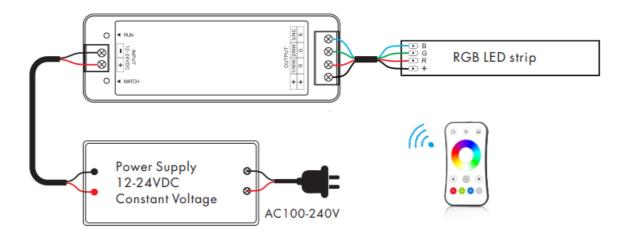

**Remote function** 

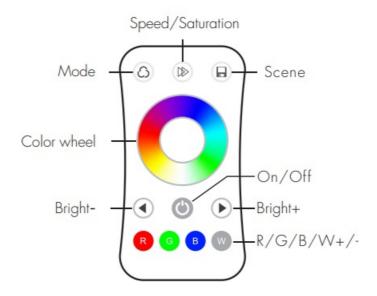

- On/Off: Turn on/off light.
- Color wheel: Touch to change static RGB color.
- Mode: Short press run the next dynamic mode, long press 2s run mode cycle.
- **Speed/Saturation:** For dynamic mode, adjust speed, short press 10 levels, long press 2s get the default speed. For static color, adjust saturation, namely change current static RGB color to mixed white slowly, short press 11 levels, long press 1-5s for continuous 256 levels adjustment.
- Bright+/-: Adjust brightness, short press 10 levels, long press 1-5s for continuous 256 levels adjustment.
- R/G/B: Short press get red, green or blue color directly,
- long press 1-5s adjust R/G/B brightness continuously to achieve millions of colors.
- W+/-: Short press turn on/off white(RGB mix), long press 1-5s adjust saturation continuously, namely change current static RGB color to mixed white slowly.
- Scene: Short press recall the scene, long press 2s save the current color into the scene.
- When light is on, touch the color wheel, the indicator will display red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

## Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

## · Use the controller's Match key

#### Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) of the remote.

#### Delete:

Press and hold match key for 5s to delete all match, The light blinks 5 times means all matched remotes were deleted.

## Use Power Restart

#### Match:

 
Switch off the power, then switch on power again, immediately short press on/off key 3 times on the remote. The light blinks 3 times means match is successful.

#### o Delete:

Switch off the power, then switch on power again, immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

## **Application notes**

All the receivers are matched with one RF remote.



#### RF remote

- Auto-transmitting: One receiver can transmit the signals from the remote to another receiver within 30m, as long as there is a receiver within 30m, the remote control distance can be limitless.
- Auto-synchronization: Multiple receivers within 30m distance can work synchronously when they are controlled by the same remote, under same dynamic mode and with same speed.
- Receiver placement may offer up to 30m communication distance. However, we recommend for indoor applications that receiver placements should be no further apart than 15m.

## Dynamic mode list

| No. | Name                      | No. | Name                  |
|-----|---------------------------|-----|-----------------------|
| 1   | RGB jump                  | 6   | RGB fade in and out   |
| 2   | RGB smooth                | 7   | Red fade in and out   |
| 3   | 6 color jump              | 8   | Green fade in and out |
| 4   | 6 color smooth            | 9   | Blue fade in and out  |
| 5   | Yellow cyan purple smooth | 10  | White fade in and out |

## Malfunctions analysis & troubleshooting

| Malfunctions  | Causes                                      | Troubleshooting                 |
|---|---|---------------------------------|
|   | 1. No power.                                | 1. Check the power.             |
| No light  | 2. Wrong connection or insecure.            | 2. Check the connection.        |
| Wrong color   | 1. Wrong connection of R/G/B wires.         | 1. Reconnect R/G/B wires.       |
| Uneven intensity bet<br>ween front and rear,w<br>ith voltage drop | 1. Output cable is too long.                | Reduce cable or loop supply.    |
|   | 2. Wire diameter is too small.              | 2. Change wider wire.           |
|   | 3. Overload beyond power supply capability. | 3. Replace higher power supply. |
|   | 4. Overload beyond controller capability.   | 4. Add power repeater.          |
|   |   |                                 |
|   | 1. The battery has no power.                | 1. Replace battery.             |
| No response from the remote                                       | 2. Beyond controllable distance.            | 2. Reduce remote distance.      |
|   | 3. The controller did not match the remote. | 3. Re-match the remote.         |

## **Documents / Resources**



BTF-LIGHTING V3 + R8-1 RGB LED Strip Controller Kit [pdf] User Guide V3 R8-1 RGB LED Strip Controller Kit, V3 R8-1, RGB LED Strip Controller Kit, RGB LED, Strip Controller Kit, LED Controller Kit, RGB Controller Kit

Manuals+,