



## bubbli BBACTGMPLTA Activity Gym Playmat User Guide

[Home](#) » [bubbli](#) » bubbli BBACTGMPLTA Activity Gym Playmat User Guide 

**bubbli**

ACTIVITY GYM PLAYMAT  
BBACTGMPLTA  
USER GUIDE




## Contents

- [1 ASSEMBLY](#)
- [2 Disposal](#)
- [3 NOTES](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

## ASSEMBLY

### Step 1:

Unscrew the back panel and install x3 "AA" batteries (not included) into the Piano. Pay close attention to the polarity (+/-) markings when inserting.

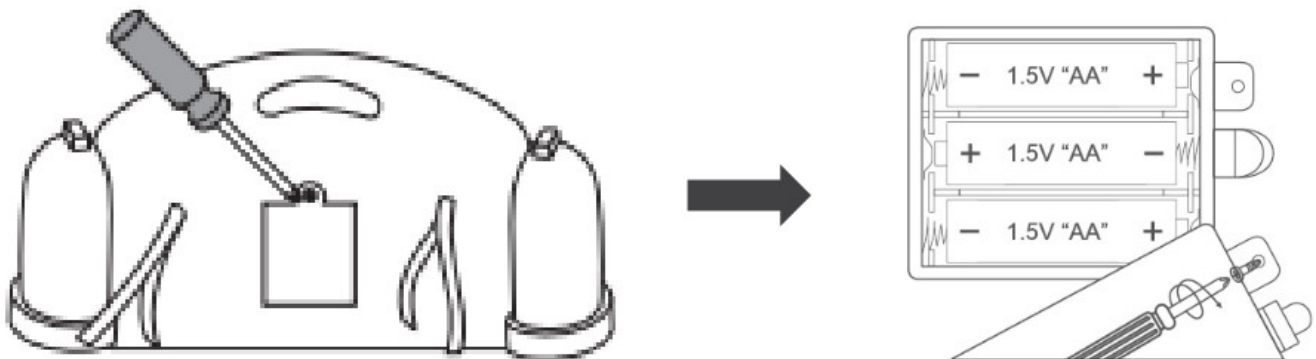

### Step 2:

Lay the playmat on a flat surface, then secure base pieces (x2) to the playmat with the rope.



### Step 3:

Rotate the bolts to secure the x2 columns to the piano on both sides.



#### Step 4:

Insert the fitted piano body into both base pieces.



#### Step 5:

The two ends of the arch can be inserted into the corresponding port of the bracket according to the requirement.



#### Step 6:

Rattles and fittings can be hung from the ring gap. Hang the ring of the rattles and hang it on the buckle of the arch.



## Disposal



This marking indicates that this appliance should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

## NOTES

---


### Need more information?

We hope that this user guide has given you the assistance needed for a simple setup.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to [help.kogan.com](https://help.kogan.com)

**kogan.com**

## Documents / Resources

 <p>USER GUIDE <b>bubbli</b></p> <p>ACTIVITY GYM PLAYMAT</p>	<p><a href="#">bubbli BBACTGMPLTA Activity Gym Playmat</a> [pdf] User Guide BBACTGMPLTA, Activity Gym Playmat</p>
---	---