$\underline{\textbf{Manuals+}} \ - \ \textbf{User Manuals Simplified}.$



BUILTBRIGHT BB6010A Strobe Work Bar Installation Guide

Home » BUILTBRIGHT » BUILTBRIGHT BB6010A Strobe Work Bar Installation Guide 🖺

BUILTBRIGHT BB6010A Strobe Work Bar



Contents

- 1 SPECIFICATIONS
- **2 INCLUDED**
- **3 INSTALLATION**
- **4 WIRING**
- **5 FLASH PATTERNS**
- **6 WARRANTY**
- **7 Customer Support**
- 8 Documents /

Resources

- 8.1 References
- 9 Related Posts




• Input Voltage: 12-24VDC

• Operating Current: 0.84A @ 12VDC

• Operating Temperature: -40° to 149°F (-40° to 65°C)




- 1x LED light bar
- 1x Mounting Bezel
- 1x 3M VHB tape
- 1x Mounting Gasket
- · Mounting hardware

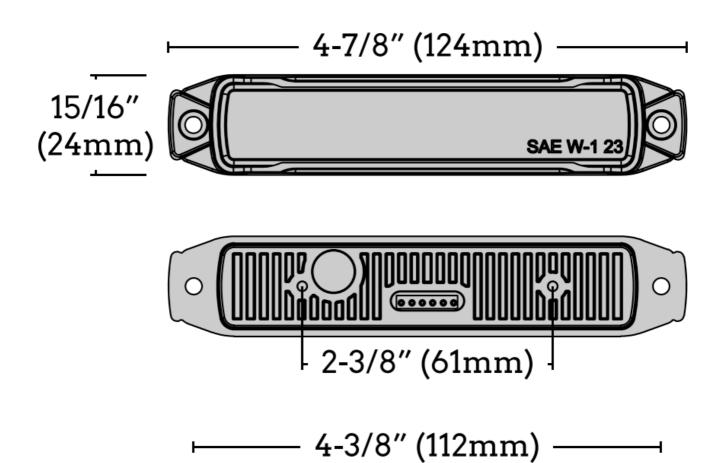



- 1. Mount to a flat surface or one with minimal curvature.
- 2. Mark drill hole locations on the mounting surface using the gasket or VHB tape as a template.
- 3. Drill a 9/16" (14mm) hole for the wires protruding from the rear of the unit at the correct location. Deburr any sharp edges from this hole.
- 4. Mount the light along with the mounting gasket. Use the self tapping screws provided to secure.

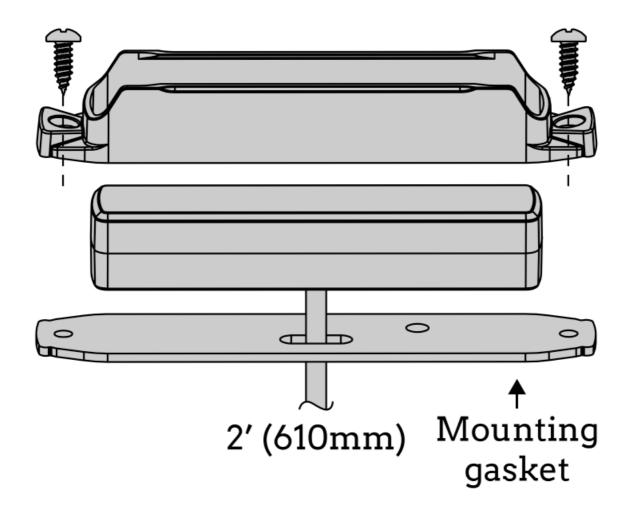



White - To +VDC and memory function 1 (fuse @ 2A)
Gray - To +VDC and memory function 2 (fuse @ 2A)
Red - To +VDC and memory function 3 (fuse @ 2A)
Yellow - Pattern selection

- Apply YELLOW wire to +VDC:
- · Less than 1 second for next pattern
- 2-4 seconds for previous pattern
- 7+ seconds for steady burn
- Synchronization: After setting each light at the right pattern, connect yellow wires of all light heads together.
- Phase Operation: Phase 1 flashes simultaneously with Phase 1, Phase 2 flashes simultaneously with Phase 2, Phase 1 alternates with Phase 2 (Up to 8 units can be synchronized.)



1	Single Flash, ECE R65 Phase 1*	12	Quintuple Flash Phase 2
2	Single Flash, California Title 13 Phase 1*	13	Combination Single/Double Flash Phase 1
3	Double Flash Phase 1*	14	Combination Single/Double Flash Phase 2
4	Triple Flash Phase 1*	15	Combination Single/Triple Flash Phase 1
5	Single Flash, ECE R65 Phase 2	16	Combination Single/Triple Flash Phase 2
6	Single Flash, California Title 13 Phase 2	17	Combination Single/Quintuple Flash Phase 1
7	Double Flash Phase 2	18	Combination Single/Quintuple Flash Phase 2
8	Triple Flash Phase 2	19	Single Flash Left/Right Split
9	Quadruple Flash Phase 1	20	Strobe
10	Quadruple Flash Phase 2	21	Cruise(20%)
11	Quintuple Flash Phase 1	22	Steady Burn

^{*} Sync w/ 6002X Series Mini Bar



ARC Lighting provides a 5 year warranty against manufacturing defects from date of purchase. If warranty service is needed, please contact the authorized dealer of where your product(s) were originally purchased.

Customer Support



Phone: 888-608-2220
Email: support@arc.lighting
Website: www.arc.lighting/warranty-claim

WARNING: CANCER
AND REPRODUCTIVE HARM
WWW.P65WARNINGS.CA.GOV
BASTROP, TEXAS 78602
UNITED STATES OF AMERICA
NIN.BUILT-BRIGHT.COM



Documents / Resources



BUILTBRIGHT BB6010A Strobe Work Bar [pdf] Installation Guide BB6010A, BB6010A Strobe Work Bar, Strobe Work Bar, Work Bar, Bar

References

- <u>P65WARNINGS.CA.GOV</u>
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.