



# bumpboxx Retro Pager Wireless Bluetooth Speaker User Manual

[Home](#) » [bumpboxx](#) » bumpboxx Retro Pager Wireless Bluetooth Speaker User Manual 

## Contents


- [1 bump box Retro Pager Wireless Bluetooth Speaker](#)
- [2 FUNCTIONS](#)
- [3 SPECIFICATIONS](#)
- [4 ACCESSORIES](#)
- [5 FUNCTION DESCRIPTION](#)
- [6 RESOLVING COMMON ISSUES](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



**bump box Retro Pager Wireless Bluetooth Speaker**



## FUNCTIONS

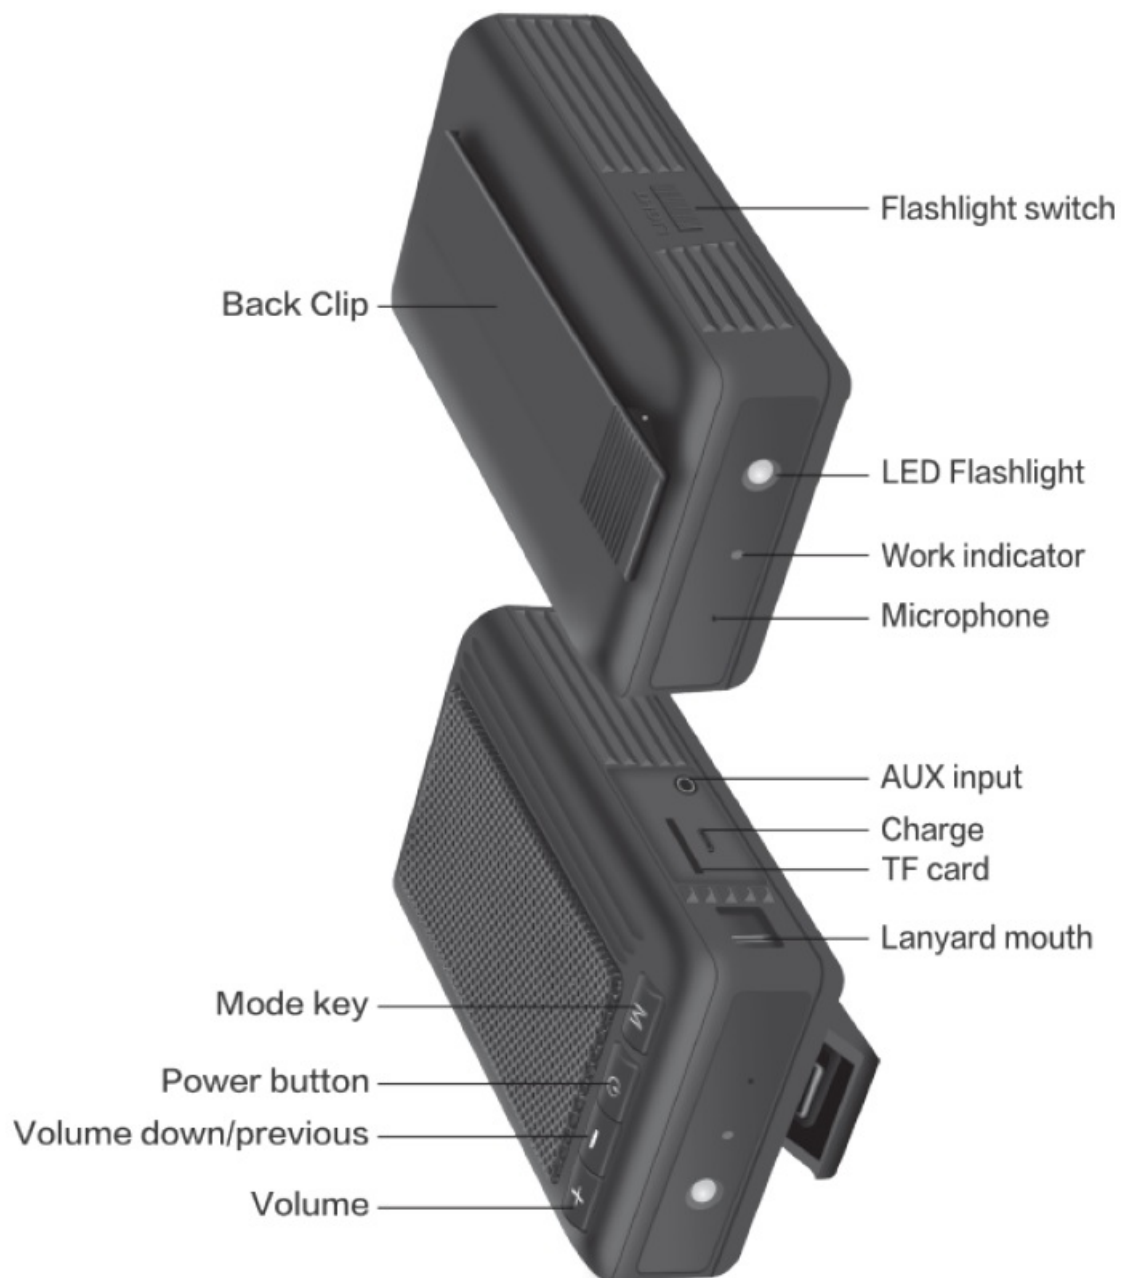

## SPECIFICATIONS

- Weight 93g
- Playtime: 6 Hours +
- Bluetooth Version 5.0 Transmission Distance: 10 Meters + Flashlight: F6/150maH
- Standby Time: 6 Hours +
- Radio Frequency Range: 87.5-108MHz Waterproof Rating: IPX6
- Charging Time: 2 Hours

## ACCESSORIES

- Charging Cable x1
- Portable Lanyard x1
- Audio Input x1Cable
- User Manual x1

## FUNCTION DESCRIPTION

### BATTERY AND POWER

1. Retro Pager is charged via the USB charging cable included. Plug it in to charge. When charging, the LED indicator will be red. When your Retro Pager is done charging, the LED indicator will turn blue.
2. When your unit needs a charge, the LED indicator will be red, it will also play a “battery low” tone.

### BLUETOOTH CONNECTION

1. Press and hold the power button for 3 seconds. A blue light will flash, indicating the unit is in Bluetooth Pairing Mode.
2. Open your smart device, and find “Bumpboxx Pager” on the devices list.
3. A blue light will flash when Bluetooth pairing is taking place or when Pager is in standby or ready to pair. 4. Choose Connect.
4. Pairing time in Bluetooth mode is 3 minutes, if no device is connected it will automatically exit pairing mode.  
TWS Pairing (link two pagers) While two pagers are powered on (make sure your phone is not connected) on one pager double click the power button with two taps. “Mode button” to prompt “TWS MODE”. At this time you're in TWS pairing mode, Perform the same operation on the second pager , the two speakers are automatically paired and you will hear a “beep beep” prompt sound

CAREFULLY READ THIS OPERATING MANUAL TO USE AND ENJOY THIS UNIT PROPERLY. KEEP THIS MANUAL HANDY FOR FURTHER REFERENCE


### RESOLVING COMMON ISSUES

If yours device cannot be found in Bluetooth Mode:

1. Check if the Retro Pager is in Bluetooth Pairing mode (the blue LED indicator will flash quickly)
2. Check if Pager is already connected to another device.
3. Make sure the Pager has a full charge and try again.
4. Make sure your device is within range to speaker.

**If you have on going issues with your Retro Pager please contact Bumpboxx Customer Support at [Customerservice@Bumpboxx.com](mailto:Customerservice@Bumpboxx.com)**

### Documents / Resources

	<p><a href="#">bumpboxx Retro Pager Wireless Bluetooth Speaker</a> [pdf] User Manual Retro Pager, Wireless Bluetooth Speaker, Retro Pager Wireless Bluetooth Speaker</p>
---	--