



# **BUTURE Beta05 Jump Stater User Guide**

Home » BUTURE » BUTURE Beta05 Jump Stater User Guide Ta



### **Contents**

- 1 BUTURE Beta05 Jump
- Stater
- 2 Specifications
- **3 Product Usage Instructions**
- 4 FAQ
- **5 PRODUCT OVERVIEW**
- **6 JUMP START YOUR CAR**
- 7 RECHARGE
- **8 PRECAUTIONS**
- 9 CONTACT
- 10 Documents / Resources
  - 10.1 References



**BUTURE Beta05 Jump Stater** 



# **Specifications**

• Product: Beta05 Jump Starter

• Input: USB-C

• USB Outputs: USB1, USB2 (18W)

• Features: Jumpstart Port, LED Light, Power Button, Power Level Indicator, Force Start Button

• Compatibility: 12V vehicles

# **Product Usage Instructions**

# **Jump Start Your Car**

- 1. Insert the jumper cable into the jump starter.
- 2. Connect the clamps to the car battery (red to +, black to -).
- 3. The jumper cable indicator turns solid green.
- 4. Start your car engine.

### **Force Start Function**

- 1. If the car doesn't start after three attempts, use the Force Start Function:
  - 1. Press the force start button for 5 seconds.
  - 2. The jumper cable indicator turns green.
  - 3. Start your car engine.

# Recharge

- 1. Insert the charging cable into the USB-C port.
- 2. Connect to a corresponding adaptor (not included).

# **Charge Electronic Devices**

- 1. Plug the cable into any USB output port.
- 2. Press the power button to start charging.

### **LED Lighting**

- Press the power button for 3 seconds to cycle through lighting modes:
  - Press shortly for a white strobe light.
  - Press shortly for the orange strobe light.
  - Press shortly for the SOS signal.
  - Press shortly to turn off the light.

### **Precautions**

- Do not use it with less than 10% power.
- · Recharge every 3 months.
- Wait 30 minutes before recharging after starting the car.
- Allow at least 60 seconds between starts to prevent overheating.

### **Important Safety Warning**

- Store in a cool, well-ventilated place away from children and pets.
- Do not use it if the clamp or cable is damaged.
- · Avoid connecting red and black clamps during output.


### **FAQ**

- Q: What should I do if the indicator shows a solid red light?
- A: Follow the specific instructions provided based on the pattern of beeps and lights. If unsure, contact <a href="mailto:support@ibuture.com">support@ibuture.com</a> with details.


# **PRODUCT OVERVIEW**


- 1. Jumpstart Port
- 2. Display
- 3. USB Output 1
- 4. USB Output 2 (18W)
- 5. Power Button
- 6. USB C Input
- 7. LED Light

- 8. Power Level
- 9. Port Using
- 10. Charging
- 11. Discharging
- 12. Indicator
- 13. Force Start Button

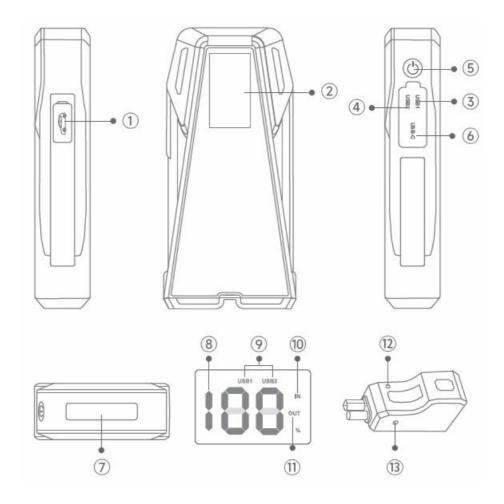

# **JUMP START YOUR CAR**

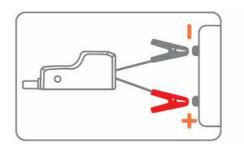

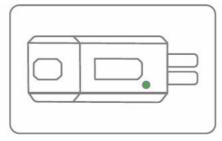





- 1. Insert the jumper cable into the jump starter and connect the clamps to the car battery (red to +, black to -).
- 2. The indicator of the jumper cable turns solid green.
- 3. Start your car engine.

### **ABOUT THE FORCE START FUNCTION**

• If three attempts fail when you correctly connect the clamps to your car, you can use the Force Start Function to enter boost mode.

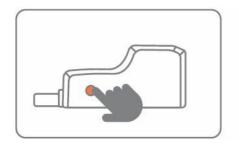

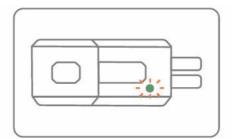



# 3 steps to fix the problem

- 1. Press the force start button for 5 seconds.
- 2. The indicator of the jumper cable is green.
- 3. Start your car engine.


Warning: When using the Force Start Function, auto-detection and safety features will be disabled.

# **ABOUT THE TROUBLESHOOTING**

In any of the following situations, the smart clamp will turn protections on:

Indicator	Situations
	· Jump starter battery is low and needs to be charged
	· Startup Timeout Protection
Solid red light	—Press the force start button for about 3 until the indicator turns to steady g reen. It means that it returns to work
Solid red light with slow and brief beeps	Reverse Charge Protection  —Reconnect to try again
Solid red light with quick and brief beeps	· High-Temperature Protection
	—Remove the clamps to let it cool
	· Relay Short-circuit
	—Jumper cable failure. Contact
	support@ibuture.com with details
	· Short-circuit Protection
	— Do not connect smart clips or to the same metal
Solid red light with regular long a nd short beeps	· Reverse-connection Protection
	— Reverse smart clip to ensure the right connection
	· Over Limit Protection
	—Reconnect to try again
The green light flashes 5 times, t hen the red light is always on	· Five Intervals of Start-up Protection
	—Press the force start button for about 3 until
	the indicator turns to steady green. It means that it returns to work
Other	Please contact support@ibuture.com with details


# **RECHARGE**

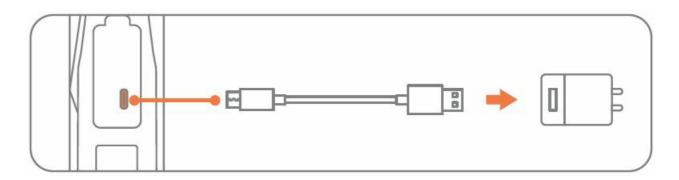


- 1. Insert the charging cable into the USB C port.
- 2. Connect to the corresponding adaptor (adaptor not included).

### **CHARGE ELECTRONIC DEVICES**


1. Plug the cable into any USB outlet.

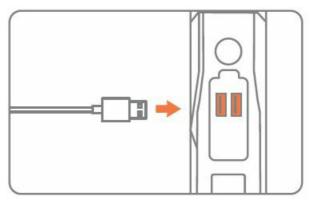

2. Press the power button.

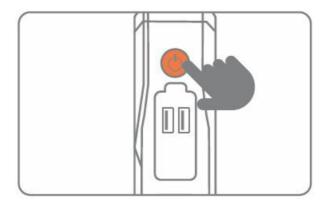

# **LED LIGHTING**

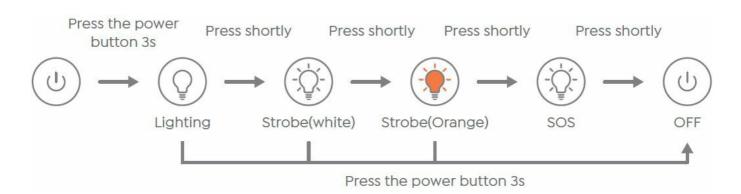

### **PRECAUTIONS**

- 1. The product is for 12V vehicles only.
- 2. Do not use the product with less than 10% power as this will damage the product.
- 3. Recharge every 3 months to prolong the lifespan.
- 4. Wait at least 30 minutes before recharging after starting the car.
- 5. 60s is recommended between starts, otherwise, it will overheat.

### **IMPORTANT SAFETY WARNING**

- 1. Store in a cool and well-ventilated place out of reach of children and pets.
- 2. Do not place the product in a high-temperature environment for a long time. The operation temperature of this product is -20~60°C. The storage temperature should not exceed 50°C/122°F.
- 3. Only start vehicles with the smart jumper cable supplied by the manufacturer.
- 4. Do not use the product if the clamp or cable is damaged.
- 5. Do not connect the red and black clamps when the product is outputting.
- 6. Do not connect the red and black clamps to the same piece of metal.
- 7. Do not disassemble or modify this product.
- 8. Do not use detergent to clean this product.
- 9. Do not abuse this product and avoid heavy dropping or repeatedly hitting it.
- 10. Do not operate the product in explosive environments such as flammable liquids, gases or dusts.
- 11. Do not immerse the product in water.
- 12. Do not litter the product and it should be safely recycled.
- 13. Do not incinerate the product or be exposed to high temperatures, as they may explode.
- 14. Only use replacement parts or accessories provided or recommended by the manufacturer.

### CONTACT

### WHERE TO GET MORE HELP

- Scan And Download the PDF Version Of the User Manual
- <a href="https://ibuture.com/pages/user-manuals">https://ibuture.com/pages/user-manuals</a>.
- Support@ibuture.com
- <a href="https://ibuture.com">https://ibuture.com</a>.
- @buture.official
- @buture.official



### **Documents / Resources**



# <u>BUTURE Beta05 Jump Stater</u> [pdf] User Guide Beta05 Jump Stater, Beta05, Jump Stater, Stater

# References

• User Manual

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.