

BWT
F1 R Robotic
Pool Cleaner



BWT F1 R Robotic Pool Cleaner Instruction Manual

[Home](#) » [BWT](#) » BWT F1 R Robotic Pool Cleaner Instruction Manual 

Contents

- [1 BWT F1 R Robotic Pool Cleaner](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 Introduction](#)
- [5 Components](#)
- [6 Operation](#)
- [7 Power Supply](#)
- [8 Maintenance and Storage](#)
- [9 Troubleshooting](#)
- [10 Warranty](#)
- [11 CONTACT](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)



BWT F1 R Robotic Pool Cleaner



Product Usage Instructions

- Place the power supply at least 3.6 meters / 11.8 feet from the pool and at least 12 cm above ground. Ensure the power supply is not exposed to water or direct sunlight.
- Unplug the floating cable from the power supply and release it into the water.
- Make sure there are no people in the pool and that the filters are clean before placing the cleaner unit in the water.
- Turn on the cleaner when it reaches the pool floor.
- During the cleaning cycle, the cleaner moves across the pool floor picking up dirt and debris, changes direction automatically, and climbs the pool walls periodically.
- To stop the cleaner during a cleaning cycle, press the On/Off button once. The cleaner will move to standby mode.
- Unplug the floating cable from the power supply.
- Pull the floating cable and lift the cleaner out of the pool using the handle (do not use the floating cable to lift).

FAQ

- **Q:** Can I stop the robotic cleaner before it completes its cycle?
- **A:** It's not recommended to stop the pool cleaner before the cycle ends as per the user manual.
- **Q:** What should I do if the robotic cleaner stops moving during operation?
- **A:** If the cleaner stops moving for a few seconds, it is part of normal operation. Wait for it to resume movement.

Introduction

System overview

- The robotic cleaner sweeps the pool floor and walls collecting dirt and debris in its filter(s).
- This user manual explains how to operate the robotic cleaner, including cleaning, maintenance and storage procedures.

Robotic cleaner operation

- Once the robotic cleaner is placed in the pool and activated, it operates according to its program.
- It moves along the floor and walls of the pool, covering the entire area of the pool floor and walls.
- When it has finished its program, it remains inactive on the pool floor. The power will automatically shut off.

Note: It's not recommended to stop the pool cleaner prior to cycle end.

Note: The robotic cleaner climbs the wall at intervals according to its internal program. Its ability to climb over stairs in swimming pools is subject to stair geometry and material.

Operating conditions

The robotic cleaner is intended for use in residential swimming pools only and in the following conditions:

1. Recommended water temperature 13°C-35°C (55°F-95°F).
2. Water pH : 7.2 – 7.6 (3) Chlorine level: pool is maintained according to the pool manufacturer's instructions.
(Recommended Chlorine level: 2-4 ppm)

Note: Failure to maintain the pool according to the recommended operating conditions could prevent the robotic cleaner from functioning properly.

 
Components



Operation

Placement of the Power Supply

- Place the power supply at least 3.6 meters / 11.8 feet from the pool and at least 12 cm above ground.
- **CAUTION:** The power supply is not water resistant; it must not be exposed to water or to direct sunlight.
- Press the plastic snap on the zip ties in order to release the floating cable. Use as much cable as needed in the water

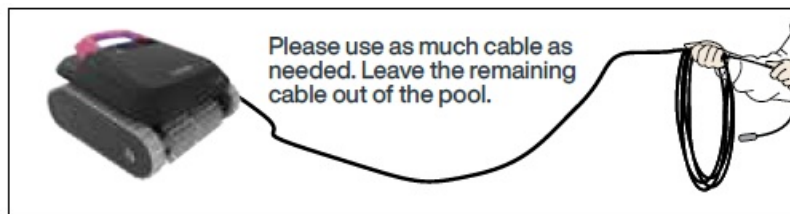


Before placing the cleaner unit in the water

- Make sure there are no people in the pool. Make sure that the filters are clean.
- Make sure the pool conditions are met; (see “Operating Conditions”).




Placing cleaner in the water

 - Unroll the floating cable. It is recommended to extend a length of cable that is equal to the diagonal size of the pool plus an additional two meters.
- Smooth out coils or twists in the cable. Connect the floating cable to the socket located on the power supply.
- Roll extra cable, not in the pool, near the power supply. Place the robotic cleaner in the pool.
- Let it sink to the bottom of the pool. Do not start the operation before the robotic cleaner is settled on the pool floor.
- **CAUTION:** Operating the cleaner out of water may cause immediate and severe damage resulting in loss of warranty.

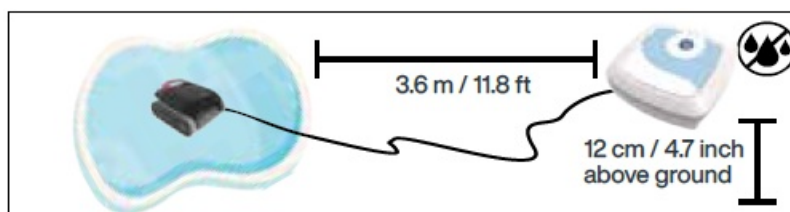

Starting the robotic cleaner Connect the power supply to the wall socket. The on/off button will light up and the robotic cleaner will start its cleaning program. If the power supply is already connected to the wall socket, the on/off button will flash to indicate that the robotic cleaner is in standby mode. Press the On/Off button in order to change the above mode (On to Off – standby, or vice versa). Note: if the full filter indication light (only available on some models) is ON make sure to remove and clean the filter prior to putting the cleaner back in the pool.

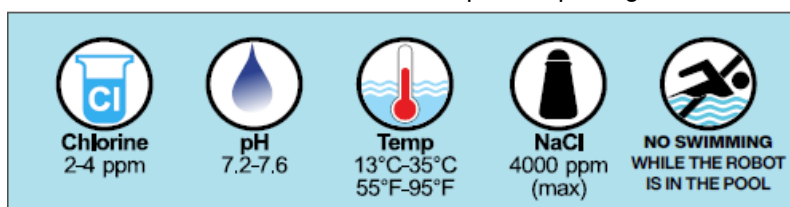 

Cleaning cycle

- During the cleaning cycle, the cleaner moves across the pool floor picking up dirt and debris, changes direction and rotates automatically according to the selected program and climbs the pool walls every few minutes, as set in its internal program.
- **Note:** The robotic cleaner might occasionally stop moving for a few seconds. This is part of normal operation, not a malfunction.

Stopping robotic cleaner operation

- The robotic cleaner moves automatically to 'standby' after every cleaning cycle and the on/off button starts flashing.
- To stop the cleaner operation during a cleaning cycle, press the On/Off button once.
- The On/Off button starts flashing and the cleaner is in standby mode.

Pulling the cleaner unit out of the water

1. Unplug the floating cable from the power supply.
2. Pull the floating cable and when the unit is close enough to reach the handle, using the handle, lift the cleaner out of the pool.

CAUTION: Do not use the floating cable to lift the cleaner out of the water.

The power supply is connected to the robotic cleaner via the floating cable

1. The unit is powered by AC power
2. and supplies low-voltage and commands to the robotic cleaner through the outlet socket.

The power supplies feature a control panel with indicators:

- On/Off
- Full filter indicator
- Bluetooth indicator

Power Supply



-  On/Off
-  Full filter indicator
-  Bluetooth

Maintenance and Storage

 
Cleaning the filters

- The filter(s) must be cleaned after each cleaning cycle.
- Press the button to release the lid and pull out the filter(s).
- Spray water on the outer sides of the filter and then spray water towards the inner side of the filter to clean all the dirt and debris. Reinsert the filter(s).



Storing the robotic cleaner

- Follow these instructions to store the robotic cleaner when not in use:
- Disconnect the power cord from the wall outlet.
- Disconnect the floating cable from the power supply.
- Make sure that the power supply is not exposed to water.
- Spread out the floating cable and roll it. Wash the interior and exterior of the cleaner unit with fresh water and let it dry.
- Roll the floating cable and place it on the cleaner unit.
- **Caution:** Store the robotic cleaner components in a dry, closed location.

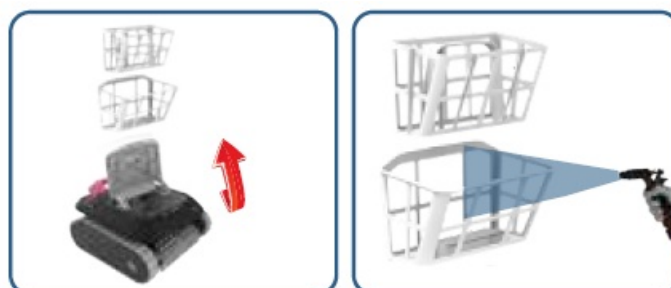

Checking the water outlet propeller

It is recommended to periodically clean debris and hair from the propeller of the water outlet:

1. Unscrew the outlet locker that secures the outlet cover.
2. Remove the water outlet cover
3. Clean any hairs, dirt, or debris.
4. Return the outlet locker resealing the outlet cover.

Single or double filter depends on the model



Troubleshooting

CLEANER DOES NOT TURN ON

There is no electricity in the wall socket:

1. Disconnect cleaner from the power supply unit.
2. Disconnect the power supply from the wall socket, wait 30 seconds and reconnect.
3. Turn the power on. If not activated, connect the unit to a different wall socket.

Obstacle in the drive system of the cleaner unit

1. Check for obstacles and debris caught in the drive belts.
2. Clean and remove obstacles and debris if necessary.

The propeller is broken or seized due to the accumulation of hair

1. Unscrew the outlet locker on the top outlet.
2. Check if the propeller is broken or needs to be cleaned.

CLEANER MOVES BUT DOES NOT PUMP WATER

- **Filters are dirty:** (1) Remove the filters and clean them.

The propeller is broken or seized due to the accumulation of hair

1. Unscrew the outlet locker on the top outlet.
2. Check if the propeller is broken or needs to be cleaned.

CLEANER PUMPS WATER BUT DOES NOT MOVE

Obstacle in the drive system of the cleaner unit:

1. Check for obstacles and debris caught in the drive belts.
2. Clean and remove obstacles and debris if necessary.

CLEANER STARTS AND SHUTS OFF AFTER A SHORT TIME

Filters are dirty

1. Remove and clean the filters.
2. Restart the robot and try again.

Propeller is broken or seized due to accumulation of hair:

1. Unscrew the outlet locker on the top outlet.
2. Check if the propeller is broken or needs to be cleaned.

Obstacle in the drive system of the cleaner unit

1. Check for obstacles and debris caught in the drive belts.
2. Clean and remove obstacles and debris if necessary.

CLEANER DOES NOT PICK UP DIRT

- Filters are dirty or have holes.
- Clean as needed and verify that there are no holes in the filters. If there are holes in the filter it needs to be replaced.

The propeller is broken or seized due to the accumulation of hair.
Check if the propeller is broken or needs cleaning.

1. Unscrew the outlet locker on the top outlet.
2. Check if the propeller is broken or needs to be cleaned.

CLEANER UNIT DOES NOT COVER THE ENTIRE POOL

Clean the filters

1. Verify that there is enough length of the floating cable in the water to reach the far end of the pool.
2. Make sure that the floating cable is properly spread out and is not tangled.

The propeller is broken or seized due to the accumulation of hair

1. Unscrew the outlet locker on the top outlet.
2. Check if the propeller is broken or needs to be cleaned.

THE CLEANER DOES NOT CLIMB WALLS

1. Make sure to clean the filters
2. Make sure the propeller isn't broken or seized with debris/hair.

Warning

- Do not stay in the pool and remove all items from the pool before operating the robotic pool cleaner. Do not leave the robot inside the pool if unused.
- The power supply must be connected through a Ground Fault Current Interrupter (GFCI USA) or a Residual Current Device (RCD Europe) not exceeding 30 mA.
- The connection to the power must meet local and national wiring rules.
- All parts must be replaced with original parts supplied by a BWT-authorized service center.
- Keep out of children's reach.
- Do not use the robotic pool cleaner if you have added liquid flocculant or any other clarifier to the pool water. These substances obstruct and damage the robot filters.

Warranty

NON EXCLUSION OF STATUTORY-BASED GUARANTEES: Nothing contained in this warranty shall exclude, restrict or modify rights and remedies available under statutory based consumer guarantees that apply in the country in which our product is supplied.

2 (+1) YEARS WARRANTY POLICY

In application of the terms of Legislative Royal Decree 1/2007 of 16 November which approved the Revised Text of the Consumer and User Protection Act, BWT offers a two-year product warranty to consumers from the date on which they are delivered by the vendor, subject to the terms and conditions described in this warranty and without prejudice to the terms of the Royal Decree. This warranty will be valid in all Member States of the European Union, subject to the legal limitations in each country where it is enforced, under the rules for application. The legal warranty covers all components elements and accessories, including power supplies, pumps, motors, electric wires, brushes, belts, handles, wheels, bags, and other product components.

Sales Warranty

- Upon conclusion of the two-year legal warranty, BWT offers an additional one-year sales warranty on the power supply, pump and motor only. This warranty covers the replacement of parts only, exclusive of shipping and labor.

Warranty Conditions

Products may be covered under the legal and sales warranties as long as the problem is reported by the consumer within two months of becoming aware of it.

In order for the warranty to apply, the consumer must:

- Contact an Authorized Assistance Technical Service center and they will inform you about the procedure, or
- Call the vendor from whom the product was purchased, who will provide you with further information.
- If the products are assembled, disassembled, or repaired by anyone who is not an Authorized Technical Assistance provider, the legal and sales warranties will NOT apply. All repairs covered under the warranty must be performed by a

Technical Assistance Service authorized by BWT.

This warranty covers the repair, or the return and replacement of the product as mandated by law.

The agents, representatives or distributors, DO NOT have the authority to increase or alter the obligations of the warranty in the name and on behalf of BWT.

Exclusions:

Under no circumstances will the legal or sales warranty provided by BWT be applicable when the defect or malfunction of the product is due to:

- Unauthorized modifications of the product
- Misuse, abuse or negligence
- Damages caused by force majeure or fortuitous events
- Use of saltwater levels, higher than 5,000 ppm (0.5%)
- The failure to perform the preventive maintenance indicated in the instruction manual
- Use of the product in anything other than private, residential pools.

Furthermore, BWT will not be liable under any circumstances and neither the legal warranty nor the sales warranty will apply, for any damages that may or will occur to any pool, including the pool's plaster or pool's vinyl liner, by reason of the use and/or operation of the BWT pool cleaner.

3 (+1) YEARS WARRANTY POLICY

In application of the terms of Legislative Royal Decree 1/2007 of 16 November which approved the Revised Text of the Consumer and User Protection Act, BWT offers a three-year product warranty to consumers from the date on which they are delivered by the vendor, subject to the terms and conditions described in this warranty and without prejudice to the terms of the Royal Decree. This warranty will be valid in all Member States of the European Union, subject to the legal limitations in each country where it is enforced, under the rules for application. The legal warranty covers all components elements and accessories, including power supplies, pumps, motors, electric wires, brushes, belts, handles, wheels, bags, and other product components.

Sales Warranty

Upon conclusion of the three-year legal warranty, BWT offers an additional one-year sales warranty on the power supply, pump and motor only. This warranty covers the replacement of parts only, exclusive of shipping and labor.

Warranty Conditions

Products may be covered under the legal and sales warranties as long as the problem is reported by the consumer within two months of becoming aware of it.

In order for the warranty to apply, the consumer must:

- Contact an Authorized Assistance Technical Service center and they will inform you about the procedure, or
- Call the vendor from whom the product was purchased, who will provide you with further information.
- If the products are assembled, disassembled, or repaired by anyone who is not an Authorized Technical Assistance provider, the legal and sales warranties will NOT apply. All repairs covered under the warranty must be performed by a

Technical Assistance Service authorized by BWT.

This warranty covers the repair, or the return and replacement of the product as mandated by law.

The agents, representatives or distributors, DO NOT have the authority to increase or alter the obligations of the warranty in the name and on behalf of BWT.

Exclusions

Under no circumstances will the legal or sales warranty provided by BWT be applicable when the defect or

malfunction of the product is due to:

- Unauthorized modifications of the product
- Misuse, abuse or negligence
- Damages caused by force majeure or fortuitous events
- Use of saltwater levels, higher than 5,000 ppm (0.5%)
- The failure to perform the preventive maintenance indicated in the instruction manual
- Use of the product in anything other than private, residential pools.

Furthermore, BWT will not be liable under any circumstances and neither the legal warranty nor the sales warranty will apply, for any damages that may or will occur to any pool, including pool's plaster or pool's vinyl liner, by reason of the use and/or operation of the BWT pool cleaner.

Your ACTIVATION CODE is found on the silver label placed inside the robot XXXX – XXXX


Control your F1 pool cleaner with BWT Best Water Home App



CONTACT

- AUSTRALIAN DISTRIBUTOR
- Lincoln Pool Equipment
- BWT Group
- www.bwtpools.com.au

Documents / Resources

	BWT F1 R Robotic Pool Cleaner [pdf] Instruction Manual F1 R, F1 R Robotic Pool Cleaner, Robotic Pool Cleaner, Pool Cleaner, Cleaner
---	--

References

- [BWT Pools Australia - Experience a Perfect Pool](#)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.