



Byron Statics KCS-312B Cassette Player with USB Display Instruction Manual

[Home](#) » [Byron Statics](#) » Byron Statics KCS-312B Cassette Player with USB Display Instruction Manual 

 
Byron Statics KCS-312B Cassette Player with USB Display Instruction Manual



Contents

- 1 LOCATION OF CONTROLS
- 2 POWER SOURCE
- 3 BATTERY OPERATION
- 4 USB POWER SUPPLY
- 5 USB PLAY
- 6 USB PLAY MODE
- 7 USB RECORDING
- 8 TAPE TRANSCRIPTION USB
- 9 CASSETTE PLAYER OPERATION
- 10 STANDBY SETTING
- 11 PRECAUTIONS FOR USE
- 12 RECORDING OPERATION
- 13 AUTOMATIC STOP
- 14 CASSETTE TAPE OPERATING TIPS
- 15 READ THIS IMPORTANT INFORMATION BEFORE USING YOUR EARPHONES
- 16 SAFETY INFORMATION
- 17 CARE AND MAINTENANCE
- 18 SPECIFICATIONS
- 19 Documents / Resources
- 20 Related Posts

LOCATION OF CONTROLS

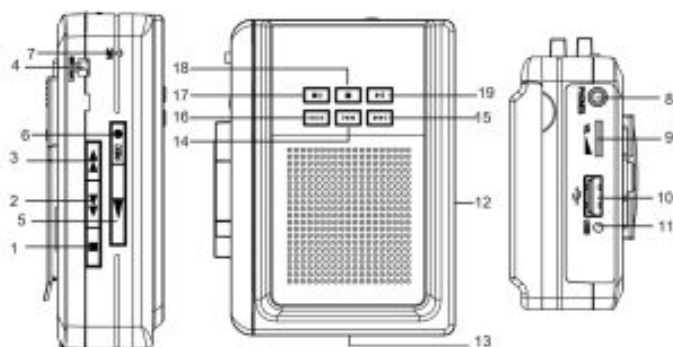

- 1. STOP BUTTON
- 2. FAST FORWARD
- 3. FAST BACK WARD
- 4. FUNCTION SELECTOR
- 5. PLAY BUTTON
- 6. RECORD BUTTON
- 7. MIC
- 8. EARPHONE JACK
- 9. VOLUME CONTROL
- 10. USB PORT
- 11. USB INDICATOR
- 12. BATTERY COMPARTMENT
- 13. MICRO USB 5V DC
- 14. USB MOVENEXT
- 15. USB MOVEPREVIOUS

16. USB PLAY MODE
17. USB RECORD BUTTON
18. USB STOP BUTTON
19. USB PLAY/PAUSE BUTTON

POWER SOURCE

This Cassette Player operates on 2 'AA' (UM-3) batteries or use a USB power supply.

 
Note: Battery and USB cable not included.

BATTERY OPERATION

For better performance and longer operating time, we recommend the use of alkaline-type batteries.

1. Open the BATTERY DOOR by sliding downwards and hinging upwards.
2. Following the polarity diagram on the back cabinet, insert 2 'AA' (UM-3) batteries and close the BATTERY DOOR. **IMPORTANT:** Be sure that the batteries are installed correctly. Wrong polarity may damage the unit.
3. (a) Do not mix old and new batteries.
(b) Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
4. If the unit is not to be used for an extended period of time, remove the batteries. Old or leaking batteries can cause damage to the unit and may void the warranty.
5. Do not dispose of batteries in fire, batteries may leak or explode.

USB POWER SUPPLY

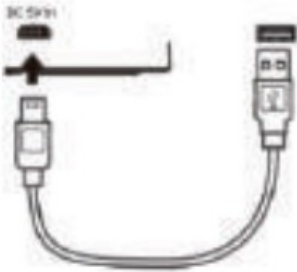

1. If you are using USB power, we recommend that you remove any batteries first.
2. Insert a micro USB cable(not supplied) into the USB port on the device and use a suitable USB power supply.
3. Please remove any batteries from the unit if unit will not be used for a period of time.
please allow slight interference on AM radio reception when using USB power supply

USB PLAY

1. Insert the USB device to USB port .
2. Set USB/TAPE switch to USB.
3. Press PLAY/PAUSE button to playback music from USB device. Press PLAY/PAUSE button again to stop play.

USB PLAY MODE

1. One Click the MODE button to repeat the single.
2. Double Click the MODE button to repeat all the tunes.
3. Third Click the MODE button to play random .

USB RECORDING

1. Insert the USB device to USB port ,the red USB indicator is on.
2. Press the USB recording button and the red USB indicator flashes to start recording.
3. Press the USB recording button again stop recording, and the recording file will be saved as WAV file automatically.
4. Press PLAY/PAUSE button to play the recording file.

TAPE TRANSCRIPTION USB

1. Insert the USB device to USB port , set USB/TAPE switch to tape, and Press PLAY button to play the tape.
2. Press the USB recording button and the red USB indicator flashes to start recording the contents of the tape.
3. Press the USB recording button again to stop recording, the red USB indicator will not flash, the recording file will be saved as WAV file automatically.

Note: Delete the recording file on your computer only after connecting to the computer.

4. Stop the cassette play , Set USB/TAPE switch to USB. and press MoveNext button several times to find the last file is the newly recorded file. then press PLAY/PAUSE button to play the recording file.

CASSETTE PLAYER OPERATION

1. Put on your earphones and insert the plug of your earphones into the EARPHONE JACK.
2. Set the FUNCTION SELECTOR to "TAPE" if required.
3. Open the CASSETTE DOOR and insert a pre-recorded cassette tape with the exposed tape facing upwards then Push Q position on cassette door to close the cassette door.
4. Press the PLAY BUTTON and adjust the VOLUME CONTROL to obtain the desired sound level.
5. Press the F. FWD BUTTON when you wish to rapidly advance the tape. 6. Press the STOP BUTTON to switch off.

STANDBY SETTING

In order to preserve the battery life for as long as possible it is recommended you set the FUNCTION switch to the TAPE position when the unit is not in use.

 
PRECAUTIONS FOR USE

1. For safety,it is recommended that the headphones not be worn while on road traffic.
2. Keep the volume set to a comfortable listening level as excess loudness could damage the user's hearing.

RECORDING OPERATION

1. Open the cassette door and insert a blank tape into the cassette case , before recording the music or

conversation, please check the bottom of cassette tape both side A or B it must have two "Recording Lip" as shown below

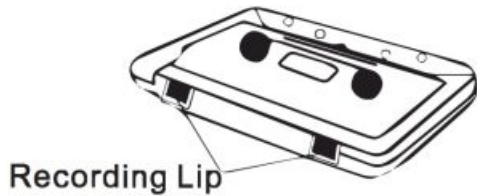

2. Then Push 0 position on the cassette door to Close the cassette door and select your favourite music and program from the radio or from the Mic, Adjust the volume level to suitable level or Max., press the "REC" button (In RED color) start to record
3. You can monitor the recording process through your headphone or speaker.
4. Press the "STOP" button to stop the record function
5. To listen to the recorded programme, you can press the F.BWD button to rewind the tape and press the PLAY button to replay the recorded programme.
6. To prevent your recorded programme from being erased you can take out the RECORDING LIP

Note: The VAS switch must be at off position, When the recording from radio,

AUTOMATIC STOP

To protect your cassette tapes and prevent unnecessary wear to the pinch roller of the cassette mechanism, this unit is equipped with an Automatic Stop System. When the tape ends during play or fast forwarding, the PLAY BUTTON will automatically release to stop the cassette from running.

 
CASSETTE TAPE OPERATING TIPS

1. High quality tapes are recommended to obtain maximum quality reproduction from recordings
2. Use 60mins cassette for optimum performance
3. To obtain good reproduction, the head should be cleaned after every 10 to 20 hours of use. It is also recommended that the cassette be kept away from excessive heat or cold
4. If there is slack in the tape, remove the slack prior to inserting the cassette. To remove the slack, insert a pencil into the hub and rotate clockwise as shown below:



5. A leader tape is provided at the beginning on each cassette. There is no recording on this area, so it is necessary to let the tape run for about five seconds to clear the head
6. Keep the tape head clean since a dirty head can cause distorted sound or improper tape speed. Depress the PLAY BUTTON and use a small cotton swab with tape head cleaner or alcohol to clean the tape head, capstan and pinch roller as shown below:

oller as shown below:

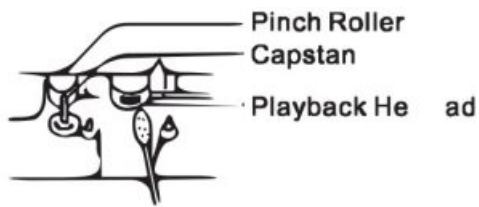

READ THIS IMPORTANT INFORMATION BEFORE USING YOUR EARPHONES

1. Avoid extended play at very high volume as it may impair your hearing
2. If you experience ringing in your ears, reduce the volume or shut off your unit
3. Do not use while driving a motorized vehicle. This is dangerous and also illegal in some states
4. Keep the volume at a reasonable level even if your headset is an open-air type designed to allow you to hear outside sounds. Please note excessively high volume may still block outside sounds

SAFETY INFORMATION

1. Do not attempt to disassemble this unit.
2. Make sure that pins or other foreign objects do not get inside the unit.
3. Take care not to drop the unit or subject it to strong shocks.
4. Inside a car which become extremely hot and suffer shocks & vibrations

CARE AND MAINTENANCE

1. Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.
2. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places
3. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

SPECIFICATIONS

Maximum output: 25mW

Power Source: Batteries DC 3V(2XAA)

Accessories: Earphones Earphones

Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



Any support you need, anything you feel like to share, You are more than welcome to contact us.

customerservice@ttinno.com

Documents / Resources

	Byron Statics KCS-312B Cassette Player with USB Display [pdf] Instruction Manual KCS-312B, Cassette Player with USB Display
---	--

[Manuals+](#).