



CAFE C9TMA2S2PS3 Express Finish Toaster Owner's Manual

[Home](#) » [Cafe](#) » CAFE C9TMA2S2PS3 Express Finish Toaster Owner's Manual 

CAFÉ

DISTINCT BY DESIGN™

It's time appliances had a personality. Yours.



Express Finish Toaster OWNER'S MANUAL

THANK YOU FOR MAKING CAFÉ A PART OF YOUR HOME.

We take pride in the craftsmanship, innovation, and design that goes into every Café product, and we think you will too. Among other things, registration of your appliance ensures that we can deliver

important product information and warranty details when you need them. Register your Café appliance now online. Helpful websites are available in the Consumer Support section of this Owner's Manual. You may also mail in the pre-printed registration card included in the packing material.

IMPORTANT SAFETY INFORMATION READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

⚠ WARNING Read all safety instructions before using the product. Failure to follow these instructions may result in fire, electrical shock, serious injury, or death.

Contents

1 GENERAL SAFETY INSTRUCTIONS

2 SAVE THESE INSTRUCTIONS

3 Controls

4 Using the Toaster

5 Care and Cleaning

6 Troubleshooting

7 Limited Warranty

8 Consumer Support

9 Documents / Resources

9.1 References

10 Related Posts

GENERAL SAFETY INSTRUCTIONS

- **Read all instructions.**
- Use this appliance only for its intended purpose as described in the Owner's Manual.
- **⚠ WARNING** **To prevent electrical shock, unplug before cleaning.**
- **To reduce the risk of fire or electric shock, operate with crumb tray in place.**
- A fire may occur if the toaster is covered or touching flammable material, including curtains, draperies, or walls, when in operation.
- Before performing any service, unplug the toaster.
- Do not operate unattended.
- Do not leave children alone—children should not be left alone or unattended in an area where an appliance is in use.
- Do not touch hot surfaces. Use lever or knobs.
- Do not touch the heating elements, toaster opening, or interior surface of toaster during or after use. Allow to cool before cleaning or handling. These surfaces may be hot enough to burn.
- To protect against fire, electric shock, and injury to persons do not immerse cords, plugs or appliance in water or other liquid.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Consumer Support.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use this appliance for anything other than intended use.
- Oversized foods, metal foil packages, or utensils must not be inserted in a toaster, as they may create a risk of fire or electric shock.
- Do not attempt to dislodge food when toaster is plugged in.
- When heating toaster pastries, always use the lightest toast color setting.

⚠ WARNING KEEP FLAMMABLE MATERIALS AWAY FROM THE TOASTER

Failure to do so may result in fire or personal injury.

- Do not store or use flammable materials in a toaster or near the toaster opening, including paper, plastic, pot holders, linens, wall coverings, curtains, drapes and gasoline or other flammable vapors and liquids.
- Never wear loose-fitting or hanging garments while using the appliance. These garments may ignite if they contact hot surfaces causing severe burns.

⚠ WARNING TAMPER-RESISTANT SCREW

This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by an authorized service personnel.

SAVE THESE INSTRUCTIONS

 
ELECTRICAL CORD

NOTE: If the power cord is damaged, please contact the warrantor listed in the back of this manual.


- A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a longer detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
 - If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type-3-wire cord.

Controls


Front View

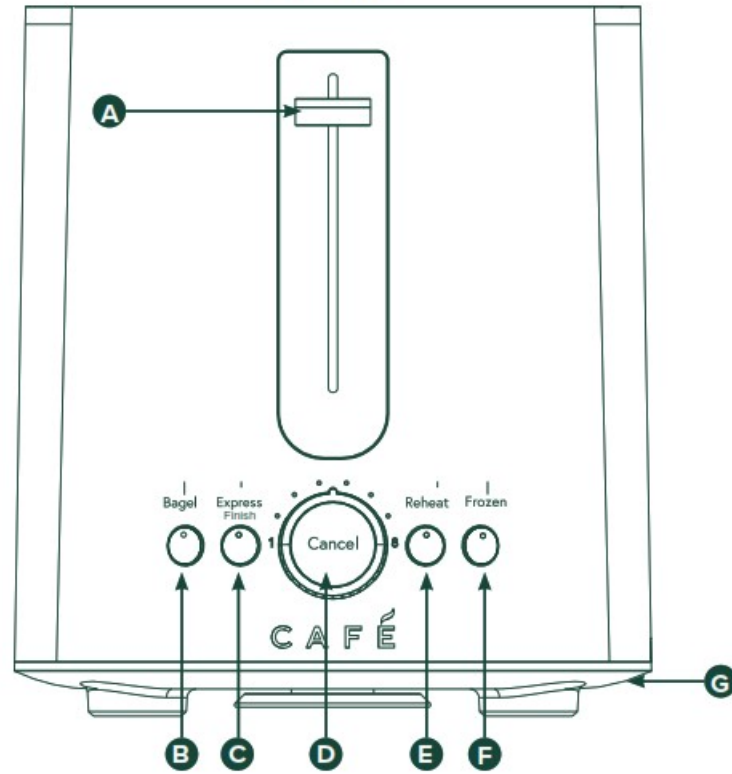

Bottom View

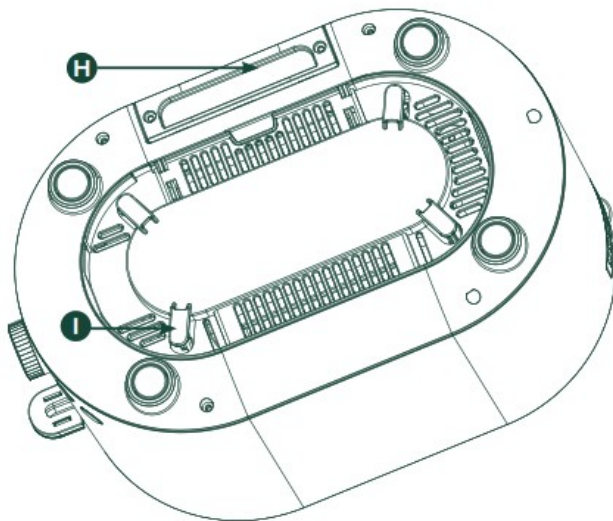 

Side View

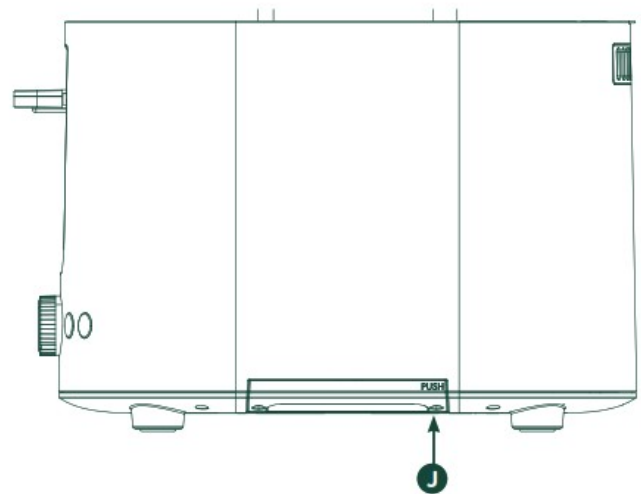 

- A** Lever
- B** Bagel Button
- C** Express Finish Button
- D** Cancel Button / Toasting Knob
- E** Reheat Button

- F** Frozen Button
- G** Base
- H** Crumb Tray
- I** Cord Wrap
- J** PUSH to open Crumb Tray

Using the Toaster

Getting Started

This appliance is for household use only.

- Remove all packing materials, any stickers and the plastic band around the power plug.
- To register your product, go to cafeappliances.com.
- Wash all parts as instructed in Care and Cleaning section.
- Select a level surface where this unit is to be used allowing enough space for steam to escape without damage to counters, cabinets and walls.
- Set the browning level to maximum (8). Operate the appliance empty, to cure the new elements. This may smell a bit, but it's nothing to worry about. Ensure the room is well ventilated.

Toasting Bread

1. Set the toaster upright on a firm, level, heat-resistant surface.
2. Put the plug into the power socket.
3. Turn the browning control to the required setting (1 = light, 8 = dark).
4. Put bread into the toasting slots (maximum thickness 25mm).
5. Press the lever down fully. It won't lock down unless the toaster is connected to the electricity supply.

Frozen Bread

1. Leave the browning control at your preferred setting, insert the frozen bread, lower the lever, then press the "Frozen" button.
2. The light will come on.
3. The toast will pop up when ready.

Bagels

1. Insert sliced bagel into the slots with cut side toward the outside of the toaster.
2. Leave the browning control at your preferred setting, lower the lever, then press the "Bagel" button.
3. The bagel will pop up when ready.

Express Finish

Express Finish will activate extra heating elements on your bread, toasting faster than the regular toasting function. Individual toasting levels may vary on the type of bread and how it is stored.

1. Insert sliced bread into toasting slots and select preferred toasting shade.
2. Lower the lever then press the Express Finish button.
3. Toast will pop up when ready.

Cancel

Pressing the "Cancel" button will stop toasting.

Crumb Tray

The crumb tray is located on the right hand side of the toaster. Push to release it from the toaster and pull out to discard any crumbs, debris. Insert crumb tray by pushing all the way back into the unit.

Care and Cleaning

Follow these guidelines for cleaning and caring for your Toaster:

- Unplug the appliance and let it cool down.
- To remove crumbs from the appliance, gently slide out the crumb tray from the appliance and empty it. Replace tray when finished.
- Do not insert foreign objects into slots.
- **⚠ CAUTION** Do not hold the appliance upside down and do not shake it to remove the crumbs.
- Clean the body of the appliance with a damp cloth.
- DANGER: Never immerse the appliance in water or a dishwasher.
- **⚠ CAUTION** Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- **⚠ CAUTION** Any other servicing should be performed by an authorized service representative.

Troubleshooting

Save time and money! Review the charts on the following pages first and you may not need to visit the website for service.

Problem	Solution
The toaster does not work	Make sure plug is properly inserted into the. all.
Bread gets stuck in appliance	Unplug the appliance and let it cool down. Carefitly remove the bread from t he toaster. Take care not to damage the heating elements when you remove the bread. Never use a metal object for this purpose.
Toast is too light/too dark	Check the browning setting selected for toasting. Select a lower setting next t ime if your toast is too dark and a higher setting if your toast is too light. Also, check that the frozen button is not selected.
The bread pops up almost imme diately without having been toas ted.	Make sure you push down the toasting lever all the way.
Smoke comes out of the toaster.	Push the cancel button to stop the toasting process. Empty crumb tray if it is hull and clean if needed.
The cord is damaged.	If the cord to this appliance is damaged, it must always be replaced by a serv ice center.

Limited Warranty

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit cafeappliances.com/support for product care/maintenance self-help.

In Canada, visit service.geappliances.ca/servicio/en_CA/.

To initiate a warranty claim, please visit cafeappliances.com/support/returns/, or call 1-800-430-1757. Please have your model number and serial number available. Return and packing instruction information will be provided at that time. In Canada, contact us at cafeappliances.ca

For the Period of:	Café Appliances Covers
One Year From the date of the original purchase	If the toaster fails due to a defect in materials or workmanship, during the limited one-year warranty, GE Appliances will either replace or refurbish your product with a new or remanufactured product, or refund the purchase price of the product at GE Appliances sole discretion.

What Café Appliances Will Not Cover:

- Improper installation, delivery, or maintenance.
- Failure of the product if it is abused, misused, or used for other than the intended purpose or used commercially.
- Damage caused after delivery.
- Damage to the product caused by accident, fire, floods or acts of God.
- Incidental or consequential damage caused by possible defects with this appliance.
- Software bugs that can be corrected with an update via the Café App
- Labor and other charges to install and/or remove the product

EXCLUSION OF IMPLIED WARRANTIES

Your sole and exclusive remedies are product exchange or refund as provided in this Limited Warranty. Any implied warranties, including the implied warranties of merchantability or fitness for a particular purpose, are limited to one year or the shortest period allowed by law.

For sale in the 50 United States, District of Columbia, and Canada only:

This limited warranty is extended to the original purchaser for products purchased for home use within the USA. In Alaska and Hawaii, the limited warranty does not include the costs of shipping units. California residents may have additional return options. Please ask call center for additional information.

Some states do not allow the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are, consult your local or state consumer affairs office or your state's Attorney General.

Warrantor: GE Appliances, a Haier company
Louisville, KY 40225

For Customers in Canada: This limited warranty is extended to the original purchaser and any succeeding owner for products purchased in Canada for home use within Canada. In-home warranty service will be provided in areas where it is available and deemed reasonable by Mabe to provide. For extended warranty information, visit geappliances.ca/purchaseextended-warranty

Warrantor Canada: MC Commercial, Burlington, Ontario, L7R 5B6

Consumer Support

CAFÉ WEBSITE

Have a question or need assistance with your appliance? Try the Café Appliances Website 24 hours a day, any day of the year! You can also shop for more great Café Appliances products and take advantage of all our online support services designed for your convenience. cafeappliances.com In Canada: cafeappliances.ca

REGISTER YOUR APPLIANCE

Register your new appliance online at your convenience! Timely product registration will allow for enhanced

communication and prompt service under the terms of your warranty, should the need arise. You may also mail in the pre-printed registration card included in the packing material. cafeappliances.com/register
In Canada, service.geappliances.ca/servicio/en_CA/

PARTS AND ACCESSORIES

Individuals qualified to service their own appliances can have parts or accessories sent directly to their homes (VISA, MasterCard, and Discover cards are accepted). Order on-line today 24 hours every day. cafeappliances.com/parts

In Canada: geappliances.ca/parts-filters-accessories

Instructions contained in this manual cover procedures to be performed by any user. Other servicing generally should be referred to qualified service personnel. Caution must be exercised, since improper servicing may cause unsafe operation.

CONTACT US

If you are not satisfied with the service you receive from Café Appliances, contact us on our Website with all the details including your phone number, or write to General Manager,


General Manager, **Customer Relations | GE Appliances, Appliance Park | Louisville, KY 40225**
cafeappliances.com/contact

In Canada: Director, Consumer Relations, Mabe Canada Inc. | Suite 310, 1 Factory Lane | Moncton, N.B. E1C 9M3 cafeappliances.ca/support/contact-us

49-9000002 Rev.. 4 07-21 GEA



 Documents / Resources

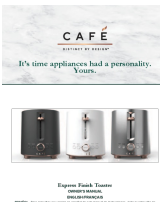	CAFE C9TMA2S2PS3 Express Finish Toaster [pdf] Owner's Manual C9TMA2S2PS3, C9TMA2S3PD3, C9TMA2S4PW3, Express Finish Toaster
---	---

References

-  [Café, Customizable Kitchen Appliances for the Modern Home](#)
-  [Contact Us or Get Help with Questions About Café Kitchen Appliances](#)
-  [Cafe Appliances](#)
-  [Contact Us or Get Help with Questions About CafÃ© Appliances](#)
-  [Appliance Parts, Accessories & Water Filters | GE Appliances](#)
-  cafeappliances.com/register
-  [CafÃ© Appliance Product Returns, Exchange, Replacement | CafÃ©](#)
-  [Canada Service Store](#)