



Cafe CTS90DM2NS5 Push to Open Door Unit Instructions

[Home](#) » [Cafe](#) » Cafe CTS90DM2NS5 Push to Open Door Unit Instructions 

Contents

- [1 Cafe CTS90DM2NS5 Push to Open Door Unit](#)
- [2 INSTALLATION CHECKLIST FOR PROPER PUSH TO OPEN DOOR OPERATION:](#)
- [3 Checking if the Unit is Level after Installation:](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Cafe CTS90DM2NS5 Push to Open Door Unit

INSTRUCTION MANUAL

Push-to-Open Door Unit
Leveling Instructions
(REVIEW BEFORE INSTALLING UNIT)

INSTALLATION CHECKLIST FOR PROPER PUSH TO OPEN DOOR OPERATION:

1. Before installing unit, check cabinet base with spirit level ensuring the cabinet is level. Floor of cabinet cannot have more than 1/4 of an inch drop from front to back.
2. Install unit into cabinet and check that door falls open properly:

- Push on the door at the center of door about 1" down from the top of the door. Push in until you here an audible "click" from the door latch.
- Remove hand from door and let the door fall freely. Door should open on its own and come to a controlled stop at full open.

3. If the unit is not level, the door may stick before reaching fully the open position, most notably getting stuck open approximately 1" from closed position. If this occurs, follow the steps in next section to verify.

Checking if the Unit is Level after Installation:


1. Place spirit level vertically against either vertical brace (DO NOT measure using the door) as demonstrated in illustration.

NOTE: The vertical brace is the component on which the door hinges engage with the oven.


2. Check that the unit is level based on one of the following conditions:

- If using a bubble level: the bubble should be centered between the indicator lines, ensuring that the bubble is not touching or extended past either line.
- If using a digital level: the level should measure ± 1 degree from vertical.

3. If unit does not meet one of the conditions indicated in #2, add shims to front or rear of unit or adjust the cabinet base if possible, to adjust the unit. If major adjustments are required, please contact cabinet maker or carpenter.

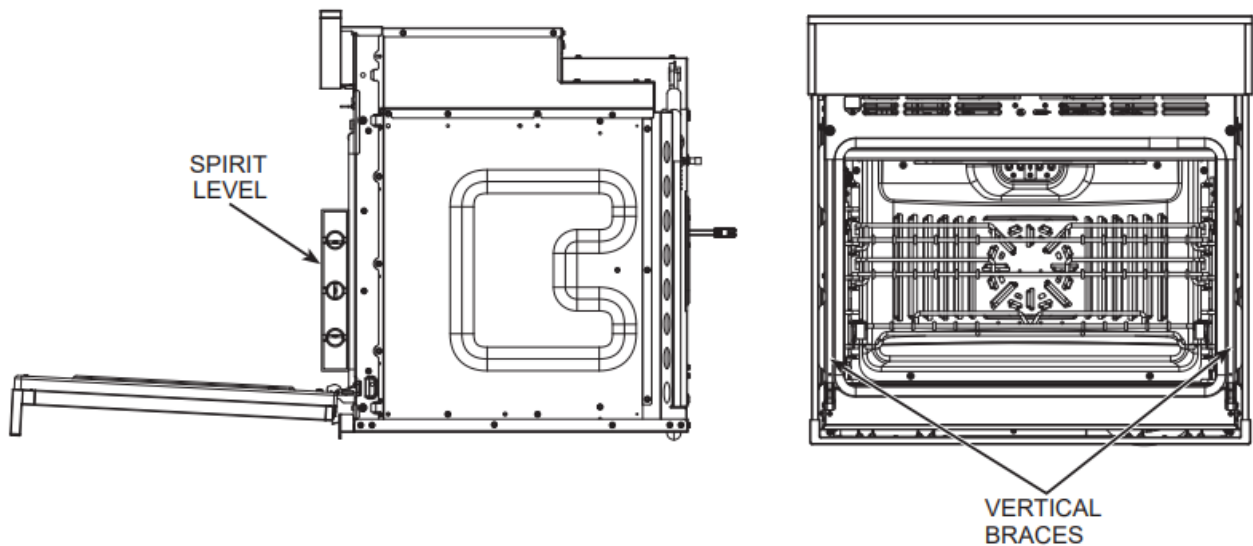

Documents / Resources

 

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.