



CALIMAR Automation Adapter Panel Pool Pumps User Guide

[Home](#) » [CALIMAR](#) » CALIMAR Automation Adapter Panel Pool Pumps User Guide 

Contents

- [1 CALIMAR Automation Adapter Panel Pool Pumps](#)
- [2 INTRODUCTION](#)
- [3 System](#)
- [4 Usage Instructions](#)
- [5 CONNECTING TO A VARIABLE MOTOR](#)
- [6 OPERATING AN AUTOMATION](#)
- [7 Programming a Custom Schedule](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



CALIMAR Automation Adapter Panel Pool Pumps



INTRODUCTION


The Automation Adapter Panel is a product designed to connect to a variable motor. This product comes with an installation manual and user's guide for proper installation and usage.

WARNING

Accessing connections in close proximity to mains connections carries line voltage capable of causing personal injury or damaging the equipment if contact is made. Power should be turned off when accessing these areas. The automation adapter must be wired according to the locally adopted version of the NEC. A licensed, qualified electrician should complete the wiring for this product. Failure to comply with this may result in death, serious personal injury or property damage.

System

The Automation Adapter Panel comes with an external relay speed control wiring for remote selection of pump speed. Please note, all settings should be based on manual mode. The primary remote control scheme is available in two transformer relay options, Relay 1 and Relay 2. The low voltage raceway should not run high voltage in this compartment.

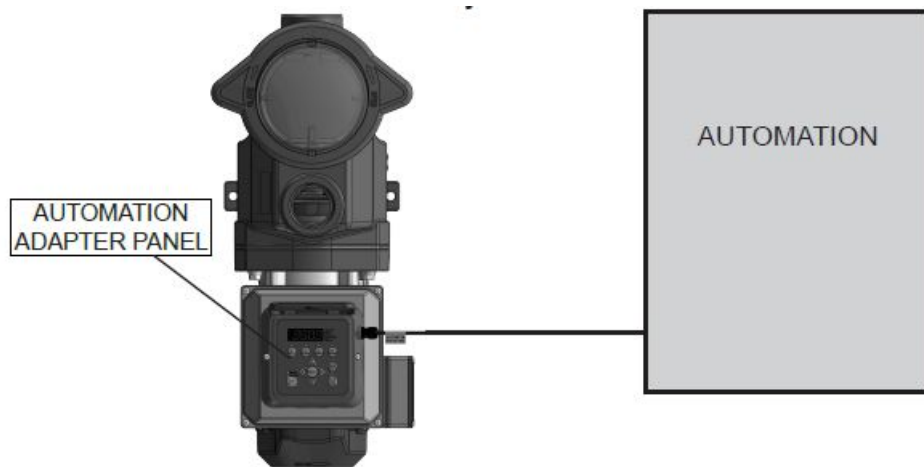

Usage Instructions

To connect the Automation Adapter Panel to a variable motor, follow these steps:

1. Remove the User Interface from the controller (4 screws).
2. Disconnect the 6-pin communication connector.

After completing the installation, please refer to the Programming a Custom Schedule 1-14 for specific operation steps. The externally controlled relay sets the start time and end time for different speeds at different running times. Up to four speeds can be realized. The pump operation panel controls the speed and duration of each speed setting. Please refer to the Function Description for SPEED1 for Priming Function and Function Description for SPEED2 for scheduling running time at different speeds according to your total set time.

PRODUCT INTRODUCTION

The Automation Adapter panel the ability to operate a motor with a 3rd party automation system such as the Hayward® Goldline® Pro Logic®, Pentair® Easytouch®, Jandy® Aqualink®, and Intermatic® controls. This will allow the user to control and experience the full variable speed capability of an automation adapter panel product through an existing automation system.

WARNING

Access to the connections referenced in the diagrams below could be in close proximity to mains connections which carry line voltage capable of causing personal injury or damaging the equipment if contact is made. Power should be turned off when accessing these areas.

CONNECTING TO A VARIABLE MOTOR

WARNING

The automation adapter must be wired according to the locally adopted version of the NEC. A licensed, qualified electrician should complete the wiring for this product. Failure to comply with this may result in death, serious personal injury or property damage.


External Relay Speed Control Wiring (For remote selection of pump speed)

Note:

1. For third-party controls that are NOT software compatible.
2. All setting should be based on “manual” mode.

CF Techflife is not affiliated with Hayward® Goldline® Pro Logic®, Pentair® Easytouch®, Jandy® Aqualink®, and Intermatic® Industries, Inc. The use of such trademarks herein is for informational purposes only. And the goods are not those of Hayward® Goldline® Pro Logic®, Pentair® Easytouch®, Jandy® Aqualink®, and Intermatic® Industries, Inc.

Remote control scheme 1

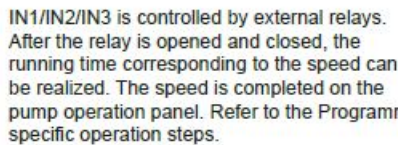

| Timer Speed | IN1 | IN2 | IN3 | Default Speed(RPM) |
|-------------|-----|-----|-----|--------------------|
| 1 | ON | | | 3000 |
| 2 | | ON | | 1500 |
| 3 | | | ON | 2500 |

SPEED1: Can be used as the Priming function 1700~3450RPM) time: (1min~5min)

 
Function description: Externally controlled relay sets start time and end time.

IN1→RELAY1:AM8:00-AM10:00 Operating speed 3000RPM.


IN2→RELAY2:AM10:01-PM12:00 Operating speed 1500RPM.

IN3→RELAY3:PM12:01-PM10:00 Operating speed 2500RPM.

Remote control scheme 2



Function description: The externally controlled relay sets the start time and end time. For example, the set time is AM8:00-PM8:00 for a total of 12 hours. According to the default setting, the pump runs SPEED1 (3000RPM, 2HOURS) when the relay is closed. Then run SPEED2 (1500RPM, 10HOURS). Users can schedule the running time at different speeds according to their total set time. Up to four speeds can be realized.

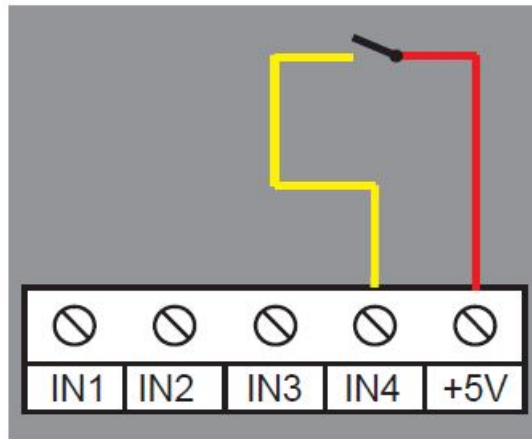

The following steps should be followed to connect the automation adapter to a variable motor.

1. Remove the User Interface from the controller(4 screws). Disconnect the 6-pin communication connector
2. The 6-pin communication connector and Automation Adapter Panel Installed. Assemble the Automation Adapter Panel (2 screws)



OPERATING AN AUTOMATION

Setting the Clock

When the pump is first installed, it is necessary to set the clock. Any daily schedule set by the user must be based on accurate time setting.

To Set the Clock:

1. When the pump is plugged in, the TIME led light is blinking. Entering clock setup by pushing Display Key.

Note:

1. Time setup will be unavailable after 5 seconds' blinking.
2. If pump already in energizing, Meanwhile press "<" and ">" Key for about 3 seconds, the TIME led light is blinking. Entering clock setup by pushing Display Key.
2. Use the arrows to choose between a 12 or 24 hour time format.
3. Use the "+" and "-" arrows to change the time to the correct time of day. In the 12 hour time format AM/PM will display in the bottom left corner.
4. Press Display for about 3 seconds to exit the Clock Setup menu. The TIME led light is no blinking. The clock is now set. During a power outage, the drive will retain the clock setting in memory for as long as one day. If the power is out longer than one day the clock will have to be set again.

Programming a Custom Schedule

Note: When programming, the LED light next to the parameter (“Speed”, “Time” and “Duration”) you are setting will blink.

1. Stop the pump if it is running by pressing the Start/Stop button.
2. Press the “1” button. The LED above the selected SPEED will begin to blink and the “Speed” parameter LED will blink while editing. See Figure 1.
3. Use the “+” and “-” arrows to adjust the speed in RPM for SPEED 1.
Note: Speed is adjusted up or down by increments of 10 RPM.
4. Press the “1” button again and the display will change to SPEED 1 start time. The “Time” parameter LED will begin to blink. See Figure 2.
5. Use the “+” and “-” arrows to adjust the daily start time for SPEED 1.
6. Press the “1” button again and the display will change to SPEED 1 duration. The “Duration” parameter LED will begin to blink. See Figure 3.
7. Use the “+” and “-” arrows to adjust the duration for SPEED 1 in hours and minutes.
Note: The duration parameter is adjusted in 1 minute increments.
8. Pressing the “1” button will continue to cycle through these parameters, but the changes are immediately saved as they are adjusted.
9. Press the “2” button. The LED above SPEED 2 will begin to flash and the corresponding parameter LED will flash while editing.
10. Use the “+” and “-” arrows to adjust the speed in RPM for SPEED 2.
11. Press the “2” button again and the display will change to SPEED 2 duration.
Note: SPEEDs 2 and 3 do not have a start time, as they begin their duration immediately after the previous SPEED finishes.
12. Use the “+” and “-” arrows to adjust the duration for SPEED 2 in hours and minutes.
13. Repeat steps 9-12 to program SPEED 3-4 and QUICK CLEAN.
Note: Remember that the duration allowed for SPEED 3 will be limited to the remaining time in a 24 hour day. Any time in the 24 hour day not programmed into SPEEDs 1-4, the pump will remain in a stationary state. [$\text{SPEED 1} + \text{SPEED 2} + \text{SPEED 3} + \text{SPEED 4} < 24 \text{ Hours}$]
14. Press the Start/Stop button and ensure the LED is lit. The pump is now on and will run the custom user-programmed schedule.
Note: If the pump has been stopped via the Start/Stop button, the pump will not run until the pump is turned back on by the Start/Stop button. If the Start/Stop LED is illuminated then the pump is on and will run the programmed schedule.




Figure1



Figure2



 Figure3



[CALIMAR Automation Adapter Panel Pool Pumps](#) [pdf] User Guide

Automation Adapter Panel Pool Pumps, Automation Adapter Panel, Pool Pumps, Pumps