



# CallToU CC23 Wireless Plug-in Pager System User Manual

[Home](#) » [CALLTOU](#) » CallToU CC23 Wireless Plug-in Pager System User Manual 

## Contents

- [1 CallToU CC23 Wireless Plug-in Pager System](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Clear All Pairing/Reset](#)
- [5 Specifications](#)
- [6 Troubleshooting](#)
- [7 Warranty](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)

# CallToU

**CallToU CC23 Wireless Plug-in Pager System**



## Product Information

Product Model	CC23 BT009WH E-03W
Receiver Model	CC23
Watch Call Button Model	E-03W
Pendant Call Button Model	BT009

## Product Usage Instructions

### Mode Selection:

Push the Mode Selection to switch between A/B/C/D working modes:

- A. Ringtone + Flash
- B. Ringtone
- C. Flash
- D. Mute

### LED:

Dazzling Flashing

### Power:

Hold for 3 seconds to power on/off

### Volume:

Adjust the volume with 5 adjustable levels ranging from 0 to 110DB

**Ringtone:**

Choose from 4 available ringtones:

1. bibibibi (15 seconds)
2. alarm sound (15 seconds)
3. hello, welcome (2 times)
4. dingdong (2 times)

**Watch Button:**

Rechargeable with magnetic charging

**Call Button:**

Comes with a lanyard and back clip, low power alert, powered by 1\*12V 23A battery

**About the watch SOS button:**

You can wear it on your wrist, and when you press the button, it will send a wireless signal to the receiver, causing it to ring.

**Magnetic charging:**

Make sure the magnetic charging tips are correctly attached to the watch. Refer to the provided picture for guidance.

**Memory function:**

The ringtone will not change after turning off the device. The default volume is the loudest, but you can adjust it accordingly.

**Different ringtones for different buttons:**

You can set different ringtones for the pendant call button and watch call button.

**About the pendant call button:**

You can mount it using adhesive tape or a screw and use the lanyard to hang it around your neck.

**Lower Power Alert:**

When the power of the watch button or clip call button is low, the indicator will flash red.

**Change The Ringtone/Re-pairing/Add More Receiver/Call Button:**

We have already paired the receiver with the pager before shipping, so simply plug it in and it will be ready to use. If you want to add more receiver/transmitter with a different ringtone or set a different ringtone for each call button, or repair the receiver and call button, follow these steps:

- Step 1: Press the music key on the receiver to select the ringtone.
- Step 2: Hold the volume key on the receiver until the LED light blinks with a ding, indicating that the receiver is in pairing mode. The pairing mode lasts for 8 seconds and will exit automatically.
- Step 3: Press the call button/watch button.
- Step 4: Press the call button again. If the receiver rings, it means the pairing was successful. The indicator will blink again.
- Step 5: Repeat the process to pair with more items.

### Clear All Pairing/Reset:

Hold the music key on the receiver until the receiver LED light blinks with a ding. Wait for about 10 seconds or more until another ding, then the receiver will return to default settings.

### Product Specifications:

Working Frequency	433.92MHZ
Data Rate	3.7Kbps
Working Current	5.5mA
Standby Current	—
Standby Time	—
Battery Volume	—
Times of Transmits	—
Charging Indicator	—
Charging Time	—
Temperature Frequency	—
Receiver Voltage	—
Pendant Call Button Voltage	—
Wrist SOS Push Button	—

**Note:** We have paired receiver with call button before shipping, just put in the battery(included) and be ready!


Thank you very much for purchasing our wireless pager system. This is a plug-in receiver and can be paired with call button to form a wireless calling system. No network required, no extra cost. Press the personal SOS call button to send an emergency alert to the caregiver. At the push of an alert button, CallToU receiver will alarm your loved ones that you need help.

### Graph

- Plug-in Receiver(CC23)



- Pendant Call Button(BT009 Grey/Red)

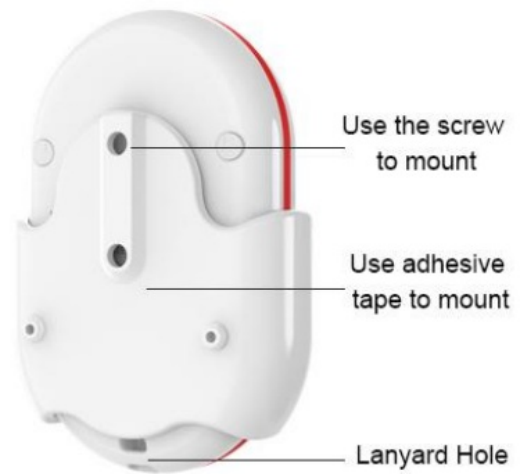


- Watch Call Button(White / Black)



NO.	Features	Description
①	Mode Selection	Push the Mode Selection to switch from A/B/C/D working modes: A.Ringtone + Flash B.Ringtone C.Flash D.Mute
②	LED	Dazzling Flashing
③	Power	Hold for 3S Power on/ off
④	Volume	5 adjustable Volume 0-110DB
⑤	Ringtone	4 Ringtones to choose 1) bibi bibi 15s 2) alarm sound 15s 3) hello, welcome 2 times 4) dingdong 2 times
⑥	Watch Button	Rechargeable Magnetic charging
⑦	Call Button	With Lanyard, back clip, low power alert, powered by 1*12V 23A battery

1. About watch SOS button: You can wear it on your wrist, the belt is removable. When you press the button, it will send a wireless signal, and the receiver will ring.
2. Make sure magnetic charging tips are attached to the watch appropriately. Please refer to below Picture.

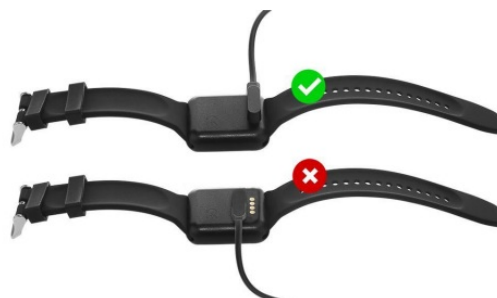

3. Memory function (the ringtone will not change after turning off, and the default volume is the loudest, you can adjust it accordingly)
4. You can set different ringtones for different Buttons
5. About the pendant call button, you can use adhesive tape or a screw to mount it and use the lanyard to hang it on the neck.
6. Lower Power Alert
  - When the watch button's power is low, the indicator will flash red.
  - When the clip call button's power is low, the indicator will flash red.

## Change The Ringtone/Re-pairing/Add More Receiver/Call Button

We have paired receiver with pager before shipping, just plug in and be ready! If you want to add more receiver/transmitter with different ringtone If you want to set different ringtone for different call button If you want to repair the receiver and call button

Their operation are all the same, please follow the below steps:

- **Step 1:** Press the music key on the receiver to select the ringtone.
- **Step 2:** Hold volume key on the receiver until LED light blinks with a “ding”, and receiver is under pairing mode.  
The pairing mode only lasts 8 seconds and will exit automatically



- **Step 3:** Press the call button/watch button, then the receiver will make a “ding ding” sound and blink again.
- **Step 4:** Press the call button again, if the receiver rings, it means that the pairing was successful.



- **Step 5:** Repeat the process again to pair with more items.

## Clear All Pairing/Reset

- Hold music key on the receiver until the receiver LED light blinks with a “ding”, wait for about 10 seconds or more until another “ding”, then receiver return to default.

## Specifications

Wrist SOS Push Button	
Working frequency	433.92MHZ
Data Rate	3.7Kbps
Working current	5.5mA
Standby current	<20nA
Standby time	6month after fully charged
Battery volume	35MAH
Times of transmits	10000 times after fully charged
Charging indicator	Red light(Charging), Green light(fully charged)
Charging time	<30 minutes
Receiver	
Temperature	-30°C to +70°C
Frequency	433.92MHz±280KHz
Receiver voltage	AC 110-260V (wide voltage)
Pendant call button voltage	23A 12V alkaline battery

## Troubleshooting

**Question:**When you receive the package, but it can not work? 2.After you use a period of time,it stops work?

**Answer:** You can try the following steps to solve the problem:

1. Check if the indicator of call button is flash red or not, if flash red ,please charge the watch button for 30 - 60minutes,or change the call button with a new battery.
2. Press the volume key of the receiver to see if it can ring
3. If the call button and the receiver are all powerful,try to change the distance between the receiver and call button,maybe their distance is out of the range(300ft)
4. If it still can not work, please try to repair the receiver and the call button,maybe the receiver was (repair operation please refer to the “change the ringtone” in the manual.)

If the above operation can not solve your problem,please contact us though amazon(contact seller),we will definitely solve your problem.

## Warranty

1. Warranty period: 1 year warranty from the date of purchase
2. If you have any questions when you use it, please contact us through the Amazon site(path)

**Notes:** Please test the receiver and transmitter before installation.



- Please do not put the receiver and transmitter in water or fire to avoid
- Please do not put the receiver and call button near TVs, induction cookers, microwave ovens and other electrical appliances with electromagnetic waves.

If you don't use it for a long time, please take out the battery to prevent condensation on the battery and avoid malfunction.

## A Good Life in Old Age

### Monitoring and Improving Quality in Long-term Care

As a growing number of frail old people in need of home care, delivering quality long-term care services, which are effective and responsive in time, has become a priority for every family. “Call to You” is etermined to provide perfect solutions that enable your loved ones to retain their independence and dignity in daily life, so they can live on their own and release your burden with peace of mind. We “CallToU” focuses on professional home caregiver pagers for more than a decade, and have helped and cared for millions of ELDERLY and those in need to help timely. “Call to you” gives more care for the elderly You Need, We Here!

For FAQs and more information, please visit: [www.calltou.com](http://www.calltou.com)



- Product model: CC23 BT009WH E-03W
- Receiver: CC23
- Watch Call Button: E-03W Pendant Call Button: BT009

### Documents / Resources

	<div> <a href="#">CallToU CC23 Wireless Plug-in Pager System</a> [pdf] User Manual                       CC23, BT009WH, E-03W, BT009WH E-03W, CC23 Wireless Plug-in Pager System, Wireless Plug-in Pager System, Plug-in Pager System, Pager System         </div>
--	--

### References

- [CallToU Caregiver Pager, Calling System, Walkie Talkie, Doorbell-calltou.com – CallToU](#)

Manuals+.