



# Calphalon CKCLWF3 Precision Control Waffle Maker User Manual

[Home](#) » [Calphalon](#) » Calphalon CKCLWF3 Precision Control Waffle Maker User Manual 

Calphalon CKCLWF3 Precision Control Waffle Maker



## Contents

- [1 IMPORTANT SAFEGUARDS](#)
- [2 SHORT POWER SUPPLY CORD](#)
- [INSTRUCTIONS](#)
- [3 PRODUCT DIAGRAM](#)
- [4 PREPARING YOUR USE](#)
- [5 HOW TO USE YOUR WAFFLE MAKER](#)
- [6 CLEANING & MAINTENANCE](#)
- [7 1 YEAR WARRANTY](#)
- [8 Other Model](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

1. Read all instructions before using this product.
2. This appliance generates heat during use. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.

4. This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities.
5. Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
6. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. Do not disconnect by pulling on cord.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors or for commercial purposes.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near wet surfaces, or heat sources such as a hot gas or electric burner, or in a heated oven.
12. Do not use appliance for other than intended use. Misuse can cause injuries.
13. Intended for household countertop use only. Keep 6 inches ( 152 mm) clear from the wall and on all sides.  
Always use appliance on a dry, stable, level surface.

## **SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY**

### **POLARIZED PLUG**

This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.



### **SHORT POWER SUPPLY CORD INSTRUCTIONS**

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the electrical rating of the cord must be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.

### **NOTICES:**

1. Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your waffle maker to prevent possible damage to the surface.
2. During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many

heating appliances and will not recur after a few uses.

## PRODUCT DIAGRAM

1. Shade Selector Dial with 5 Browning Settings
2. LED Indicator Lights – Cooking Progress
3. Ceramic Coated Cooking Plates
4. Lid Handle



## PREPARING YOUR USE

- Before you use your waffle maker, remove all packaging.
- Clean waffle maker as per cleaning instructions in this manual.

Dry thoroughly and close lid .

- Place the waffle maker on a flat surface and do not put anything on top of it.
- Never immerse the waffle maker, power cord or plug in water or any other liquid.

## HOW TO USE YOUR WAFFLE MAKER

- Always ensure the Shade Selector Dial is turned OFF before plug in the waffle maker.
- Use the Shade Selector Dial to select the desired shade of waffle from “LIGHT” to “DARK”. Once selected, the preheating light will illuminate and the PREHEATING process will begin.
- We suggest using one of the middle shades when cooking your first waffle, to determine preference. The waffle maker will adjust time based on the selected shade.
- Once the PREHEATING process is completed, the PREHEATING light will switch off and the READY light will illuminate.
- Open the lid, pour approximately 1/2 cup of batter evenly on the center of each waffle square and close the lid. The batter should just cover the peaks of the Cooking Plates. For best results, wait until READY light is illuminated before adding batter. The Waffle Maker may not accurately sense doneness and calculate accurate cooking time if batter is added prior to READY light illuminating.
- Once the lid is closed, the READY light will switch off, and the COOKING light will illuminate.
- You can lift the lid during the cooking process to check on the waffle; however, it may affect the final cooking result.
- At the end of the cooking cycle, the COOKING light will switch off, and the DONE COOKING light will illuminate.
- Open the lid and carefully remove your waffles using non-metallic utensils.
- If you would like to make more waffles, the Waffle Maker may need to preheat after cooking is complete. Close the lid and wait until the READY light is illuminated again before adding batter.
- Unplug and allow to cool before cleaning.

**CAUTION:** DO NOT USE METAL UTENSILS AS THEY CAN SCRATCH THE NON-STICK COATING.

**NOTE:** For further details on product features and usage instructions, please visit [www.calphalon.com](http://www.calphalon.com)

## CLEANING & MAINTENANCE

**CAUTION:** DO NOT IMMERSE ANY PART OF THE WAFFLE MAKER IN WATER OR ANY OTHER LIQUID.

- Always unplug your waffle maker from the electrical outlet, and allow it to cool before cleaning.
- Always clean the waffle maker after each use.
- Wipe Cooking Plate and overflow with a damp paper towel or soft cloth to remove food residue. DO NOT use steel wool or other metal pads as this may scratch the surface. You may wash it with hot soapy water, rinse and dry thoroughly.
- The exterior of the waffle maker can be wiped clean with a damp cloth.
- No other servicing should be performed.

**NOTE:** The waffle maker is easier to clean when slightly warm.

This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See Warranty Section.

## 1 YEAR WARRANTY

For additional information on your Calphalon Precision Control Waffle Maker and detailed warranty information, visit us at [www.calphalon.com](http://www.calphalon.com) or call us at 1-800-809-7267

## Other Model



**Calphalon®** 

## Documents / Resources

	<a href="#">Calphalon CKCLWF3 Precision Control Waffle Maker</a> [pdf] User Manual CKCLWF3, CKCLWF3 Precision Control Waffle Maker, Precision Control Waffle Maker, Waffle Maker, Maker
--	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## References

-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.