



CAMBRIDGE CXN100 Network Player

[Home](#) » [Cambridge](#) » CAMBRIDGE CXN100 Network Player 

Contents

- 1 CAMBRIDGE CXN100 Network Player
- 2 Product Information
- 3 Product Usage Instructions
- 4 Frequently Asked Questions (FAQ)
- 5 Introduction
- 6 Front panel controls
- 7 Rear panel connections
- 8 Display
- 9 Remote Control
- 10 Getting connected
- 11 Troubleshooting
- 12 Frequently asked questions
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts



CAMBRIDGE CXN100 Network Player



Product Information

Specifications

- **Model:** CXN100
- **Manual Generated:** 05/11/2024 – 16:57
- **Last Updated:** November 5, 2024 04:40
- **Revision:** #14128

Product Usage Instructions

What's included with the CXN100?

Inside the box of your CXN100 you will receive:

1. CXN100 Network Player
2. Safety Guide
3. Quick Start Guide
4. Control Bus Cable
5. 2x Wi-Fi/Bluetooth Antennas
6. Regional Power Cable

Front Panel Controls

The front panel controls include speaker output, mute volume, firmware update, MQA indicator, shuffle, repeat, and repeat +1.

Rear Panel Connections

The rear panel connections include digital inputs (Coax and Optical), digital outputs, line output, and balanced audio output.

Remote Control

The CXN100 can be controlled via the StreamMagic app. If you wish to use a remote control with your device, the CX series 2 remote control is compatible with the CXN100.

Getting Connected

Switch the power off before making any connections. There are two analogue connection options for the CXN100: Line Output Connection (RCA) and Balanced Audio Connection (XLR).

Frequently Asked Questions (FAQ)

- **Q: Does the CXN100 come with a remote control?**


A: The CXN100 does not have its own remote control included. It can be controlled via the StreamMagic app. However, the CX series 2 remote control is compatible with the CXN100 if you prefer to use a physical remote.

- **Q: How can I update the firmware of the network streamer?**

A: When new firmware is available, an indication will appear on the device. You can press the 'Info' button on the front panel or use the StreamMagic app to update the network streamer's firmware.

CXN100

Last updated: November 5, 2024 04:40. Revision #14128

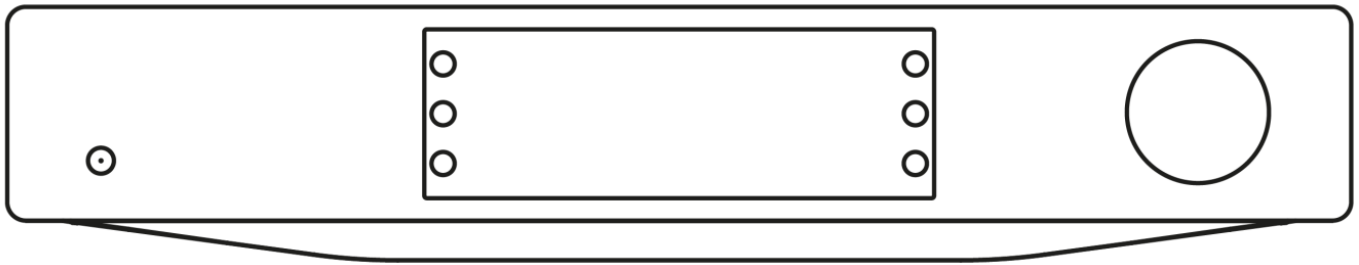

Introduction


- Last updated: November 29, 2023 09:17. Revision #11481
- This guide is designed to make installing and using this product as easy as possible. Information in this document has been carefully checked for accuracy at the time of publishing; however, Cambridge Audio's policy is one of continuous improvement, therefore design and specifications are subject to change without prior notice.
- This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer. All trademarks
- and registered trademarks are the property of their respective owners.
- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Audio Partnership Plc is under license. Other trademarks and trade names are those of their respective owners.
- Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries. aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries.
- Qualcomm aptX is a product of Qualcomm Technologies, Inc. and/or its subsidiaries.
- StreamMagic is a trademark of Audio Partnership Plc and is registered in the European Community and other countries.
- This product contains software licensed under version 2 of the GNU Public License and version 2.1 of the GNU Lesser Public License. The source code for this software is available from: <https://gpl.stream-magic.com/>
- This product includes technology owned by Microsoft Corporation and under a licence from Microsoft Licensing GP. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft Corporation and/or Microsoft Licensing, GP as applicable.
- The Spotify Software is subject to third party licenses found here: <https://www.spotify.com/connect/third-party-licenses>
- To use AirPlay with CXN100, the latest version of iOS, iPadOS, or macOS is recommended.
- Apple, AirPlay, Apple Home, Apple TV, Apple Watch, HomeKit, HomePod, HomePod mini, iPad, iPad Air, iPhone, and tvOS are trademarks of Apple Inc., registered in the U.S. and other countries and regions.
- Use of the Works with Apple AirPlay badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.
- Android, Google Play and the Chromecast built-in are trademarks of Google LLC.
- TIDAL and TIDAL logo are registered trademarks of Aspiro AB in the European Union and other countries.
- MQA and the Sound Wave Device are registered trademarks of MQA Limited © 2016.

© Copyright Cambridge Audio Ltd

For upcoming news on future products, software updates and exclusive offers, make sure you register your product at <https://www.cambridgeaudio.com/register>

What's included with the CXN100?

Last updated: February 1, 2024 01:32. Revision #11674

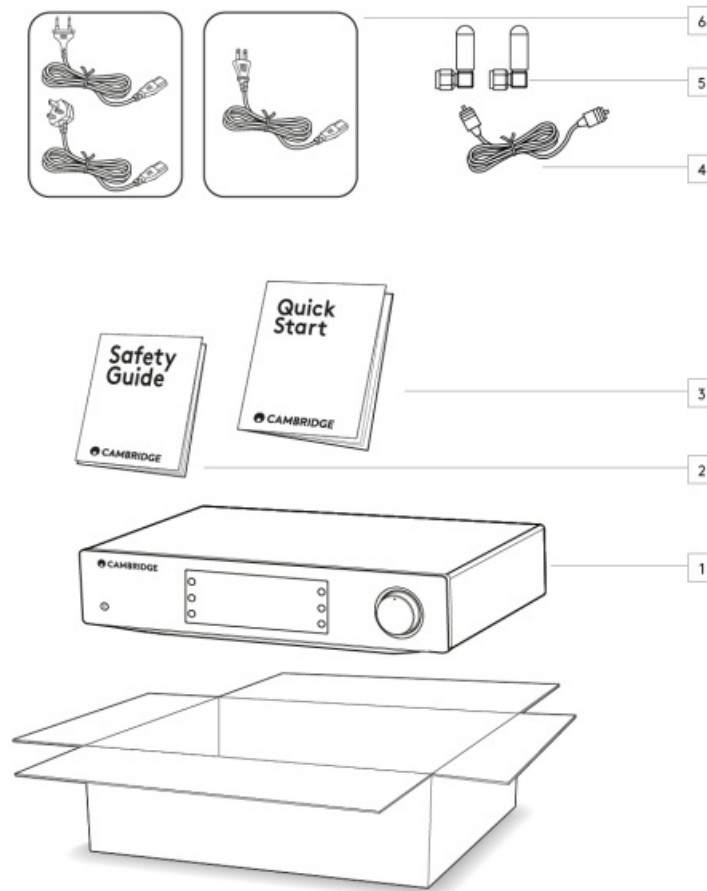


Inside the box of your CXN100 you will receive:

1. CXN100 Network Player
2. Safety Guide
3. Quick Start Guide
4. Control Bus Cable
5. 3x Wi-Fi/Bluetooth Antennas (affixed to the unit)
6. Regional Power Cable

Front panel controls

Last updated: February 1, 2024 01:32. Revision #11675

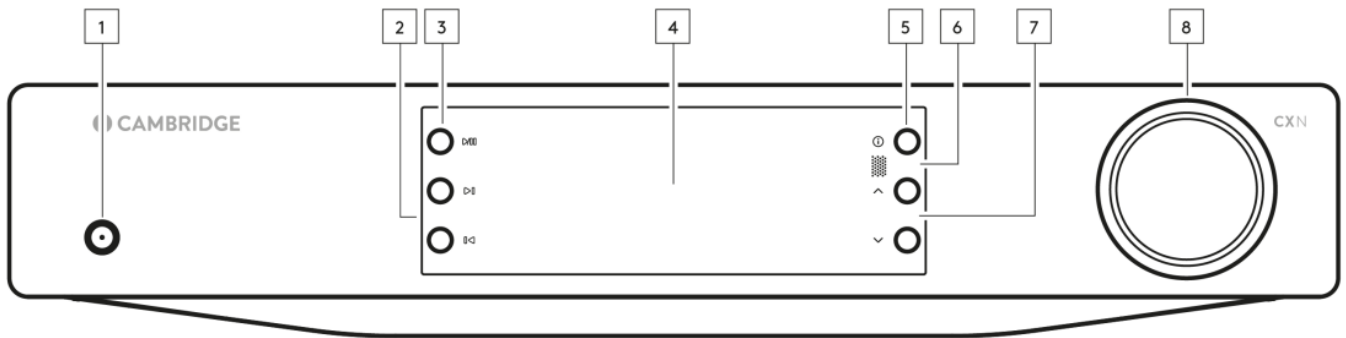

1. Standby/On

Switches the unit between Standby Mode (indicated by dim power LED) and On (indicated by bright power LED).

2. Skip

Skip to next track during playback.

3. Play/Pause

Play or pause current track.

4. Display

5. Info

During playback, pressing this button will cycle through the different 'Now Playing' screens. Press and hold to display the product info, as well as options for updating the firmware, network setup mode and factory reset. Different "Now Playing" screens are saved for each source.

6. Infrared sensor

IR sensor that receives IR commands from the compatible EX series 2 remote control.

Note: The CXN100 does not have its own remote control and does not come with one included.

7. Source Selector


Scroll through sources enabled in the StreamMagic app.

8. Volume Control

When Pre-amp mode is enabled, this will control volume via the analogue outputs.

Rear panel connections

Last updated: January 18, 2024 09:46. Revision #14076

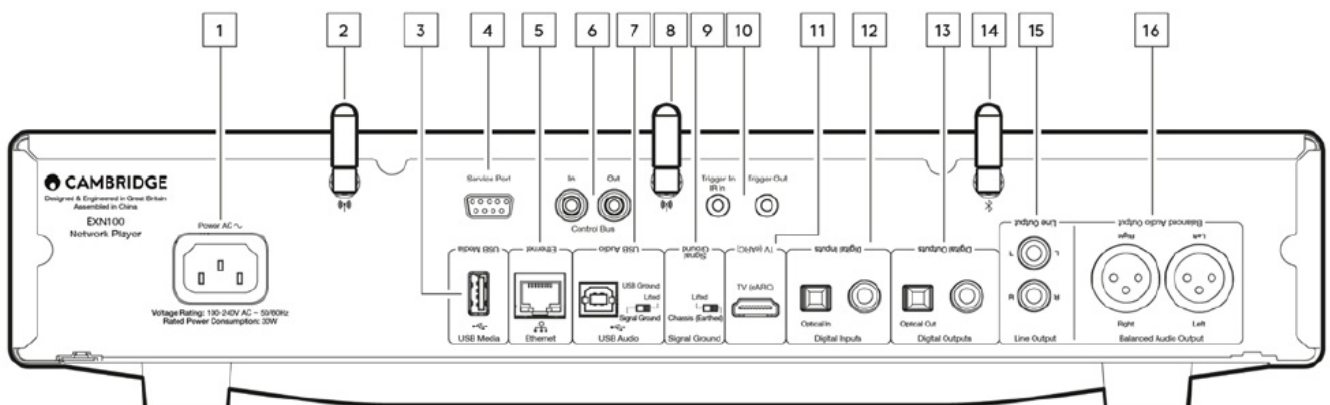

1. AC Power socket

Once you have completed all connections to the amplifier, plug the AC power cable into an appropriate mains socket then switch on.

2. Wi-Fi Antenna

Ensure antenna is connected securely before use.

3. USB Media

For connecting local media storage. Note that the USB ports are not intended for connection to mobile devices; no functionality, charging or otherwise is supported.

4. Service Port

For servicing use only.

Note: Connecting any other device here may result in damage.

5. Ethernet

Use to connect the CXN100 directly to a network router. Use a wired connection for seamless playback of high-resolution 352.8kHz, 384kHz, and DSD 256.

6. Control Bus

RCA sockets used to send and receive power and volume commands from other connected EX Series products. For more information on the Control Bus, see Control Bus section.

7. USB Audio In

A USB B type socket to enable connection to PC, Mac and some Linux computers.

Note: For Class 2 USB audio, Windows-based PCs require a Cambridge Audio USB driver to be installed before connection. You can find the latest USB driver [here](#).

USB Ground Switch

Note: The ground switch position should be set to lifted as default. Use another position if a humming noise occurs.

Lifted – Normal/default position. The main unit audio ground is lifted from chassis earth.

Chassis earthed – USB Audio ground is lifted from the main unit audio ground, which is also lifted from chassis earth. This may be useful to reduce hum and noise that can occur with some USB Audio setups.

8. Wi-Fi Antenna

Ensure antenna is connected securely before use.

9. Signal Ground Switch

Lifted – Normal/default position. The main unit audio ground is lifted from chassis earth.

Chassis earthed – Main unit audio ground is connected directly to chassis ground. For some setups, this can reduce hum or noise when certain TVs, Turntables, and other equipment are connected to the CXN100 unit.

10. riggers

Trigger Out – Use a link wire between the CXN and a product that has a trigger input. This will synchronise the power state of both products when powering the CXN on/standby.

Trigger/IR In

Trigger In – Use a link wire between a product that has a trigger output and the CXN

IR In – Receives modulated IR commands from an IR repeater or custom install systems.

11. Enhanced Audio Return Channel (eARC)

A connection from a TV that supports eARC and ARC via HDMI connection.

12. Digital Inputs (Coax and Optical)

TOSLINK and S/P DIF coaxial digital inputs.

Coaxial – Use a high quality 75 ohm digital RCA Phono interconnect cable (This is different from an analogue audio phono interconnect).

This input is suitable for 16-24 bit content up to 192kHz.

TOSLINK Optical – Use a high quality TOSLINK fibre optic interconnect cable designed specifically for audio use. This input is suitable for 16-24 bit content up to 96kHz (TOSLINK is not recommended at 192kHz sampling rates).

Note: If a digital input is connected to a TV, you can enable TV mode in the sources settings of the StreamMagic app. This mode minimises lip-sync delays on the audio path by bypassing MQA decoding and also reduces the chance of dropouts and glitches from some TVs.

13. Digital Outputs

TOSLINK and S/P DIF coaxial digital outputs.

14. Bluetooth Antenna

Bluetooth functionality won't be possible if this antenna is not connected.

15. Line Output

Line Output (fixed or variable) used to provide a signal to another amplifier or a recording device.


16. Balanced Audio Output

For use with balanced XLR connections. The balanced connection is the higher quality option and can reject noise and interference in the cable when used with other equipment that supports this function.

Note: XLR connectors should be wired as follows: Pin 1: Ground, Pin 2: Hot (in-phase) and Pin 3: Cold (phase-inverted).

Display

Last updated: January 18, 2024 09:46. Revision #14076

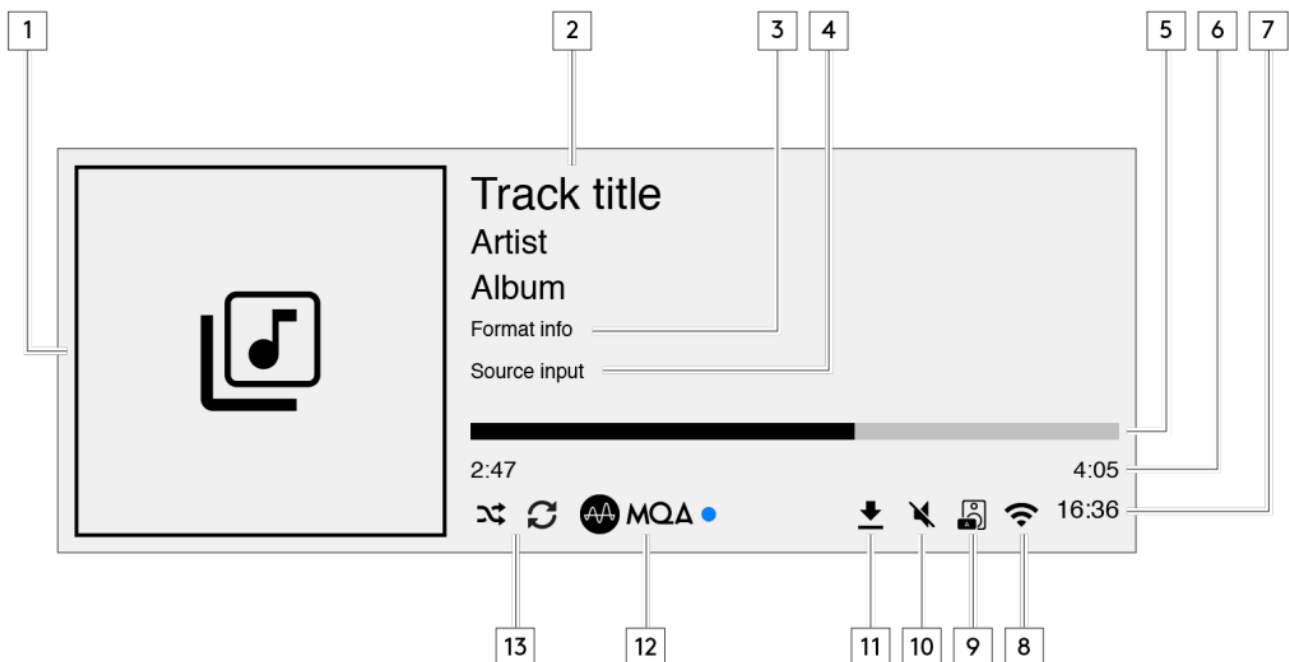

1. Album/Source artwork

Displays the album artwork. Alternatively, if no artwork is available this will display the source input icon.

2. Track title, artist and album

For Internet Radio, this will display the radio station name and the current playback.

3. Format info

Displays the streaming sample rate. For Internet Radio, this will display the bitrate the station is streaming.

4. Source input

Displays the currently selected source input.

5. Progress bar

When available, this will display the current track progression during playback.

6. Track time

When available, this will display the elapsed track time during playback.

7. Clock

8. Network connection

Displays the current network connection.



Wireless network connection



Wireless connection with no internet access



Wired network connection



Wired connection with no internet access



No network connection

9. Speaker output

Displays the currently selected speaker output on relevant network streamers.

10. Mute volume

Displays when the network streamer is muted.

11. Firmware update

This indicates when new firmware is available. Press the 'Info' button on the front panel or use the StreamMagic app to update the network streamer's firmware.

12. MQA indicator


See the MQA section for more details.

13. Shuffle, Repeat and Repeat +1

Remote Control

Last updated: September 27, 2024 03:42. Revision #14075

Note: The CXN100 does not come with a remote control, it supports infrared control using the remote control of the EX series. In addition, CXN100 can also be controlled in more detail through the StreamMagic App

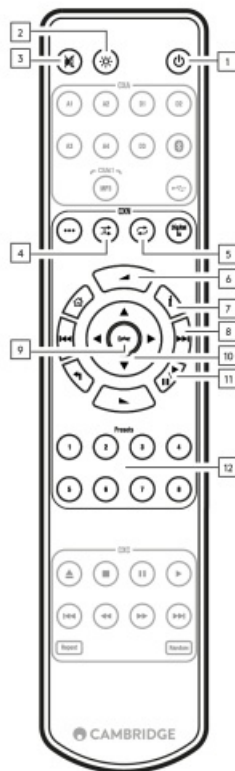

1. Standby/On

Switches the CXN100 between On and Standby mode.

2. Brightness

Alters the brightness of the CXN100 display. There are two brightness levels and an option to switch off the backlight.

Note: When the brightness is switched to 'off', selecting any of the functions will briefly switch on the lights to show the change.

3. Mute

Press to mute or unmute the audio. This can only be used with Preamp mode enabled.

4. Random

Play random track within queue.

5. Info

Tapping will toggle between display information.

Holding will display the 'info' screen.

6. Volume

Volume level adjust. This can only be used with Pre-amp mode enabled when connected via the analogue outputs.

7. Info

Tapping will toggle between display information. Holding will display the 'info' screen.

8. Skip

Skips between previous and next tracks.

9. Enter

Enter or select.

10. Source Selector

Scroll through sources enabled in the StreamMagic app.

11. Play/Pause

Play or Pause current track.

12. Presets

Recalls stored 1 – 8 presets.

If the remote control will not function, please check that the batteries have not expired, and that there is nothing blocking the front panel IR sensor.


Getting connected

Last updated: February 1, 2024 01:33. Revision #11679

Basic Analogue Connections

Important Note: Switch the power off before making any connections. There are two analogue connection options for the CXN100.


Line Output Connection (RCA)

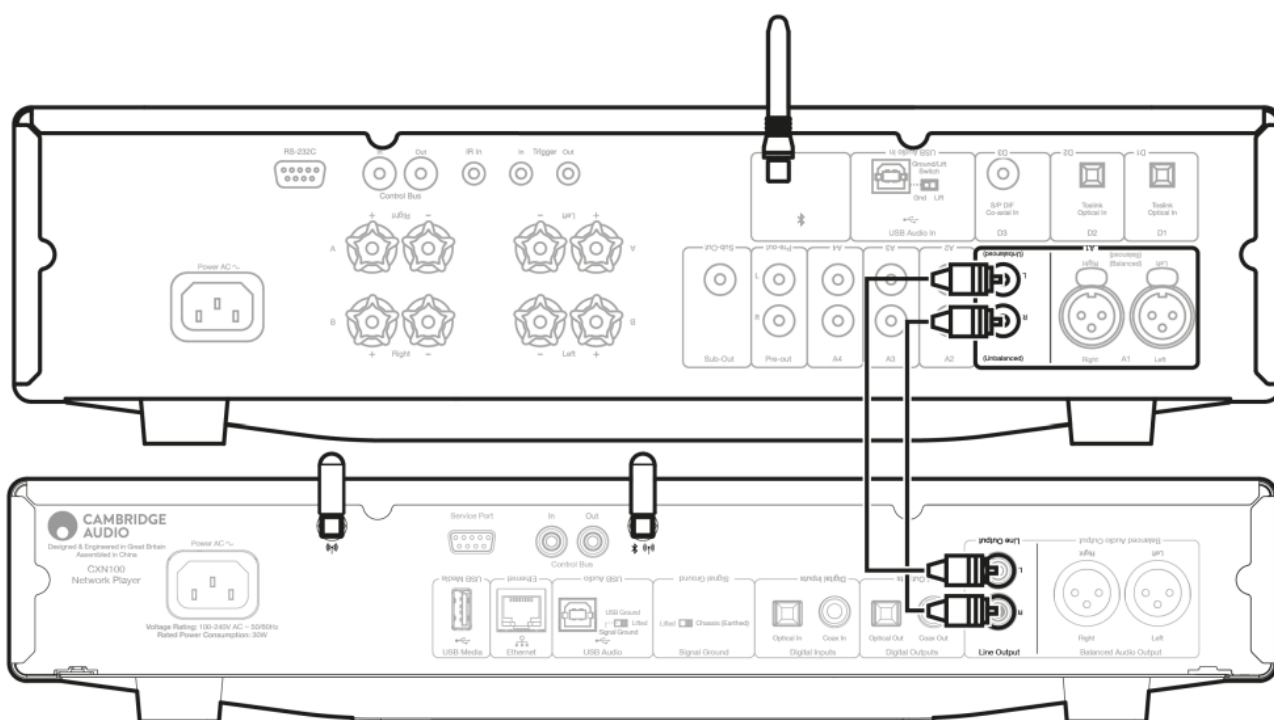

Balanced Audio Connection (XLR)

The balanced connection is the higher quality option and can reject noise and interference in the cable when used with other equipment that supports this function.

Note: XLR connectors should be wired as follows: Pin 1: Ground, Pin 2: Hot (in-phase) and Pin 3: Cold (phase-inverted).

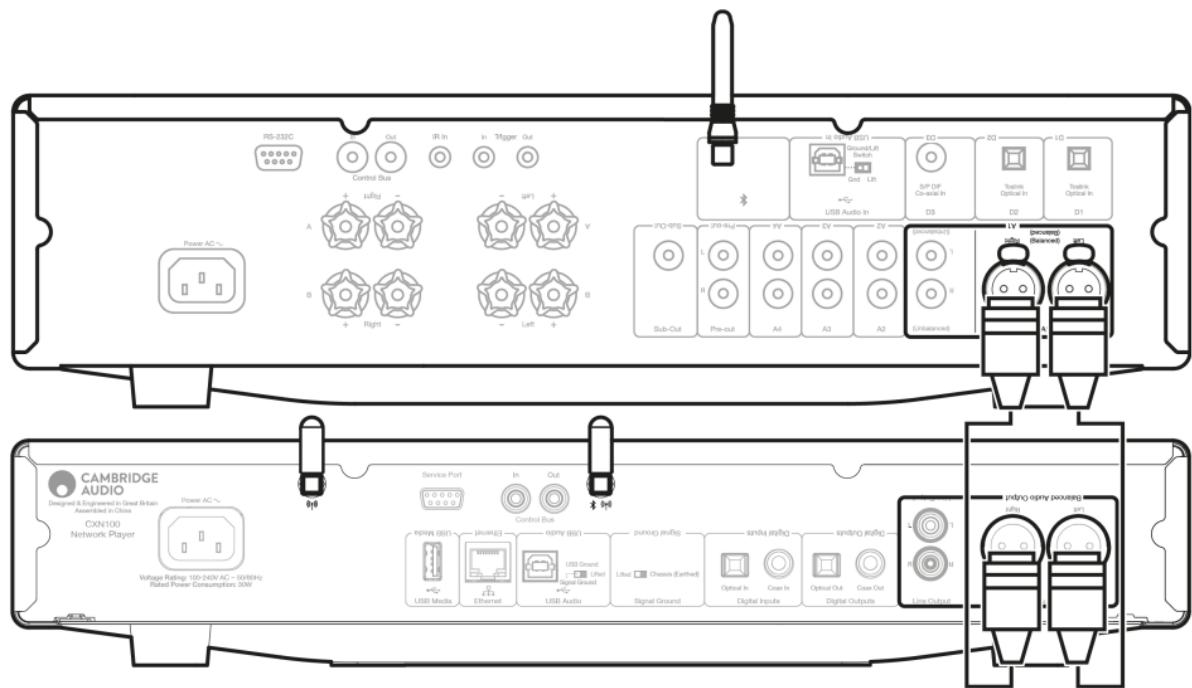


Digital Connections

There are two digital connection options for the CXN100.

Note: If using either of the digital outputs of the CXN100, the digital signal will bypass the DAC in CXN100 and will instead be processed by the unit connected to the digital output, E.g., EXA


Digital Coaxial Output

Digital Coaxial connections are commonly used with CD players and amplifiers and are recommended for use as they have a higher bandwidth.

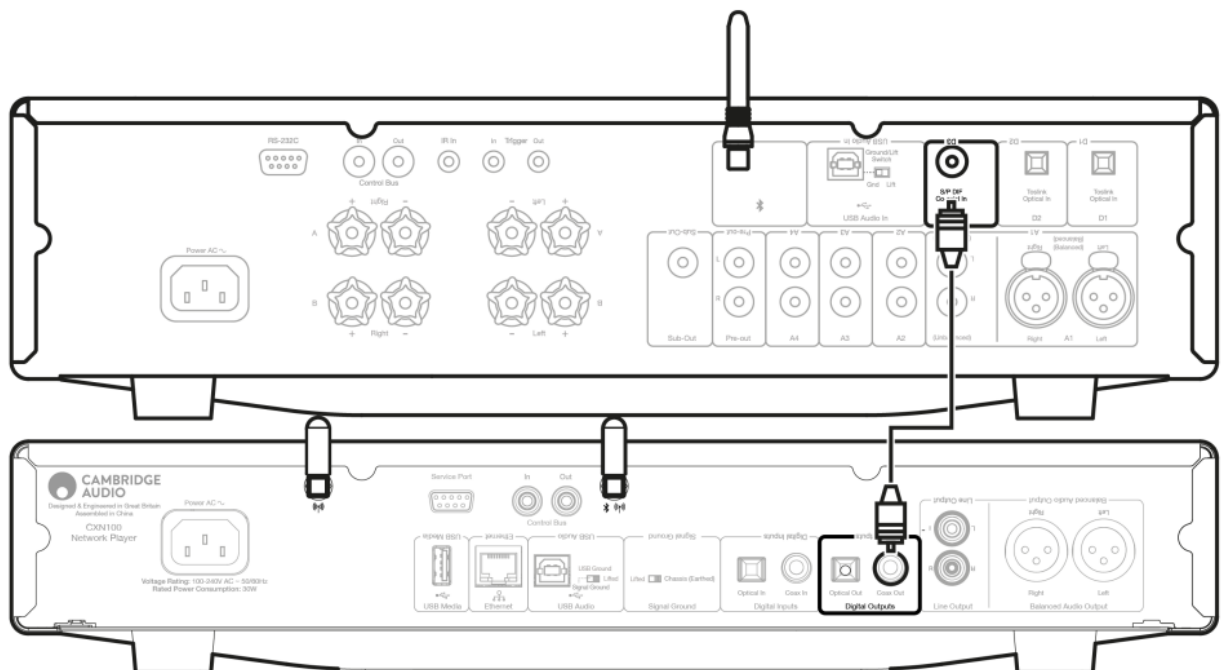

TOSLINK Optical Output

Whilst having lower bandwidth than coaxial cables, TOSLINK Optical connections are commonly found on televisions, DVD players and A/V units.

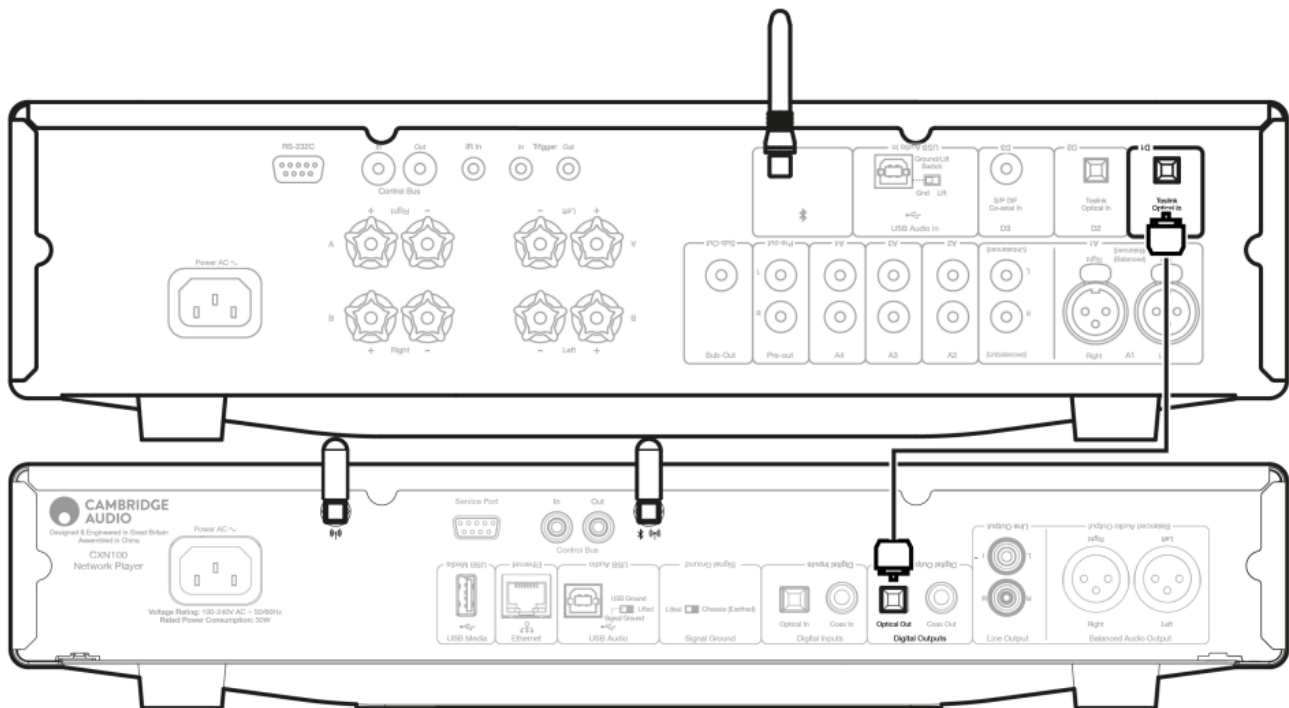

Control Bus

Last updated: October 9, 2024 09:03. Revision #14081


The Control Bus lets you control your other EX series units. See the following diagrams when connecting the CXN100 using the provided Control Bus cable.

Another added feature with Control Bus is the use of the StreamMagic app. You can use the StreamMagic app to control other EX series units via the CXN100.

CXN100 with EXA (via StreamMagic app)

When using the app to turn the CXN100 on/off, this will also turn the EXA on/off. The app can also be used to control the volume of the EXA. Connect the CXN100 Control Bus Out to EXA Control Bus In.


If you wish to control the volume of your EXA via the app, ensure that the 'Pre-amp' mode is disabled and 'Control Bus' has been set to 'Amplifier' in the app device settings.

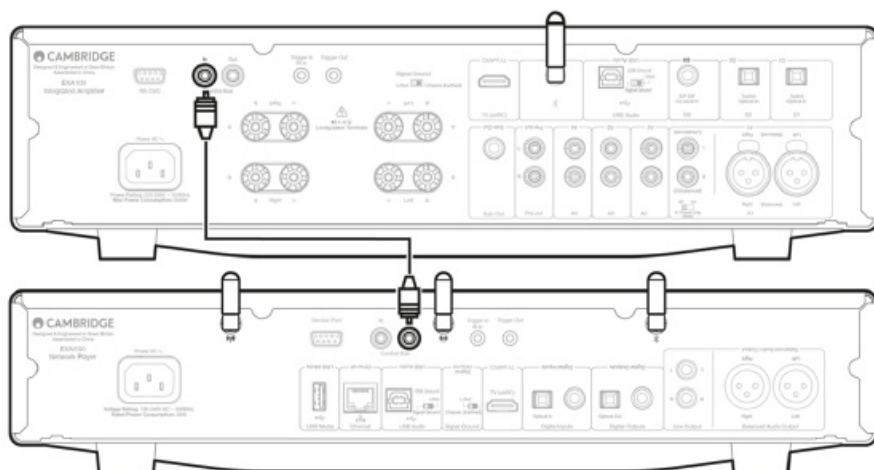

CXN with CXN100


Note: Without using the StreamMagic app to control the EXA.

When turning the EXA on/off, this will also turn the CXN on/off. Connect the EXA control bus out to CXN in.

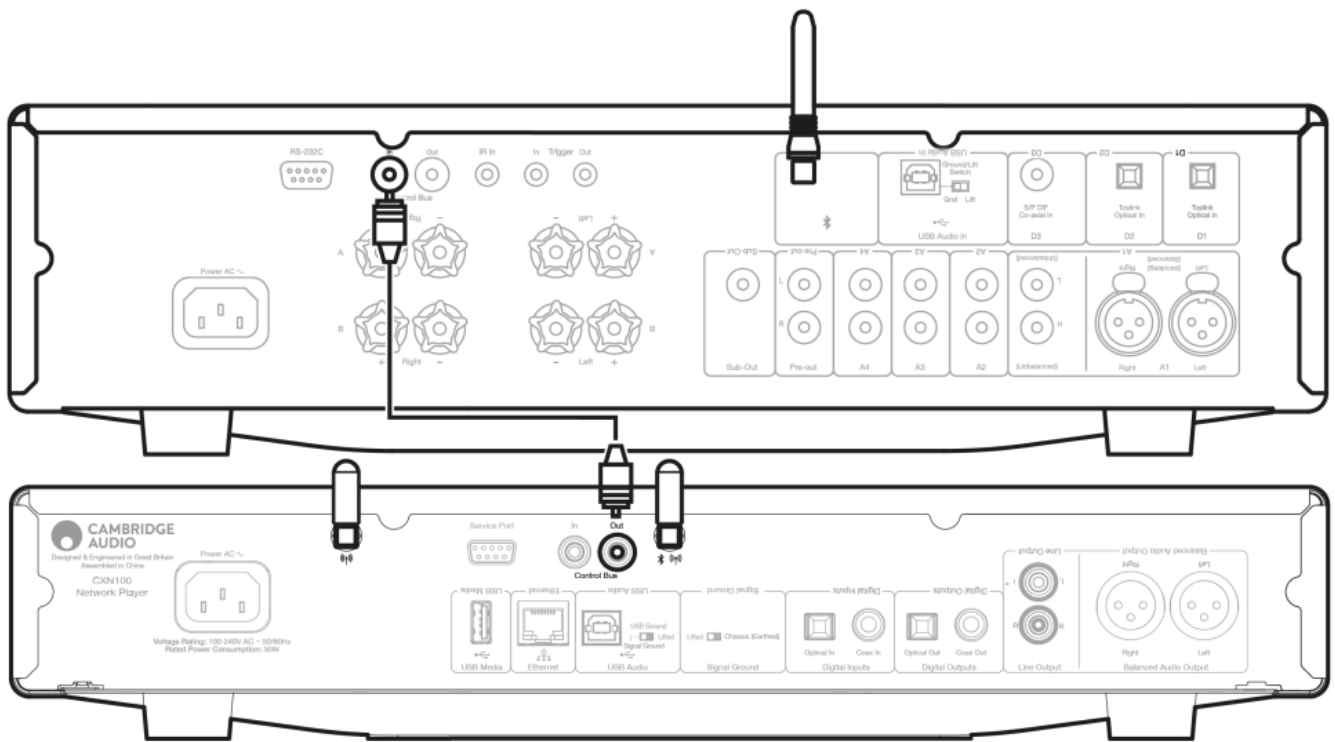

CXA with CXN100 and CXC

- When turning the CXN on/off, this will turn the EXA and CXC on/off.
- With all three EX devices, connect the CXN Control Bus out to EXA Control Bus in. Then connect the EXA Control Bus out to CXC Control Bus in.
- Note: Do not loop back from the CXC Control Bus out to the CXN Control Bus in.
- Control Bus will also need to be enabled and set to 'Amplifier' within the CXN device settings in the StreamMagic app once the app has been connected to the CXN.

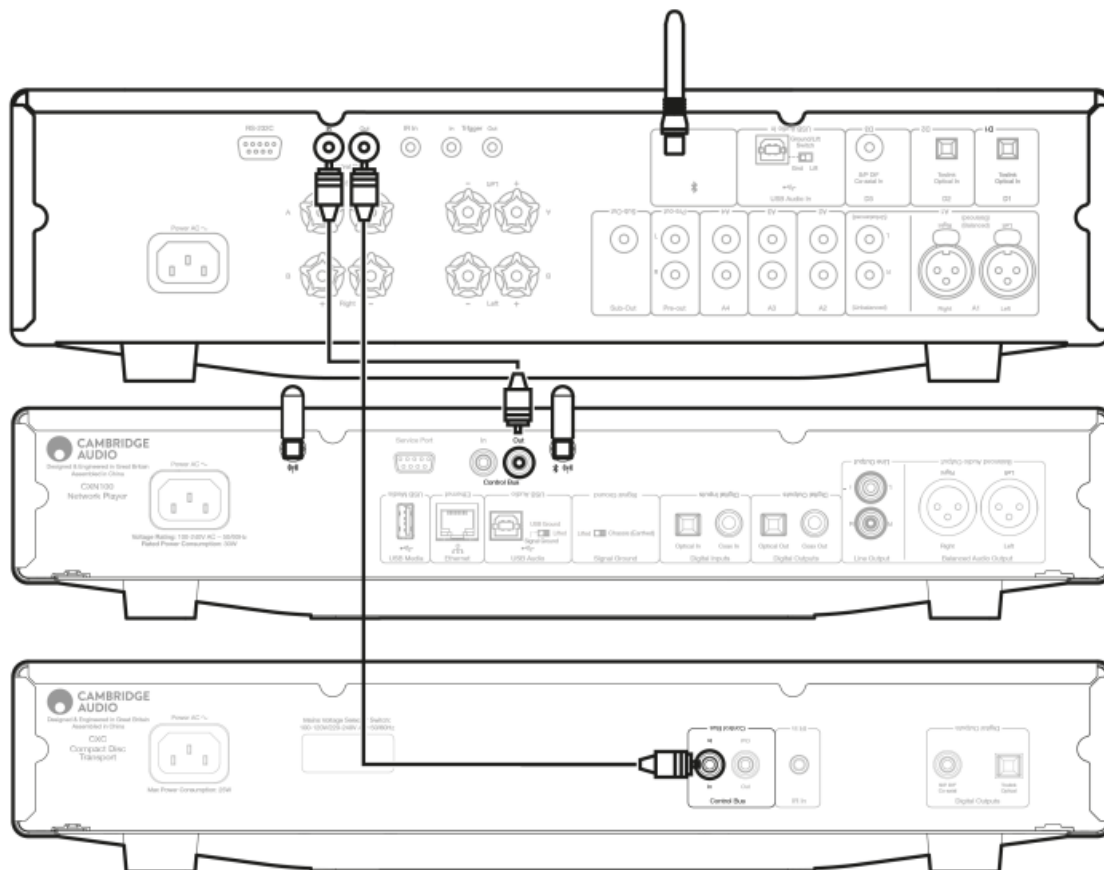


- Note: The EXA, CXN and CXC all have an Auto Power Down (APD) function. If APD is enabled and one of the devices is switched on but inactive, the device will automatically power down after the selected APD time. This will then switch off all the other connected devices, due to the Control Bus connection.
- If you don't want the devices to go into standby automatically, we would recommend disabling the APD feature on each device.

Connecting to a network

- Last updated: October 1, 2024 12:36. Revision #14073
- Important Note: It is vitally important that your Network Player remains connected to an internet network as often as possible, either via Wi-Fi or Ethernet. This will ensure that the unit is regularly updated to meet essential security protocols, third party compatibility.
- Firmware upgrading is highly recommended. It enhances stability, improves performance, and adds new features for a better user experience.
- Note: Your player is not compatible with captive portal networks. Where possible, avoid the use of powerline adapters and Wi-Fi signal boosters/extenders, as these can disrupt the reliability of the network connection.

Connecting to a Wired Network

1. Connect a network cable between your device and your router.
2. Your device will now automatically connect to the network.

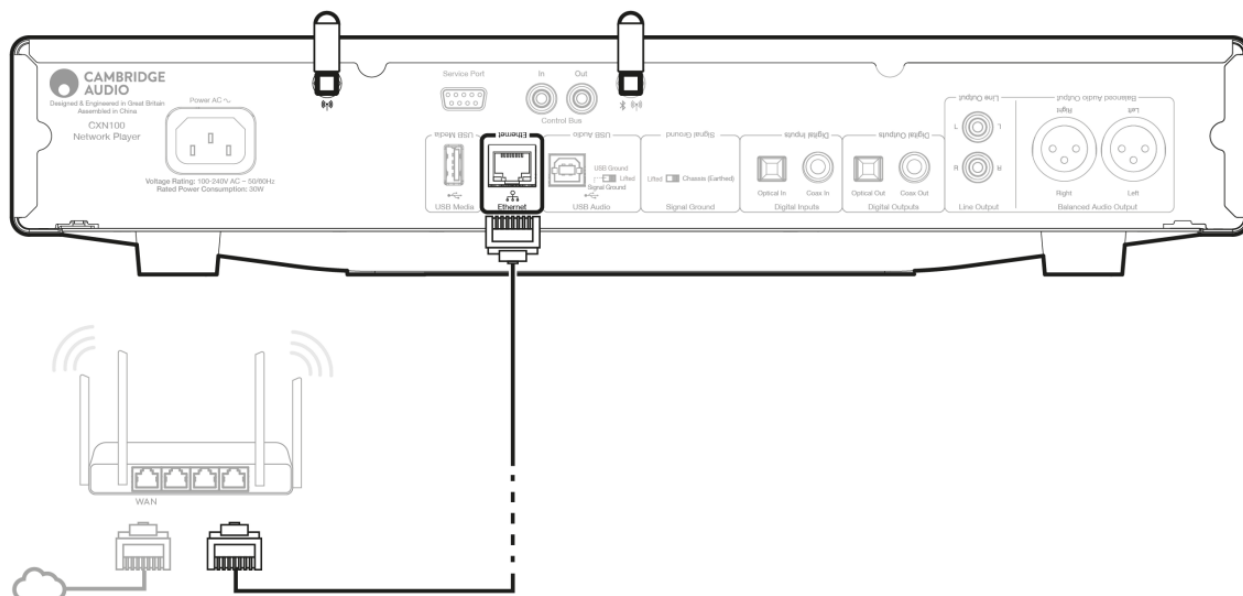

Connecting to a wireless network iOS:

1. Connect both of the supplied Wi-Fi antennas to the rear of the unit, and ensure that it's in range of your wireless router. Then power on your unit.
Note: If you are setting up your device for the first time or after a factory reset, you will first need to follow the on screen instructions to select your preferred language after powering on your unit.
2. Go to the Wi-Fi settings on your iOS device and under 'SETUP NEW AIRPLAY SPEAKER' select the name of your Network Player.
Note: Some iOS devices won't show an option for 'AirPlay Speaker'. In this instance still select the name of your Network Player.
3. Once connected, complete unit setup by downloading and installing the StreamMagic app from the Apple App store.

Android:

1. Connect both of the supplied Wi-Fi antennas to the rear of the unit, and ensure that it's in range of your wireless router. Then power on your unit.
Note: If you are setting up your device for the first time or after a factory reset, you will first need to follow the on screen instructions to select your preferred language after powering on your unit.
2. Download and install the StreamMagic app from the Google Play store.
3. Open the StreamMagic app and select 'Connect'.
4. Under Choose a device select 'Set up a new device' and then select the name of your Network Player.
5. Select 'Wireless Connection' and then 'Continue'.
6. Your Android device will now show all available Wi-Fi devices in range. Select the name of your Network Player.
7. Once connected, you will be prompted to enter your Wi-Fi network password. Enter the password and select 'Continue'.
8. Your device will now connect to your Wi-Fi network, this may take up to a minute.
9. Once connected, complete the initial setup of your unit within the StreamMagic app.

StreamMagic app – Setup

Last updated: January 24, 2024 02:15. Revision #11506

Your player is network connected, not only can you listen to devices connected to the inputs on the product but you can also stream music from many different sources both on your home network and from the internet.

To set up your player, please first download the StreamMagic app from the Apple app store or Google Play store.



Set up

1. Switch on your player and follow the on screen instructions to select your preferred language.
2. Open the StreamMagic app and follow the instructions provided to complete setting up your player on your network. This process will also apply any new updates that may be pending.

Note: During the set up process you will be asked to give your player a name, please make sure this is unique to your player. This will make it easier to find when using streaming and smart home services.

Once your player is connected to your home network you'll have full control of your sources, including internet radio, streaming services, network and USB drives and more.

For more information on our StreamMagic app, please visit:

<https://www.cambridgeaudio.com/gbr/en/products/streammagic>

Google Home / Google Cast

Last updated: June 27, 2024 11:47. Revision #14090

Your player features Google Cast and can be incorporated in to your Google Home. To set up your player, download the Google Home app on your smart phone or tablet.



With Google Cast built in to your player, your phone becomes your remote. Simply tap the Cast button from apps you already know and love to stream music, podcasts and playlists from your phone, tablet or laptop to your player.

Google Cast

Your phone is your remote

- Simply tap the Cast button from apps you already know and love. No new logins or downloads required.
- Use your phone to search, play, pause and turn up the volume from anywhere in the home.
- While you're streaming, you can keep using your phone for other things – scroll through social media, send a text, and even accept calls.

- Enjoy music throughout your house when you use multi-room casting with Google Cast-enabled speakers.
- Just say “Hey Google” to cast to your player

Unlimited entertainment, all on your schedule

- Works with hundreds of apps and new apps are being added all the time.
- Choose from millions of songs from popular music services like Pandora, Spotify, and Youtube Music.
- Note: When first setting up your Player via the StreamMagic app or after a factory reset, please ensure that you accept Google’s terms and conditions when prompted to enable Google Cast functionality.
- Android, Google Play and the Google Cast-enabled logo are trademarks of Google Inc.
- Full Google Cast-enabled features may not be available in some territories.

Internet radio

Last updated: October 3, 2024 09:36. Revision #14089

You can browse and play a wide variety of Internet Radio stations in the StreamMagic app Radio tab. You can also assign up to 99 of your favourite Internet Radio stations and other media as presets on your player, which can then be recalled using the StreamMagic app. A

limited amount of presets can be recalled via the remote control if your player includes one.

You can search and assign a preset via the StreamMagic app:

1. Within the StreamMagic app navigate to the Radio tab.
2. Use the Search for Radio search tab at the top of the page or enter a Custom URL link by selecting URL.
3. Once you have located the station you wish to store, select and you will be prompted with the option to Play now or Add to presets.
4. Add station to the desired preset for your player between 1-99.
5. You will then receive confirmation that the station is saved to the chosen preset.

Note: Please ensure that the custom URL stream is one of the following supported file types: ALAC, WAV, FLAC, AIFF, DSD (x256), WMA, MP3, AAC, HE AAC AAC+, OGG Vorbis.

To remove a preset (iOS):

1. Within the StreamMagic app navigate to the Home tab.
2. Scroll to the bottom of the page where you find your player’s Presets, and select EDIT.
3. To remove a station from preset, tap the red circle icon and then press Delete.

To remove a preset (Android):

1. Within the StreamMagic app navigate to the Home tab.
2. Scroll to the bottom of the page where you find your players Presets, and select EDIT.
3. Tap on the station you wish to remove.

Note: You may also assign a preset using a remote control if your player includes one, by pressing and holding a number on the remote whilst a station is playing.

Bluetooth

Last updated: October 3, 2024 09:37. Revision #14088

The Bluetooth source allows your player to receive wireless Bluetooth audio from most phones, tablets and laptops.

Pairing

To begin streaming high-quality music from your chosen media source it will first need to be paired with your player.

1. Within the StreamMagic App navigate to the Home tab.
2. Use the “Edit” option of the source to add the Bluetooth source.
3. Return to the Home tab and select the Bluetooth source.
4. Open your mobile device or laptop’s Bluetooth settings.
5. Select your player from the list of available devices.
6. Your device should now connect to your player.

Once paired you should be able to connect to your player at any time by selecting the Bluetooth source on your player and then choosing your player from the list of previously connected devices.

Note

Your Bluetooth device can only be connected to your player while the Bluetooth source is selected.

AirPlay

Last updated: October 3, 2024 09:38. Revision #14087

AirPlay is an Apple technology designed to control home audio systems and speakers in any room — with a tap or by just asking Siri — right from iPhone, iPad, HomePod, or Apple TV. Play a song in the living room and kitchen at the same time or adjust the volume in any room, all in sync.

After installing your player, add it to the Apple Home app with a few simple steps using your iPhone or iPad

How to use AirPlay from iPhone or iPad

1. Ensure your player is connected to your network.
2. Open the app that you want to AirPlay from.




3. Tap or .
4. Select your player as your AirPlay device.

How to use AirPlay from Control Center

To switch the audio on your device from Control Center:

Swipe down from the top right side of the screen on your device to open Control Center.

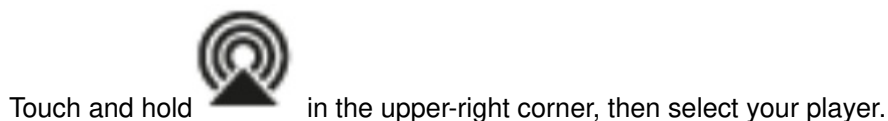

This product supports AirPlay 2 and requires iOS 11.4 or later.

Apple and AirPlay are trademarks of Apple Inc., registered in the U.S. and other countries.

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

Built-in streaming services

Last updated: October 3, 2024 09:34. Revision #14086
Your player has the following built-in streaming services:

Spotify Connect

- TIDAL
- Qobuz
- Deezer

Note: It is essential that the device you are streaming from (smartphone, tablet, computer, etc.) is on the same Wi-Fi network as your player, to ensure that the units can communicate with each other.

Spotify Connect

Use your phone, tablet or computer as a remote control for Spotify.
Go to spotify.com/connect to learn more.

TIDAL (Connect)

1. Open the TIDAL app and choose the playlist, album, song, etc. that you wish to stream to your player.
2. Select the Sound Output devices icon within TIDAL and select your player from the list.
3. TIDAL Connect should now be streaming your chosen content to your player.

Go to tidal.com/connect to learn more

TIDAL (via StreamMagic)

1. Open the StreamMagic app and navigate to the Library tab, and then select TIDAL.

Note: Please ensure that you sign into your TIDAL account when prompted to do so. This will only be required on the first instance of use to link the account to the StreamMagic app.

2. Choose the playlist, album, song, etc. that you wish to stream to your player.
3. TIDAL should now be streaming your chosen content to your player.

Qobuz (via Google Cast)

1. Open the Qobuz app and choose the playlist, album, song, etc. that you wish to stream to your player.
2. Select the Google Cast icon within Qobuz and select your player from the Qobuz Connect list.
3. Qobuz should now be casting your chosen content to your player.

Qobuz (via StreamMagic)

1. Open the StreamMagic app and navigate to the Library tab, and then select Qobuz.

Note: Please ensure that you sign into your Qobuz account when prompted to do so. This will only be required on the first instance of use to link the account to the StreamMagic app.

2. Choose the playlist, album, song, etc. that you wish to stream to your player.

3. Qobuz should now be streaming your chosen content to your player.

Deezer (via Google Cast)

1. Open the Deezer app and choose the playlist, album, song, etc. that you wish to stream to your player.
2. Select the speaker icon within Deezer, then select 'Google Cast'. Select your player from the list.
3. Deezer should now be casting your chosen content to your player.


Deezer (via StreamMagic)*

1. Open the StreamMagic app and navigate to the Library tab, and then select Deezer.
Note: Please ensure that you sign into your Deezer account when prompted to do so. This will only be required on the first instance of use to link the account to the StreamMagic app.
2. Choose the playlist, album, song, etc. that you wish to stream to your player.
3. Deezer should now be streaming your chosen content to your player.
*Deezer is only available within the StreamMagic app when running firmware version 129-b-004 or later and StreamMagic app version 2.9.0 or later.

USB Audio

Last updated: September 27, 2024 03:41. Revision #14085

Important note: Before setting up your device for the first time, please make sure that the USB Audio connection is unplugged. USB Audio can be re-connected once any firmware updates are applied.

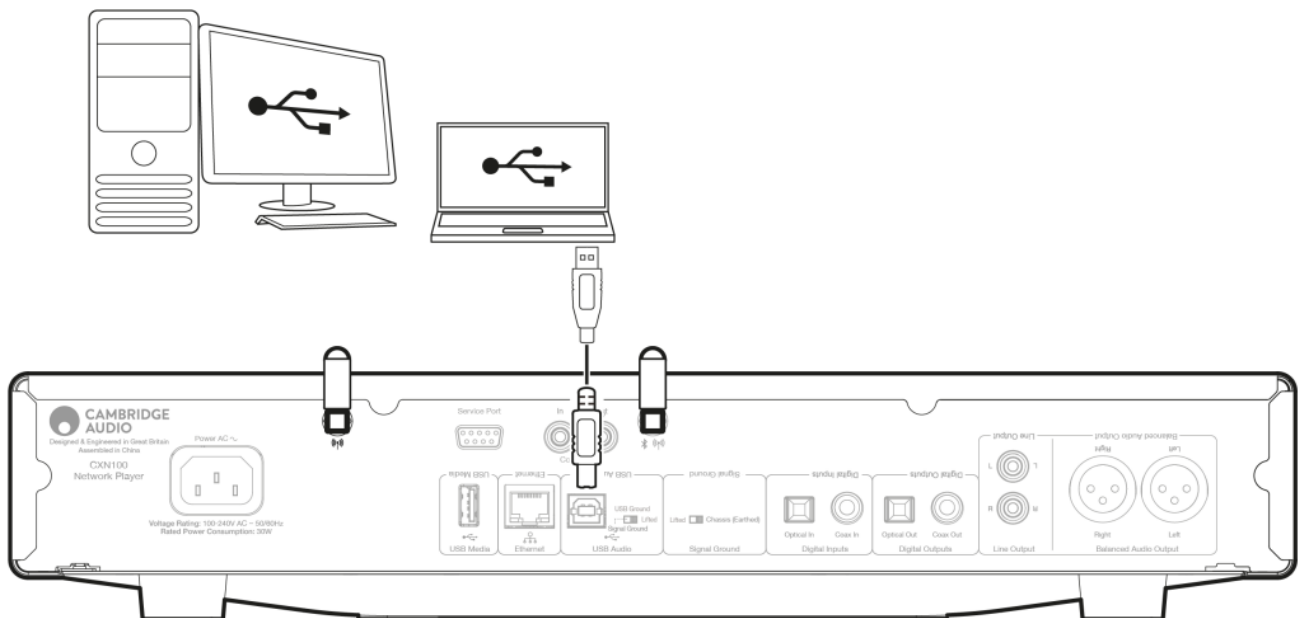

PC Setup

Note: Before connecting your PC to the Network Player, ensure you install the required Cambridge Audio Windows 2.0 USB driver on your

PC. Please find information on the most recent USB Audio driver [here](#), and a link to download the latest driver [here](#).

1. Connect your device to your PC.

After installing the correct driver, using a USB Audio cable (Type A to Type B), connect the USB Audio In on your device to a USBport on the PC.


2. Select the USB Audio source.

This can be done using the source selector on the front of the device, or by going to the Home tab and then selecting USB


Audio within the Sources section of the StreamMagic app.

3. Navigate to the CA Control Panel which should now be installed in your Windows taskbar. This will show any connected Cambridge


Audio USB Audio device and current sample rate.

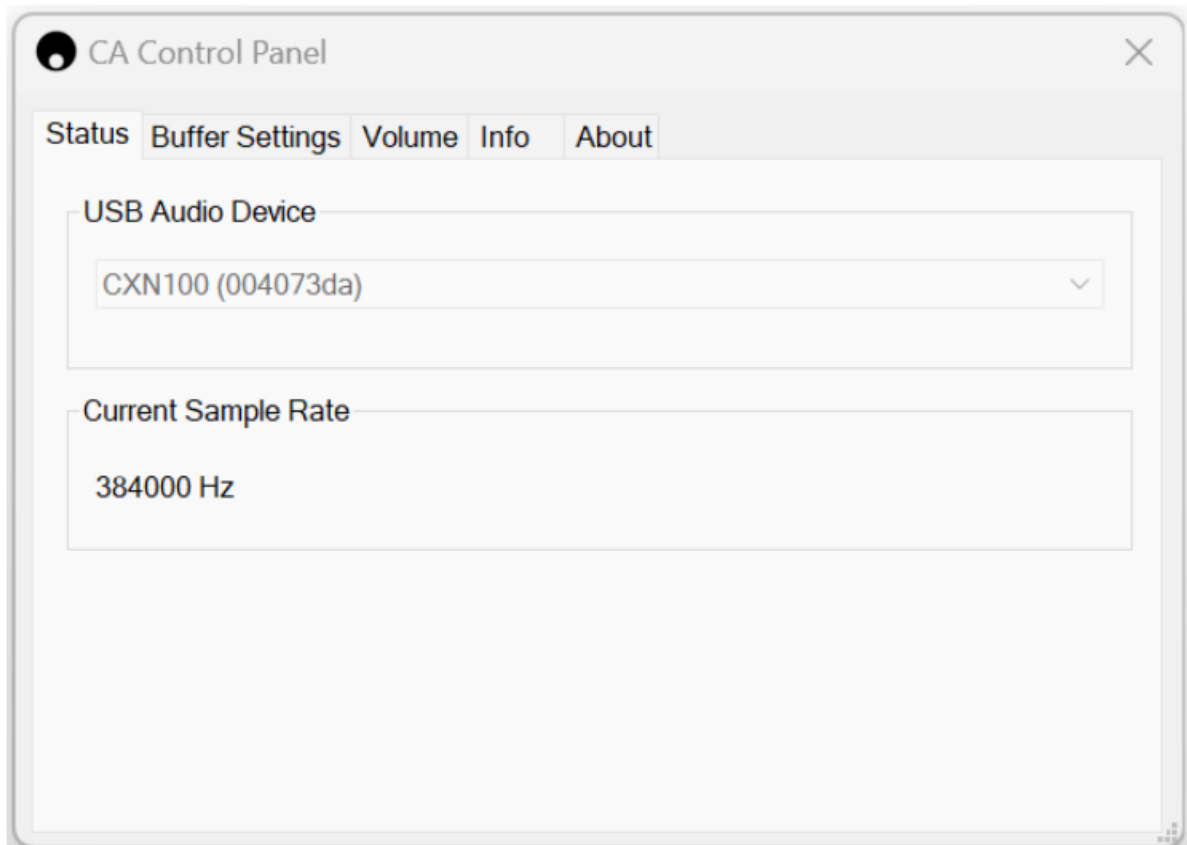


4. On your PC, navigate to Settings > System > Sound. Select your Network Player as your output device from the drop-down menu.
5. Within this same window under Related Settings on the right-hand side, select Sound Control Panel. Alternatively, scroll down and select More Sound Settings.

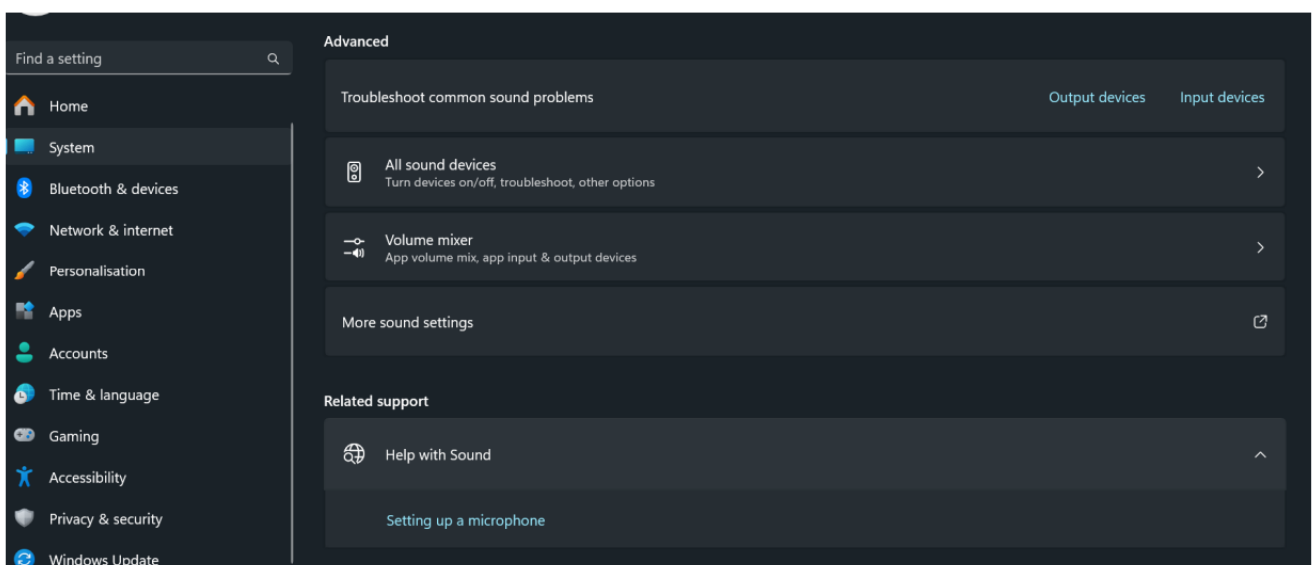

6. On the Playback tab, ensure that the device is the default output device, then select Properties.

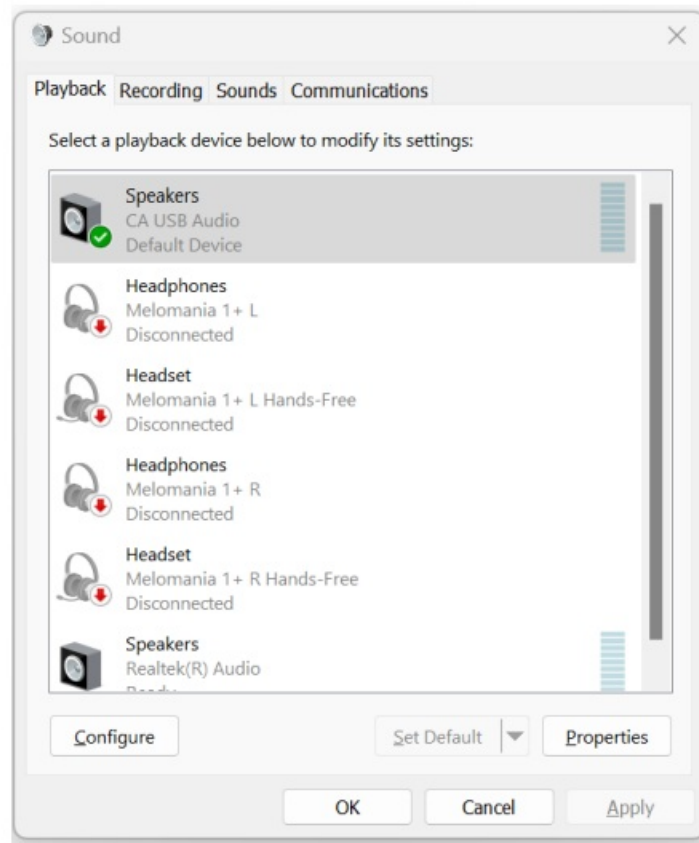

7. Within Speaker Properties, navigate to the Advanced tab. Select the desired bit depth and sample rate preference. (This step is optional.)

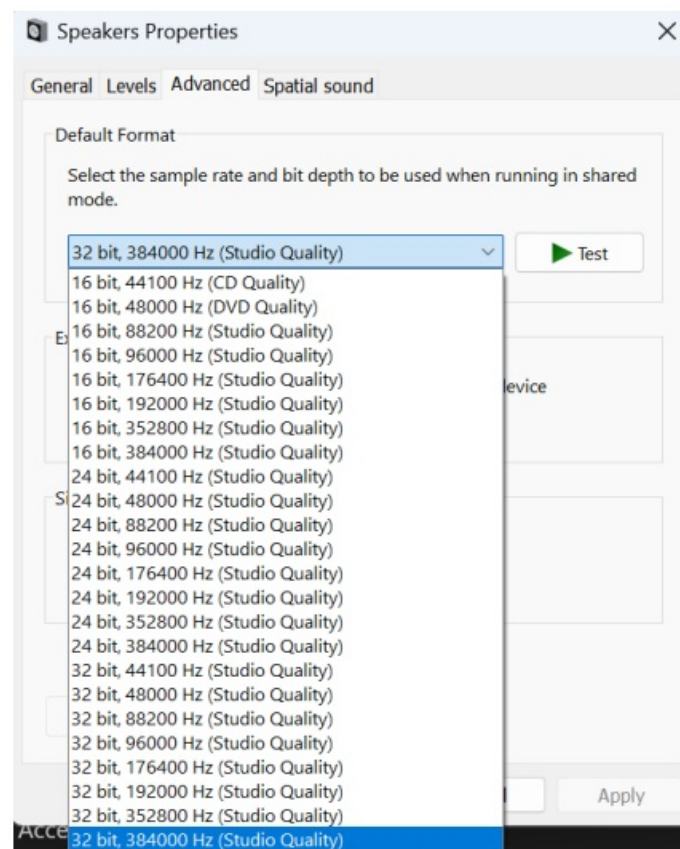

Note: Not all Windows versions support playback at sample rates greater than 384kHz. If you experience issues please set the default Windows playback format to 384kHz or lower, then restart your Network Player.

8. Your PC's output will now playback via your Network Player.

Mac Setup


Note: No extra drivers are required when using a Mac.

1. Connect your device to your Mac.


Using a USB Audio cable (Type A to Type B), connect the USB Audio In on your device to a USB port on the Mac. Note: If using a Mac without a USB Type A port, you may also use USB Type C (Thunderbolt 3) to USB Type B connection.

2. Select the USB Audio source.
This can be done using the source selector on the front of the device, or by going to the Home tab and then selecting USB Audio within the Sources section of the StreamMagic app.

2. Within the System Preferences of the Mac, locate the Sound settings. Select your Network Player as the output sound device.

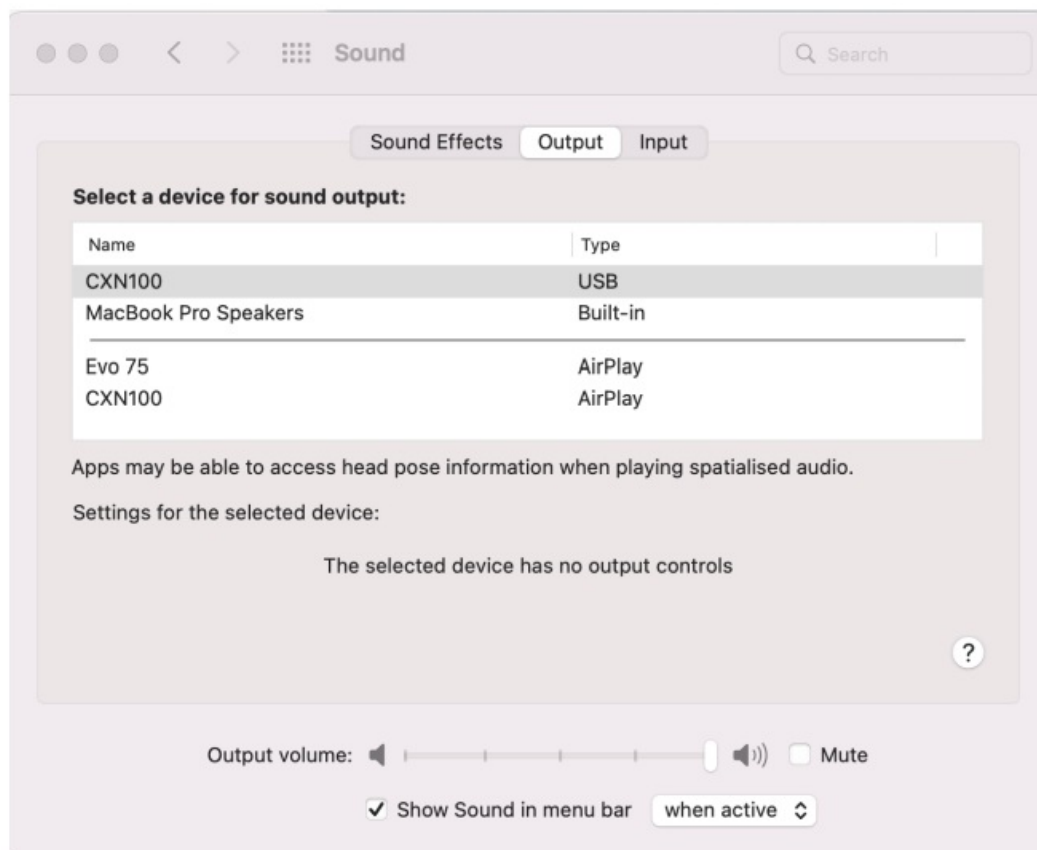

3. On the Mac navigate to Applications > Utilities > Audio MIDI Setup. Select the device as the output sound device on the left column, and then using the drop-down options select the desired bit depth and sample rate preference.

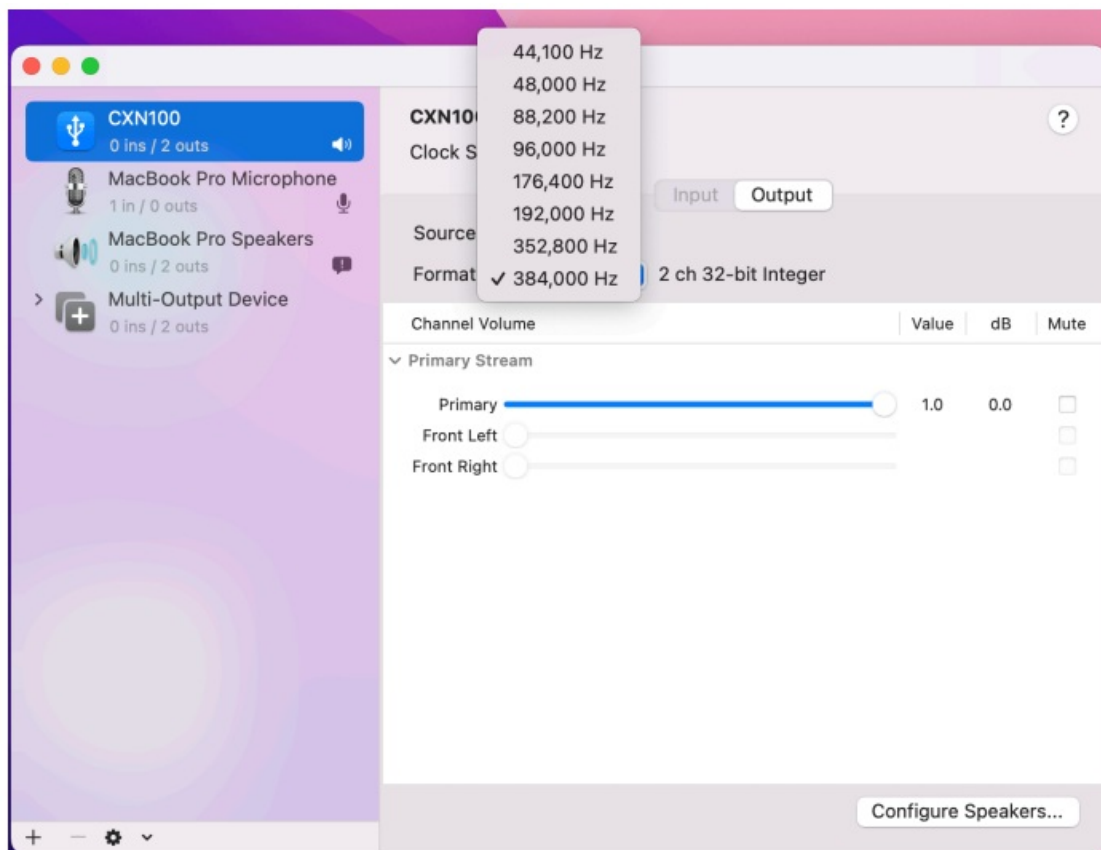

Note: This step is optional.

4. Your Mac's output will now playback via your Network Player.

USB Media

Last updated: October 3, 2024 09:39. Revision #14084

You may connect a USB SSD, USB HDD or flash drive to your player via the USB Media input located on the rear of the unit for playback. Once connected, the following formats are supported: ALAC, WAV, FLAC, AIFF, DSD, WMA, MP3, AAC, HE AAC, AAC+, OGG Vorbis

Note: your player will read large capacity hard drives connected to the USB input. However, some larger capacity drives will require you to use their own power supply.

Your player only supports USB hard drives which are formatted to FAT32, exFAT, NTFS and Ext4.

The primary function of your player is as a network music player. The USB ports are intended for convenient connection of USB thumb drives. As such, we cannot guarantee compatibility with all USB HDD's.

USB Media Playback (via StreamMagic app)

1. Connect a USB SSD, HDD or flash drive to rear panel USB Input.
2. Navigate to the Library tab of the StreamMagic app.
3. Under USB Drives, locate your USB Media device and open.
4. Upon selecting a track you will have the option to 'PLAY FROM HERE', 'PLAY TRACK NOW', 'PLAY TRACK NEXT' or 'QUEUE TRACK'.

Playback Options:

- PLAY FROM HERE – Playback of album/folder will begin from this point onwards.
- PLAY TRACK NOW – Selected track will playback immediately.
- PLAY TRACK NEXT – Selected track will be added to queue and playback next.
- QUEUE TRACK – Selected track will be added to playback queue.

Streaming your local digital music collection

Last updated: May 14, 2024 03:09. Revision #14083

Your player can play content from many different physical sources and this section will explain what you need to do to access and play your locally stored digital music collection. 'Locally Stored' means the digital music files you have on your PC, Mac or Network Attached Storage devices (NAS).

To stream local content, you will need the following hardware and software running in your network:

1. Your Cambridge Audio Network Player.
2. A mobile device such as a smartphone or tablet on which you can run the StreamMagic app, or by accessing your collection via the front panel controls.
3. A hard drive, computer or NAS containing your compatible digital music files.
4. An active UPnP music or media server.
5. A router which is configured to allow the UPnP service.

Note: The above items must be correctly connected and configured, and it is important to note that depending on the server, NAS, computer, etc. you're using, this will differ from setup to setup. To help you with this we have created best practice guide which should get you up and running with minimal fuss and effort. This can be found [here](#).

MQA (Master Quality Authenticated)

Last updated: October 3, 2024 09:40. Revision #14082

Your player includes MQA technology, which enables you to play back MQA audio files and streams, delivering the sound of the original master recording.



The front panel will display MQA green or blue to indicate that the unit is decoding and playing an MQA stream or file, and denotes provenance to ensure that the sound is identical to that of the source material. It displays MQA blue to indicate it is playing an MQA Studio file, which has either been approved in the studio by the artist/producer or has been verified by the copyright owner.

- Settings

Last updated: October 1, 2024 12:40. Revision #14092

- Device Name

This is how your player will appear in your StreamMagic app and on your home network when using services like Spotify, Chromecast built-in and TIDAL Connect.

Giving your player a unique name makes it easier to distinguish when using streaming and smart home services.

- AirPlay Name

This is how your player will appear when using AirPlay or the Apple Home app.

- Standby Mode

This selects what type of standby mode your player will use.

Network Standby means your player will still be controllable by the StreamMagic app and other network services while in standby.

If ECO mode is chosen, your player will use even less power in standby but will need to be switched on either by the front panel or the remote control. It will not be controllable via the app or other network services while in standby.

- Automatic Power Down

This sets how long your player will wait while inactive before switching to standby.

- Display Brightness

This sets the brightness of your player's display. If set to 'Off' the display will show for a few seconds after any change and then switch off.

- Ready DSD

This will allow you to choose how Roon provides DSD content.

Use DoP for digital output – If your device does support native DSD in DoP format. Use PCM for digital output – If your device doesn't support native DSD.

- Control Bus

If your device is connected to a Cambridge Audio amplifier using a control bus connector, volume commands can be sent directly to the amplifier. For more information, please refer to the Getting Connected section of this manual under 'Control Bus' here.

- Pre-Amp

With Pre-Amp mode enabled, the volume of the device's analogue outputs can be controlled using the app or rotary dial.

Note: Pre-Amp mode and volume control can only be enabled when connected via the analogue outputs.

- Volume Limit

This sets the maximum volume that other streaming services like AirPlay, Spotify, TIDAL Connect and Google Cast and set. The front panel, remote control and StreamMagic app volume controls can override this setting.

- Early Update


Setting this to 'On' will let you try out the latest firmware ahead of general release.

Firmware

This will check for and apply any new firmware available for your player.

You can also check for new updates on the info screen and manually update the unit's firmware by following the steps below:

1. Hold down the 'i' (Info) button on the front panel
2. As instructed on the display, press the 'play/pause' button to check for new firmware. The new firmware version will now update if there is one available.

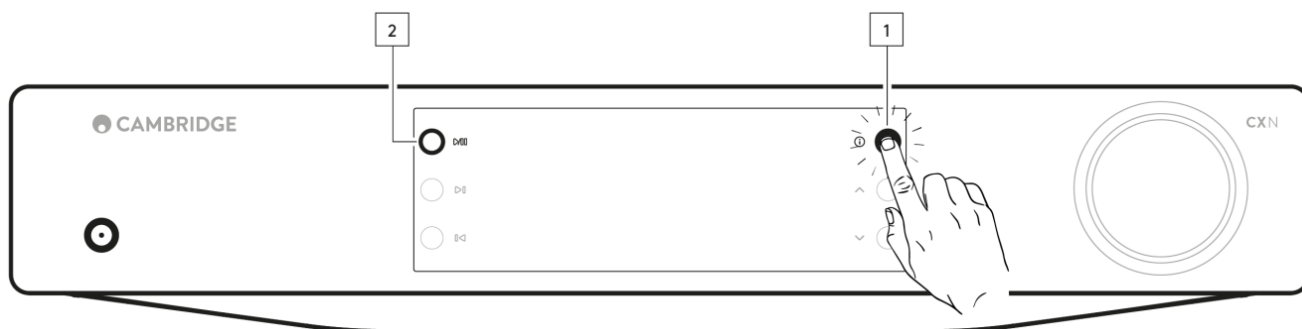

When left in network standby overnight your player will check and apply any new updates.

Note: Your network player must be connected to the internet to carry out firmware updates. You should keep your network player connected to ensure optimal performance.

Restart


This will restart your device and it will briefly lose connection with your network and the app.

Factory Reset

This will return your player to its factory settings.

You can also do this from the info screen by following the steps below:

1. Hold down the 'i' (Info) button on the front panel.
2. As instructed on the display, hold down the 'reverse skip' button to perform the factory reset.

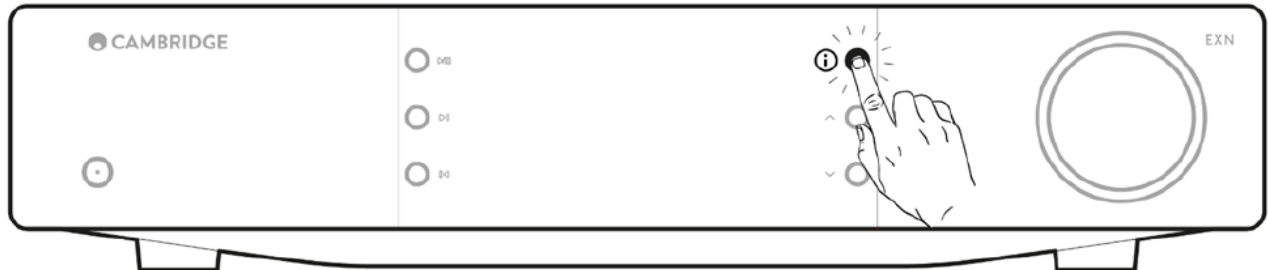

Info screen

Last updated: September 27, 2024 03:40. Revision #14093

The info screen shows useful information about your player, it also allows you to carry out some actions to help resolve problems with your player.

To access the info screen, hold the  button on the front panel for 2 seconds.

Technical specifications

Last updated: September 27, 2024 03:40. Revision #14094

D/A converters

ESS ES9028Q2M

- THD @ 1kHz 0dBFs
< 0.0005 %
- THD @ 20kHz 0dBFs
< 0.0005 %
- Frequency response
20Hz-20kHz +/- 0.1dB
Signal to noise ratio (REF 1W)
> 120dBr
- Crosstalk @ 1kHz
< -120dB
- Digital outputs
S/PDIF Coaxial
16/24-bit, 32-192kHz
- TOSLINK Optical
16/24-bit, 32-96kHz
- AUDIO FORMATS

WAV containing uncompressed, PCM 16-32 bit 32-768kHz, FLAC containing losslessly compressed, PCM 16-32 bit 32-768kHz, Apple Lossless (ALAC) containing losslessly compressed PCM 16-24 bit 32-192kHz, AIFF containing uncompressed, PCM 16-32 bit 32-768kHz, Microsoft® Windows Media TM Audio (WMA 9 Standard) 32-320kbps, MP3 (CBR or VBR) 16-320kbps, AAC, HE AAC and AAC+, (CBR or VBR) 16-320kbps, OGG Vorbis 32-320kbps. Native DSD64 to DSD512 support.

- Streaming protocols
RTSP (Real Time Streaming Protocol), MMS (Microsoft Media Server Protocol), HTTP (Hyper Text Transfer Protocol).
- Bluetooth
5.0 A2DP/AVRCP supporting SBC, aptX and aptX HD codecs
- Connectivity
UPnP, Local USB media, Airplay , Google Cast , Internet Radio, Spotify Connect, TIDAL, Qobuz, Deezer, Roon Ready.
- Playlist
ASX (Microsoft® playlist format) M3U, PLS
- Wi-Fi
IEEE 802.11 b/g/n or AC (2.4GHz and 5GHz)
Wi-Fi encryption
WEP, WPA, WPA2
- Ethernet
IEEE 802.3, 10 Base-T or 100 Base-T
- USB
1 x USB 2.0 current limited to 1A
- File systems
FAT32, NTFS, Ext4, ExFAT
- Mains inlet voltage
100-240 VAC (switch mode) standby consumption
- ECO Mode
<0.5W
- Network Standby Mode
>2W
- Max power consumption
30W
- Dimensions 89 x 430 x 325mm (3.5 x 16.9 x 12.8")
- Weight 4.15kg (9.1lbs)

Source quality matrix

Last updated: February 20, 2024 04:30. Revision #14097

| SOURCE | DELIVERY METHOD | MAXIMUM RESOLUTION |
|----------------------------------|--------------------|--------------------|
| Spotify Connect | Mobile/Desktop App | 320kbps |
| Spotify AirPlay | Mobile/Desktop App | 320kbps |
| Spotify Chromecast | Mobile/Desktop App | 320kbps |
| Spotify Bluetooth | Mobile/Desktop App | aptX HD |
| | | |
| TIDAL Connect | Mobile/Desktop App | 24bit / 192 kHz |
| TIDAL (via StreamMagic app) | StreamMagic App | 24bit / 192 kHz |
| TIDAL AirPlay | AirPlay 2 | 16bit / 44kHz |
| TIDAL Chromecast | Chromecast | 24bit / 48 kHz |
| TIDAL Bluetooth | Bluetooth | aptX HD |
| TIDAL Roon | Roon Endpoint | 24bit / 192 kHz |
| TIDAL Roon | USB Class 2 | 24bit / 192 kHz |
| TIDAL Desktop App | USB Class 2 | 24bit / 192 kHz |
| | | |
| Qobuz (via StreamMagic app) | StreamMagic App | 24bit / 192 kHz |
| Qobuz AirPlay | AirPlay 2 | 16bit / 44kHz |
| Qobuz Chromecast | Chromecast | 24bit / 48 kHz |
| Qobuz Bluetooth | Bluetooth | aptX HD |
| Qobuz Roon | Roon Endpoint | 24bit / 192 kHz |
| Qobuz Roon | USB Class 2 | 24bit / 192 kHz |
| Qobuz Desktop App | USB Class 2 | 24bit / 192 kHz |
| | | |
| Third Party App (via AirPlay) | AirPlay 2 | 16bit / 44kHz |
| Third Party App (via Chromecast) | Chromecast | 24bit / 48 kHz |
| Third Party App (via Bluetooth) | Bluetooth | aptX HD |

Troubleshooting

- Last updated: October 1, 2024 12:49. Revision #14095
- If you have trouble connecting the Network Player to your network, these steps may help to resolve the problem:
 - Ensure that you have followed the 'Connecting to a network ' steps in the manual [here](#).
 - Ensure both Wi-Fi antennas are securely connected to the rear of the unit.
 - Ensure your mobile device is connected to the same network you wish to connect your Network Player to.

- Remove any VPN or Anti-Virus app you may have downloaded on your mobile device, as they can sometimes prevent the app from 'seeing' other devices on the network.
- Remove any network switches/extenders etc. that are part of your network set up.
- Connect the unit directly to your router via an Ethernet cable.
- Perform a factory reset on your unit, and then attempt the network set up steps again.
- Check that a DHCP server is available, or that you have configured a static IP address on your Player. You can configure a static IP address on the unit via the 'Network' settings in the StreamMagic app Reboot and/or factory reset your router.
- If you have trouble connecting the StreamMagic app to your Network Player, these steps may help to resolve the problem:
 - Ensure your mobile device is connected to the same network you wish to connect your Network Player to.
 - Remove any VPN or Anti-Virus app you may have downloaded on your mobile device, as they can sometimes prevent the app from 'seeing' other devices on the network.
 - Ensure that you have allowed the StreamMagic app to have access to devices on your network. You can check this via your mobile devices' app settings.
 - Ensure both Wi-Fi antennas are securely connected to the rear of the unit.
 - Check whether other apps and sources on your device are able to 'see' the unit. If they are, this would suggest that something on your device is preventing the StreamMagic app from 'seeing' the Network Player.
 - Download the StreamMagic app on to another mobile device.
 - Remove any network switches, extenders, boosters etc. that may be part of your network set up

If your Network Player is experiencing audio dropouts during playback from a network source, these steps may help to resolve the problem:

- Ensure both Wi-Fi antennas are securely connected to the rear of the unit.
- Remove any network switches, extenders, boosters etc. that may be part of your network set up.
- Connect the unit directly to your router via an Ethernet cable.

Reset your network router.

- Perform a factory reset on your Network Player by following the steps in the manual [here](#).

If your Network Player can connect to the network successfully but is unable to play particular Internet Radio stations, it may be due to one of the following causes:

- The station is not broadcasting at this time of the day (remember it may be in a different time zone).
- The station is not broadcasting anymore.
- The link in our database is simply out of date. (You can request that a radio station is added or updated by following the steps in the following [FAQ](#).)
- The Internet connection between the server (often located in a different country) and you is slow.
- Try deleting and then re-installing the StreamMagic app on your device.
- If you are playing a radio preset, try deleting and then re-installing the preset in the StreamMagic app.

If you have problems with UPnP playback check the following:

- Ensure your chosen UPnP server software can serve the file type you are trying to access. Some servers do not serve FLAC for instance.
- This Network Player can only play non-DRM files. Files that have DRM controls cannot be played by the CXN100.
- If attempting to play 24-bit WAV or FLAC content, note a wired Ethernet connection is normally preferred for reliable operation due to bandwidth considerations
- Check the Network Player can play back the file type you are trying to access. WMA, AAC, HE AAC, AAC+, MP3, OGG Vorbis, FLAC, WAV, ALAC, AIFF can currently be played.
- Ensure your PC/NAS drive are connected to the same network as your Network Player.
- Ensure you have followed the required steps for PC/NAS drive configuration with a Network Player. You can find out more about this in the following FAQ.

If you have problems with USB Media playback check the following:

- Check the Network Player can play back the file type you are trying to access. WMA, AAC, HE AAC, AAC+, MP3, OGG Vorbis, FLAC, WAV, ALAC, AIFF can currently be played.
- This Network Player can only play non-DRM files. Files that have DRM controls cannot be played by the CXN100. Check that your device does not require more than 1A if it is powered from the USB socket itself.
- Check your device is formatted in FAT32/NTFS/exFAT/Ext4 format.
- The way you organise your USB media can affect the size of the internal database the Network Player needs to scan dynamically as you browse content. It is good practice to create folders for Artists, within which should be a sub folder for each album containing
- the tracks for that album. Libraries with thousands of tracks in one folder will progressively slow down the Player's media browsing.

If you have problems connecting a Bluetooth device to the Network Player, check the following:

- Ensure the Bluetooth source has been selected via the app or the front panel source selector. You will be unable to pair a Bluetooth device to the Player unless the Bluetooth source has been selected.
- Ensure the supplied Bluetooth antenna has been connected to the rear of the Player.
- Ensure your device is not already connected to another Bluetooth speaker/headphones.
- Ensure the Player is not already connected to another Bluetooth device.

There is no sound:

- Ensure the unit is not in Standby mode.
- Check that your amplifier/DAC is properly connected.
- Check that your speakers are properly connected to the amplifier.
- Check that your connected amplifier/DAC is not in mute mode.
- If Pre-Amp mode has been enabled, ensure the Player is not in mute mode.
- Ensure the correct source has been selected via the app or the front panel source selector.

There is no audio when connecting a Mac/PC to the USB Audio input:

- Ensure that all the steps within the USB Audio section of the manual have been followed.
- Ensure that the USB Audio source has been selected via the app or the front panel source selector. Ensure that your PC/Mac is connected to the USB Audio input with a USB A to B cable.
- If you are connecting a PC, make sure that the correct USB driver is downloaded. The driver is available from <https://www.cambridgeaudio.com/gbr/en/driver-updates>.

There is no sound from a TV connected to the eARC input:

- Follow the steps in the troubleshooting guide on our support site here.

Frequently asked questions

- Last updated: October 1, 2024 12:52. Revision #14072

Can I play files from a connected USB HD when the CXN100 is not connected to a network?

This is not possible as the use of the StreamMagic app is required to be able to play local files from a connected USB HD. Please note that it is strongly recommended that the CXN100 is connected to a network at all times.

Does the CXN100 come with a remote control?

- No, the CXN100 does not have its own remote control and does not come with one included. The unit can be fully controlled, and the settings can be adjusted via the StreamMagic app.

If you wish to use a remote control with your device, the EX series remote control is compatible with the CXN100 and can be purchased from our website.

Can I access features such as Internet Radio and streaming services via the front panel?

It is not possible to access services and features via the front panel of the CXN100. You will be able to access many features via the StreamMagic app, as well as integrated services such as TIDAL, Spotify etc. via their respective apps.

- How do I change the volume of the CXN100?

With Pre-Amp mode enabled within the StreamMagic app device settings, the volume of the device's analogue outputs can be controlled using the app or rotary dial.

Note: Pre-Amp mode and volume control can only be enabled when connected via the analogue outputs.

- Do I need to connect both of the supplied Wi-Fi antennas for the CXN100 to work?

Yes, if you are connecting your CXN100 to your network wirelessly, you will need to connect both of the supplied antennas to enable full Wi-Fi functionality and the strongest possible wireless network connection. Bluetooth functionality will also only be possible when one of the antennas is connected to the port with the Bluetooth symbol.

- Can I use more than one of the CXN100's outputs at once?


Yes, If you wish to connect the CXN100 to one single device, you can use any output, digital or analogue, that you wish. If, however, you would like to connect the CXN100 to more than one device at a time, you can connect up to four devices and play simultaneously, as all outputs remain active at all times.

Please note that if you wish to control the volume via the CXN100, you will need to enable Pre-Amp mode in the StreamMagic app. Volume control does not apply to the digital outputs,

- How do I stop the CXN100 from powering down when not in use?

The CXN100 will automatically switch to standby mode after 20 minutes of inactivity. This Automatic Power-Down (APD) feature can be disabled, by navigating to the device settings within the StreamMagic app.

You can either disable this feature or edit the length of time it takes for APD to be triggered, by selecting ‘Automatic Power-Down’.

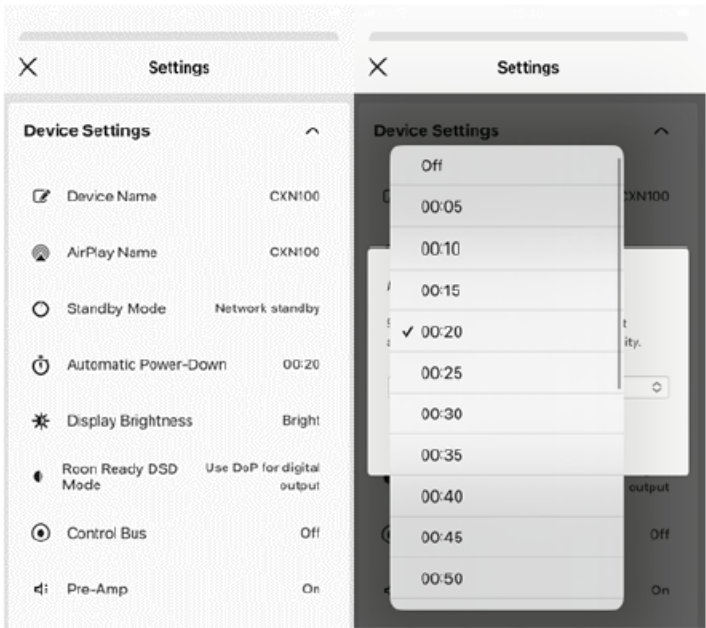

What USB HDs will the CXN100 support?

- The primary function of the CXN100 is as a network music player and the USB port is intended for convenient connection of USB HDDs and SSDs. As such, we cannot guarantee compatibility with all USB HDDs and SSDs.
- The CXN100 will read large capacity hard drives connected to the USB Media input. Some larger capacity drives, however, may require their own power supply, as the player’s USB port may not provide enough power for the drive to function.
- The CXN100 will support USB hard drives which are formatted to FAT32, exFAT, NTFS and Ext4.

Documents / Resources

| | |
|---|---|
|  | <p>CAMBRIDGE CXN100 Network Player [pdf] CXN100 Network Player, CXN100, Network Player, CXN100 Player</p> |
|---|---|

References

- gpl.stream-magic.com/
- [Spotify - Connect](#)
- [Third Party Licenses | Spotify for Developers](#)
- [+ Cambridge Audio Support](#)
- [+ Cambridge Audio Support](#)
- [+ What is Digital Pre-Amp Mode and how does it work? – Cambridge Audio Support](#)

- [✚ What is in Early Updates for the CXN100? – Cambridge Audio Support](#)
- [✚ Windows Audio USB Class 2 Driver – Cambridge Audio Support](#)
- [✚ How do I configure my Network Player for use with locally stored music? \(NAS, computer, etc.\) – Cambridge Audio Support](#)
- [📶 TIDAL Connect | TIDAL](#)
- [🔗 Log in | Cambridge Audio UK](#)
- [🔗 StreamMagic - | Cambridge Audio UK](#)
- [🔗 Register your product | Cambridge Audio US](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.