



Home » CAME » CAME FA01789M4A Four Button Fixed Code Instruction Manual ™




CAME FA01789M4A Four Button Fixed Code Instruction Manual




Change frequency procedure

Each button can be assigned a different frequency

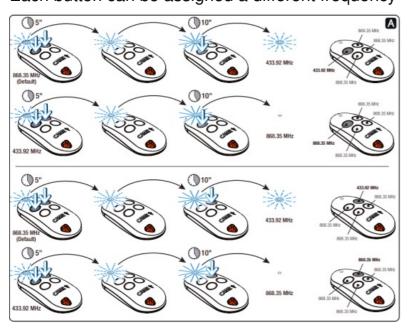


LED key

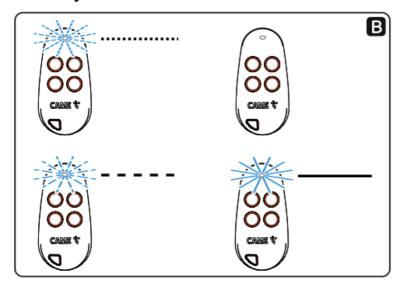

LED signalling during transmission at a different frequency

If the button transmits at a frequency of **868.35 MHz**, when released, the LED remains on for one second.

If the button transmits at a frequency of **433.92 MHz**, when released, the LED switches off immediately.

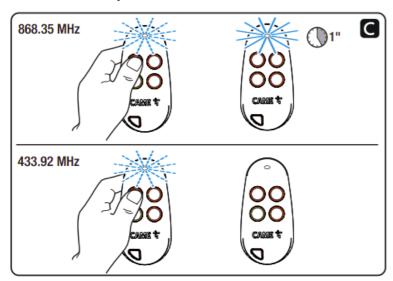

CAME.COM

FA01789M4A-02/2022

CAME S.p.A.

Via Martiri Della Libertà, 15 31030 – Dosson of Cashier Treviso – Italy



Contents [hide]

- 1 Documents / Resources
 - 1.1 References

Documents / Resources



CAME FA01789M4A Four Button Fixed Code [pdf] Instruction Manual FA01789M4A Four Button Fixed Code, FA01789M4A, Four Button Fixed Code, Button Fixed Code, Fixed Code

References

- User Manual
- CAME
- ▶ Button Fixed Code, CAME, FA01789M4A, FA01789M4A Four Button Fixed Code, Fixed Code, Four Button Fixed Code

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name		

Email				
Website				
☐ Save my name	email, and website in the	nis browser for the ne	ext time I comment.	

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.