

Camper Select C Line Wireless Speaker User Manual

Home » Camper Select C Line Wireless Speaker User Manual




Contents

- 1 C-line Wireless Speaker User **Manual**
- 2 C Line Wireless Speaker
- 3 Bluetooth pairing for music
- 4 Specifications
- 5 Documents / Resources
 - **5.1 References**

Camper C-line Wireless Speaker **User Manual**

C Line Wireless Speaker

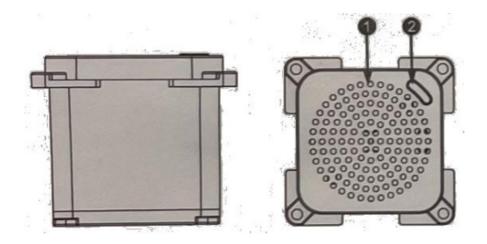

- 1. Speaker
- 2. ON/OFF button

Bluetooth pairing for music

1. a. Tum on the speaker by pressing "\overline{O}" button for 3 seconds.

The speaker will have a voice prompt.

b. Stereo mode (only for two speakers):

Power on two C-line Speaker. Double press "\overline" on one

C-line Speaker. Connected prompts are heard once the speakers are paired successfully. After the first pairing, the C-line Speaker will connect automatically when you turn them both on.

- 2. Tum on your device and activate the Bluetooth function.
- 3. Search for Bluetooth pairing name" C-line Speaker "and click to pair, the speaker will pair automatically and the speaker will have a voice prompt.

Then, you can play music or just need to press "\overline{\dagger}" button to pause the music.

4. Long press "\overline{o}" button to turn off the speaker.

Specifications

Power Rating	5W
Frequency Response	20HZ-20KHZ
THD	<1%
S/N	≥ 80DB
Speaker Parameter	4Ω 5W diameter 40mm
Input	12V DC
Bluetooth Version	Bluetooth V5.0
Product Size	Ø55 x 47mm
Product Weight	62g

Documents / Resources



<u>Camper Select C Line Wireless Speaker</u> [pdf] User Manual C Line Wireless Speaker, C Line, Wireless Speaker, Speaker

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.