



camry CR 1150 Clock Radio with CD Player User Manual

[Home](#) » [camry](#) » camry CR 1150 Clock Radio with CD Player User Manual 

Contents

- [1 camry CR 1150 Clock Radio with CD Player](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Device description](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

camry
— Premium —

camry CR 1150 Clock Radio with CD Player



Product Information

The CR 1150 is a multi-functional device that functions as an alarm clock and displays time, date, and temperature. It features a display, mode button, alarm button, snooze/light button, up button, down button, power input, battery compartment (3x AAA), and a power cord.

Product Usage Instructions

Preparing the device for work:

1. Remove all packaging materials and cartons.
2. Insert the batteries into the battery compartment on the back of the device, ensuring the correct polarity (+ to + and – to -) as shown in the picture in the battery compartment.

Setting the Time:

1. Press and hold the Mode button (2).
2. Use the Up and Down buttons (5,6) to choose between 24 or 12 hours to be displayed. Confirm by pressing the Mode button once.
3. Set the hour by using the Up and Down buttons (5,6) to select the hour. Confirm by pressing the Mode button once.

Date setting:

1. Press the Mode button (2) repeatedly until you reach the date setting.
2. Press and hold the Mode button (2) when you reach the date setting.
3. Select the Year with the Up and Down buttons (5,6). Confirm by pressing the Mode button once.

4. Select the Day with the Up and Down buttons (5,6). Confirm by pressing the Mode button once.
5. Select the Month with the Up and Down buttons (5,6). Confirm by pressing the Mode button once.

Setting an Alarm:

1. Press and hold the Alarm button (3).
2. Select the Hour with the Up and Down buttons (5,6). Confirm by pressing the Alarm button once.
3. Select the Minutes with the Up and Down buttons (5,6). Confirm by pressing the Alarm button once.
4. Select the Snooze Length (1-60 minutes) using the Up and Down buttons (5,6). Confirm by pressing the Alarm button once.
5. Select Alarm activation days with the Up and Down buttons (5,6). Confirm by pressing the Alarm button once.
6. To snooze the alarm, press the SNZ-Light button. The alarm will snooze for the length of time set in point 4.
7. To turn off the alarm for the day, press the Alarm button when the alarm is activated.

Enabling the alarm function:

1. To turn on the alarm function, press the Alarm button once. The letters AL will appear on the display.
2. To deactivate the alarm function, press the Alarm button once. The letters AL will disappear from the display.

Automatic switching between information on the display:

1. Use the Mode button (2) to switch the display to show temperature.
2. Press and hold the Mode button (2) until the device beeps.
3. The device will enter automatic transition mode between Time, Date, and Temperature.
4. To disable this function, repeat steps 1-3.

SAFETY CONDITIONS IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Warranty conditions differ if the device is used for commercial purposes.

1. Before using the product, please read carefully and always follow the instructions below. The manufacturer is not responsible for any damage caused by improper use.
2. The product may only be used indoors. Do not use the product for purposes inconsistent with its intended use.
3. Supply voltage: 3 AAA 1.5V batteries or 5V / 1A USB adapter
4. Be careful when using it by children. Do not let children play with the product. Do not let children or people unfamiliar with the device use it unsupervised.
5. **WARNING:** This device may be used by children over 8 years of age and people with reduced physical, sensory or mental abilities or persons with no experience or knowledge of the device, only under the supervision of a person responsible for their safety, or if they have been instructed on safe use device and are aware of the risks associated with its operation. Children should not play with the device. Cleaning and maintenance of the device should not be performed by children, unless they are 8 years of age or older and these activities are performed under supervision.
6. Never put the power cord, plug or the entire device into water. Never expose the product to weather conditions such as direct sunlight or rain, etc. Never use the product in wet conditions.
7. Never place the product on or near hot or warm surfaces or kitchen appliances such as an electric oven or gas burner.
8. Never use the product near flammable materials.

9. The device may only be cleaned with a dry cloth. Do not use water or cleaning fluids.
10. Store the device in a dry room.

Device description

1. Display
2. Mode button
3. Alarm button
4. Snooze / Light button
5. Up button
6. Down button
7. Power input
8. Battery compartment (3x AAA)
9. Power cord



Preparing the device for work:

1. Remove all packaging materials and cartons.
2. Insert the batteries into the battery compartment on the back of the device, taking care to observe the polarity of the batteries. + to + and – to -. As shown in the picture in the battery compartment.

Display (1):

The display shows Time, Date, Temperature, changes in settings.

Setting the Time:

1. Press and hold the Mode button (2).
2. Use the " Up , Down" buttons (5,6) to choose between 24 or 12 hours to be displayed. Confirm by pressing the " Mode " button once
3. Then set the hour. Use the " Up , Down" buttons (5,6) to select the hour. Confirm by pressing the " Mode " button once.

Date setting:

1. Press the Mode button (2) one at a time.
2. When you go to the date (Factory date is 101st day of January.) Press and hold the " Mode " button (2).
3. Select the Year with the " Up , Down" buttons (5,6). Confirm by pressing the " Mode " button once.
4. Select the Day with the " Up , Down" buttons (5,6). Confirm by pressing the " Mode " button once.
5. Select the Month with the " Up , Down" buttons (5,6). Confirm by pressing the " Mode " button once.

Setting an Alarm:

1. Press and hold the Alarm button (3).
 2. Select the Hour with the " Up , Down" buttons (5,6). Confirm by pressing the "Alarm" button once.
 3. Select Minutes with the " Up , Down" buttons (5,6). Confirm by pressing the "Alarm" button once. Select the Snooze Length (1-60 minutes) using the " Up , Down" buttons (5,6). Confirm by pressing the "Alarm" button once.
- Select Alarm activation days with the " Up , Down" buttons (5,6). 1-5 – Monday – Friday.
 - 1-6 – Monday – Saturday.
 - 1-7 – Monday – Sunday.

Confirm by pressing the "Alarm" button once.

- When the alarm is activated press the " SNZ – Light " button, the alarm will snooze for the length of time set in point 4.
- To turn off the alarm for the day. When the alarm is activated, press the "Alarm" button. The alarm clock will not go off on that day.

Enabling the alarm function:

1. To turn on the alarm function, press the "Alarm" button one at a time. The letters AL will appear on the display.
2. To Deactivate the alarm function, press the "Alarm" button one at a time. The letters AL will disappear from the display.

Automatic switching between information on the display:

1. Use the Mode button (2) to switch the display to show temperature.

2. Press and hold the Mode button (2) until the device beeps.
3. The device will enter the automatic transition mode between Time, Date and Temperature.
4. To disable this function, repeat steps 1-3.

Change the brightness of the display

UP button (5) once . There are 2 brightness options: 1. Bright, 2. Muted

Turn on night mode. (18:00 – 6:00)

This function reduces the display brightness from 18:00 – 6:00. During this time, the display will be in the setting:

2. muffled. From 6:00 a.m. to 6:00 p.m. the display will be in the setting: 1. Bright:


1. Press and release the Mode button (2) until the display shows OFF.
2. Press the UP button (5) one at a time. ON will appear in the display. The display dims automatically.
3. To disable this function, follow steps 1,2 and change the setting from ON to OFF.

Technical data:

- **Battery type:** 3x AAA (Lr04) We suggest using rechargeable batteries.
- **USB power supply:** 5V 1A
- **Temperature range:** 0-50 °C

Please transfer cardboard packaging to waste paper. Pour the polyethylene bags (PE) into the plastic container. Worn device should be returned to the appropriate point storage because it is dangerous in the device ingredients may pose a threat to the environment. The electrical device should be handed over to limit its reuse and use. If in the device there are batteries you have to take out and give to the point stored separately.

Documents / Resources

	<p>camry CR 1150 Clock Radio with CD Player [pdf] User Manual CR 1150 Clock Radio with CD Player, CR 1150, Clock Radio with CD Player, Radio with CD Player, CD Player</p>
---	--

References

-  [AdlerEurope](#)