

camry
CR 4469 Knife Sharpener



camry CR 4469 Knife Sharpener User Manual

[Home](#) » [camry](#) » camry CR 4469 Knife Sharpener User Manual 

Contents

- 1 [camry CR 4469 Knife Sharpener](#)
- 2 [Product Specifications](#)
- 3 [Product Usage Instructions](#)
- 4 [Frequently Asked Questions \(FAQ\)](#)
- 5 [SAFETY PRECAUTIONS](#)
- 6 [DESCRIPTION OF DEVICE](#)
- 7 [USE OF DEVICE](#)
- 8 [CLEANING AND MAINTENANCE](#)
- 9 [TECHNICAL DATA](#)
- 10 [DISPOSAL](#)
- 11 [OTHER PRODUCTS](#)
- 12 [AFTER SALE SERVICE NOTICE](#)
- 13 [Documents / Resources](#)
 - 13.1 [References](#)
- 14 [Related Posts](#)

camry

camry CR 4469 Knife Sharpener



Product Specifications

- **Power supply:** 230V~ 50Hz
- **Power:** 40W
- **Max. power:** 60W

Product Usage Instructions

Safety Conditions

It is important to read and follow the safety instructions provided in the manual carefully for safe usage of the device.

Description of Device

1. Reshaping slot
2. Fine honing slot
3. ON/OFF Switch
4. Suction feet

Cleaning and Maintenance

1. Unplug the device before cleaning or making adjustments.
2. Clean the outside with a damp cloth; do not immerse the appliance in water.
3. To remove metal filings, shake the device after removing the plastic plugs at the bottom.

Technical Data

- **Power supply:** 230V~ 50Hz
- **Power:** 40W
- **Max. power:** 60W

Environmental Protection

- Please dispose of carton boxes and plastic bags in corresponding waste bins to protect the environment.
- Used appliances with hazardous components should be taken to dedicated collection points for disposal.

Frequently Asked Questions (FAQ)

- **Can I submerge the device in water for cleaning?**

No, do not immerse the appliance in water. Use a damp cloth for cleaning the exterior.

- **How should I dispose of the used appliance?**

Used appliances with hazardous components should be delivered to dedicated collection points for proper disposal.

SAFETY PRECAUTIONS

SAFETY CONDITIONS IMPORTANT INSTRUCTIONS ON SAFETY OF USE PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

The warranty conditions are different, if the device is used for commercial purpose.

1. Before using the product please read carefully and always comply with the following instructions. The manufacturer is not responsible for any damages due to any misuse.
2. The product is only to be used indoors. Do not use the product for any purpose that is not compatible with its application.
3. The applicable voltage is 230V~ 50Hz. For safety reasons it is not appropriate to connect multiple devices to one power outlet.
4. Please be cautious when using around children. Do not let the children to play with the product. Do not let children or people who do not know the device to use it without supervision.
5. **WARNING:** This device may be used by children over 8 years of age and persons with reduced physical, sensory or mental capabilities, or persons without experience or knowledge of the device, only under the supervision of a person responsible for their safety, or if they were instructed on the safe use of the device and are aware of the dangers associated with its operation. Children should not play with the device. Cleaning and maintenance of the device should not be carried out by children, unless they are over 8 years of age and these activities are carried out under supervision.
6. After you are finished using the product always remember to gently remove the plug from the power outlet holding the outlet with your hand. Never pull the power cable!!!
7. Never put the power cable, the plug or the whole device into the water. Never expose the product to the atmospheric conditions such as direct sun light or rain, etc.. Never use the product in humid conditions.
8. Periodically check the power cable condition. If the power cable is damaged the product should be turned to a professional service location to be replaced in order to avoid hazardous situations.
9. Never use the product with a damaged power cable or if it was dropped or damaged in any other way or if it does not work properly. Do not try to repair the defected product yourself because it can lead to electric shock. Always turn the damaged device to a professional service location in order to repair it. All the repairs can be done only by authorized service professionals. The repair that was done incorrectly can cause hazardous situations for the user.
10. Never put the product on or close to the hot or warm surfaces or the kitchen appliances like the electric oven or gas burner.

11. Never use the product close to combustibles.
12. Do not let cord hang over edge of counter or touch hot surfaces.
13. Never leave the product connected to the power source without supervision. Even when use is interrupted for a short time, turn it off from the network, unplug the power.
14. In order to provide additional protection, it is recommended to install residue current device (RCD) in the power circuit, with residual current rating not more than 30 mA. Contact professional electrician in this matter.
15. Avoid contact with moving parts.
16. Unplug from the outlet when not in use, before cleaning and before attempting to adjust parts.
17. The appliance must not be used near water or other liquids.
18. Only for use on straight edges. Not for use on scissors or serrated edges.
19. Do not run fingers along the blade of the knife to check for sharpness.
20. Never insert the tip of the knife into the slot first and push through. This could damage the knife sharpener and your blade.

DESCRIPTION OF DEVICE



1. Reshaping slot
2. Fine honing slot
3. ON/OFF Switch
4. Suction feet

USE OF DEVICE

1. Place the device on a flat surface. Moisten the suction a little to keep the unit firmly in place on the counter.
2. Insert the heel of blade sequentially in both slots of sharpening section (1), on the left side of the device. Insert the heel of blade into the reshaping slot (1) and move the blade in both directions parallel to the table surface, at first the left and then the right-hand part of the sharpening slot (1). Slightly lift up on the knife handle as the curved portion near the tip is drawn through the grinding wheels. Repeat until the knife blade is sharp enough. To optimize sharpening of each 5 cm of blade, you need to move such blade length in the reshaping slot (1) for

one second.

3. Insert the heel of blade sequentially in both slots of fine honing section (2), on the left side of the device. Insert the heel of blade into the fine honing slot (2) and move the blade in both directions parallel to the table surface, at first the left and then the right-hand part of the fine honing slot (2). Slightly lift up on the knife handle as the curved portion near the tip is drawn through the grinding wheels. Repeat until the knife blade is sharp enough. To optimize sharpening of each 5 cm of blade, you need to move such blade length in the fine honing slot (2) for one second.
4. After sharpening clean the knife in hot water and detergent.

CLEANING AND MAINTENANCE

Unplug from the outlet when not in use, before cleaning and before attempting to adjust parts. Clean the outside surface of the appliance with a damp cloth. Never immerse this appliance in water or other liquids in order to clean it. Do not insert the device into the water in order to clean it. In order to remove the metal filings and shards, remove the plastic plugs that are located on the bottom of the unit and gently shake the device.

TECHNICAL DATA

- **Power supply:** 230V~ 50Hz
- **Power:** 40W
- **Max. power:** 60W

DISPOSAL

To protect your environment: please separate carton boxes and plastic bags and dispose them in corresponding waste bins. Used appliance should be delivered to the dedicated collecting points due to hazardous components, which may effect the environment. Electrical appliance must be returned in order to reduce its reuse and utilization. If the device contains batteries they should be delivered to dedicated points separately.

OTHER PRODUCTS



ELECTRIC KETTLE
CR 1290



ESPRESSO MACHINE
CR 4410



SANDWICH MAKER
CR 3054



RETRO RADIO
CR 1182



AIR CONDITIONER
CR 7925



FOOD PROCESSOR
CR 4223



MIXER
CR 4220



MEAT MINCER
CR 4812



AIR FRYER OVEN
CR 6311



BAGLESS VACUUM CLEANER
CR 7046



AIR DEHUMIDIFIER
CR 7851



Trimmer
CR 2921



CERAMIC FAN HEATER
CR 7732



OIL FILLED RADIATOR
CR 7812



PORTABLE FRIDGE
CR 8076



HEATED ANIMAL DEN
CR 7431



ELECTRIC KETTLE
CR 1292



HAIR DRYER
CR 2261



TOASTER 2 SLICES
CR 3217



ELECTRIC GRILL
CR 3044



PERSONAL BLENDER
CR 4615



WAFFLE MAKER
CR 3046



GARMENT STEAMER
CR 5033



AIR HUMIDIFIER
CR 7964



GLASS HEATER
CR 7721



WASHING MACHINE
CR 8054



OIL FILLED RADIATOR
CR 7810



HEATING LUNCHBOX
CR 4483



MOSQUITO KILLER LAMP
CR 7935



SONIC TOOTHBRUSH
CR 2173



HEATING UNDERBLANKET
CR 7430




HAIR DRYER
CR 2256



AFTER SALE SERVICE NOTICE

If you want to buy spare parts or make any complaints, please contact the seller who issued the receipt directly.
www.camryhome.eu

Documents / Resources

	<p>camry CR 4469 Knife Sharpener [pdf] User Manual CR 4469 Knife Sharpener, CR 4469, Knife Sharpener, Sharpener</p>
---	--

References

- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.