



[Home](#) » [Camsoy](#) » **CAMSOY S1 Mini Camera Instruction Manual** 

Contents [[hide](#)]

- [1 CAMSOY S1 Mini Camera](#)
- [2 Product Illustration](#)
- [3 Introduction to Interface Icons](#)
- [4 Installation of TF card](#)
- [5 Main interface operating instructions](#)
- [6 Basic operating instructions](#)
- [7 APP Download](#)
- [8 Charging Instructions](#)
- [9 FCC STATEMENT](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)



Camsoy

CAMSOY S1 Mini Camera

 


INSTRUCTION MANUAL

- Please read the user manual carefully before using the product, and keep it properly

Product Illustration

1. Camera shot
2. Monitor
3. Up-down button
4. Power/Confirm key
5. TF card slot
6. Indicator light
7. Down-page button
8. Data interface
9. Shell
10. Speakers
11. Microphones

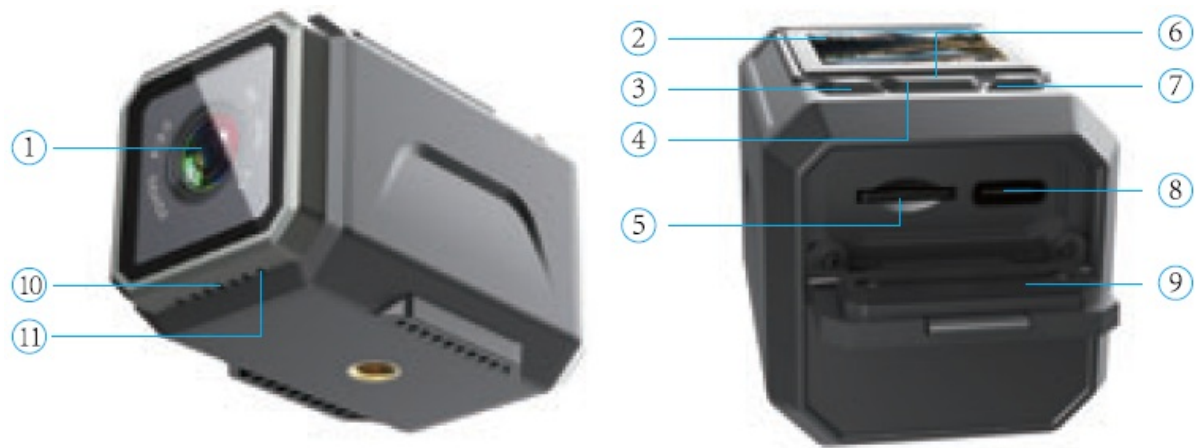

 
Introduction to Interface Icons

1. Video Mode
2. Video is on
3. Resolution
4. WiFi is on
5. TF Tip
6. Battery level
7. Dates
8. Timing
9. Turn on time-lapse recording





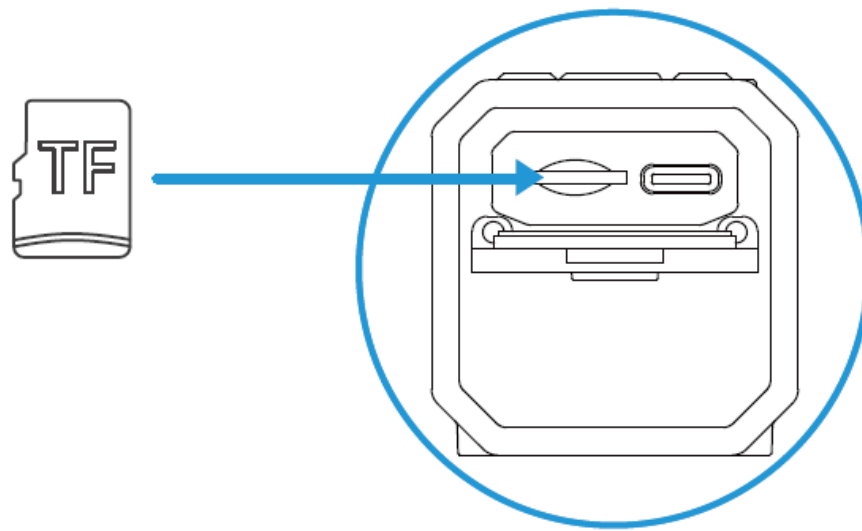


Installation of TF card

- Insert the TF card as shown
- Please use a genuine TF card
- Support 8-256G, U3 high-speed card



Tip: This product will be prompted to format when inserted into the TF card, if the card has important files, please backup to other devices before use.

Main interface operating instructions

- The device powers on directly into the recording mode. In the recording mode, short-press press  ” or “  key to enter the main interface. In the main interface, short-press press   key to switch icons and select the desired mode. Short-press press  key to enter.



videotape


take a picture

photo album


set up

Basic operating instructions




Power on

- Long-press the “  ” key to turn on the power in the off state, blue light, and display on and hear the beep.

Shut down

- Long-press the “” button to turn off the phone in any mode of power, on the blue light and display go out (WiFi mode shutdown needs to exit the APP).

Videotape

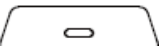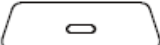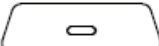- Power on the direct video mode short press “” key to start recording; video state short press “” key to stop recording and save the current video file, in the main interface to enter the video mode first switch to the video icon and then short press “” key to enter the video mode (turn on the time-lapse video recording video file suffix is GAP).

Take a picture










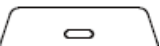


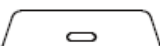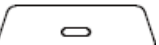


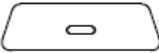

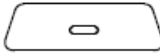


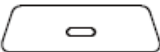

- Select the photo icon in the main interface and press the “” button to enter the photo mode short Short-press the “” key once to take a photo and save the current photo file.

Photo album


1. **Play video:** In the main interface, select the album icon and press “” to enter the album, select the video directory in the album and press “ ” to select the desired video file. Short-press the “” key to play the video or pause the playback. Press the “ ” key to quickly switch between the playing video files during playback. Long-press press “” key to return to the previous step or exit.
2. **View Pictures:** Select the picture catalog in the album, short-press the “” button to select the picture you need to view, and short press the “ ” button to view the picture. Press “ ” key to quickly switch to view pictures. Long press “” key to return to the previous step or exit.

3. **Delete files:** Select the files you need to delete when browsing videos or pictures in the album directory, long-press the " key to enter the deletion, confirm the deletion by short-pressing the " " key.

Set up

- In the main interface select the setup icon short press " " to enter the setup, in the setup menu can be selected up and down by short press "  " key, short press " " key can be modified by various parameter settings, long press " " to return to the previous step or exit.

Reset




- The machine appears to be dead, the key is invalid, can not be used normally, long press 10 seconds " "key to reset the machine for reset, after reset can be used normally.

APP Download

- Scan the QR code below to download and install Wind Recorder, or search for Wind Recorder on Google Play or App Store to download and install.



Hotspot WiFi

- WiFi Switch: Select the "WiFi Switch" option in the Settings menu and then press the " " button to toggle WiFi on or off (the device ships with WiFi off by default).
- WiFi connection: search and connect to the network named S (e.g. S1_88AB) in the WiFi settings of your cell phone or tablet PC, password: 12345678, after successful connection, open the "6 Frames Explorer App" to enter the main interface and click " Enter the real-time preview interface.
- APP operation photo and video: preview interface, click  "to start video, video state

click” 📷 “to stop video and save the current video file, click 📷 ” to take a photo and save the current photo.

- Recorder file download: preview interface select” 📄 ” Click to enter the “cycle of video” (picture download selection capture events will be automatically downloaded) to open the need to download the video file, in the lower-left to click on the” ⬇️ ” to enter the download state. (High-resolution video segmentation is long, the download speed is slow).
- Recorder Settings: Click” ⚙️ ” in the preview interface to enter the recorder settings, you can set some functions as well as parameters of the machine through the APP.

Connect a computer

- In any mode, it can be directly connected to the computer, and when connected to the computer, it can be used as a USB flash drive, and you can freely copy, cut and paste, delete, and format files.

Charging Instructions

- For battery level indication, please refer to the illustration.



battery life



low battery



battery level

- Charging, this machine is built with a rechargeable lithium battery. The first time you use this machine, please charge it. The charging indicator light is always on, full off, you can charge by the following ways.
- Connect to the computer for charging, and use a USB cable to connect to the computer.
- Use the power adapter or mobile power to charge.
- Charge the battery after each use, about 3 hours to fill up (charging time depends on the adapter), and then charge the battery for another 20 minutes as much as possible after filling up to ensure the battery is full for use.

Suggestion: Try not to use the function while charging, it may cause the battery as well

as the TF card to be damaged!

Note:

Usage scene:

- Please strictly abide by relevant laws of the country where the product is used, and do not use this product for any illegal purpose, otherwise, you should bear the consequences.

Operating temperature:

- Please use the product at the natural temperature and do not use it in temperature where human body can not adapt to.

Working humidity:

- Please use it in human suitable environment humidity, this product only supports IP66 waterproof, please use it in standardized scenes.

Shooting requirements:

- Please use the product in an environment with sufficient light sources and do not direct the camera at the sun and other strong light sources to avoid damage to optical devices.

Cleaning requirements:

- Do not use the product in an environment with too large dust density so as to avoid the lens and other components contaminated with dust, which will affect the camera effect. (If the lens has fingerprints or dust, please use clean soft material dust-free cloth to wipe it).

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet the general RF exposure requirements. The device can be used in portable exposure conditions without restriction

Documents / Resources

	CAMSOY S1 Mini Camera [pdf] Instruction Manual 2BBL2-S1, 2BBL2S1, S1 Mini Camera, S1, Mini Camera, Camera
---	--

References

- [User Manual](#)

2BBL2-S1, 2BBL2S1, camera, Camsoy, Mini Camera, S1, S1 Mini

Camsoy Camera

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.