



# Car Keys Express V3.0221 Remote Control Keys User Guide

[Home](#) » [Car Keys Express](#) » Car Keys Express V3.0221 Remote Control Keys User Guide 

## Contents

- [1 Car Keys Express V3.0221 Remote Control Keys](#)
- [2 PAIRING INSTRUCTIONS](#)
- [3 FCC REGULATORY STATEMENT](#)
- [4 OTHER KEYS](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)



**Car Keys Express V3.0221 Remote Control Keys**



COMPATIBILITY LOOKUP		
MAKE/ MODEL	YEARS CODE	PAIR
FORD		
C-Max	2013-2018	2
Crown Victoria	2000-2005	1
Crown Victoria	2006-2011	2
Edge	2007-2015	2
Escape	2001-2018	2
Escort	1998-2003	2
Expedition	2003-2017	2
Explorer	2000-2015	2
Explorer Sport	2000-2005	2
Five Hundred	2005-2007	2
Flex	2009-2017	2
Focus	2000-2006	3
Focus	2007	4
Focus	2010-2018	2
Freestar	2004-2007	2
Freestyle	2005-2007	2
Fusion	2006-2011	2
Mustang	2000-2009	2
Mustang	2010-2014	2
Taurus	1998-2009	2
Taurus	2008-2018	2
Taurus X	2008-2010	2
Thunderbird	2003-2005	2
Transit	2013-2014	2
Transit Connect	2016	2
Windstar	1999-2004	2

LINCOLN		
Aviator	2003-2005	2
LS	2003-2006	2
MKS	2009-2012	2
MKX	2007-2010	2
MKZ	2007-2017	2
Navigator	2003-2017	2
Zephyr	2006	2
MERCURY		
Cougar	1999-2002	5
Grand Marquis	1998-2005	1
Grand Marquis	2006-2011	2
Marauder	2003-2004	1
Mariner	2007-2011	2
Milan	2006-2011	2
Montego	2005-2007	2
Mountaineer	2002-2009	2
Tribute	2007-2011	2
Sable	2008-2009	2

## PAIRING INSTRUCTIONS

Instructions have timing requirements. Waiting too long between steps may result in your vehicle's computer timing out, requiring you to start over. Once you begin the pairing procedure, be sure to move at a quick and even pace.

### PAIR CODE 1

1. Insert a working key into the ignition.
2. Turn the ignition from OFF to RUN (without starting the engine) 4 times within 3 seconds, with the 4th time ending in RUN. The door locks will cycle to confirm pairing mode.
3. Within 20 seconds, press any button on the first remote. The door locks will cycle to confirm pairing.
4. Within 20 seconds press any button on the second remote. The door locks will cycle to confirm pairing.
5. Repeat step 4 for any additional remotes.
6. Turn the ignition to OFF.

7. Test all remotes.

## **PAIR CODE 2**

1. Insert a working key into the ignition.
2. Turn the ignition from OFF to RUN (without starting the engine) 8 times within 10 seconds, with the 8th time ending in RUN. The door locks will cycle to confirm pairing mode.
3. Within 20 seconds, press any button on the first remote. The door locks will cycle to confirm pairing.
4. Within 20 seconds, press any button on the second remote. The door locks will cycle to confirm pairing.
5. Repeat step 4 for any additional remotes.
6. Turn the ignition to OFF. Locks will again cycle to indicate the end of pairing mode.
7. Test all remotes.

## **PAIR CODE 3**

1. Insert a working key into the ignition.
2. Turn the ignition from OFF to RUN (without starting the engine) 4 times within 6 seconds.
3. Turn the ignition OFF. The system will chime to confirm pairing mode.
4. Within 20 seconds, press any button on the first remote. The system will chime once to confirm pairing.
5. Within 20 seconds, press any button on the second remote. The system will chime once to confirm pairing.
6. Repeat step 5 for any additional remotes.
7. Turn ignition to RUN to exit programming mode.
8. Test all remotes.

## **PAIR CODE 4**

1. Fasten all seat belts and close all doors.
2. Insert a working key into the ignition.
3. Turn the ignition from OFF to RUN (without starting the engine) 4 times within 6 seconds, with the 4th time ending in RUN.
4. Turn the ignition to OFF. An acoustic signal will sound to confirm pairing mode.
5. Within 10 seconds, press and hold any button on the first remote. Wait for an acoustic sound and warning lamp to flash (confirming pairing), then release the button.
6. Wait 2 seconds, but within 10 seconds, repeat step 5 for any additional remotes.
7. To exit pairing mode, turn the ignition to RUN or wait 10 seconds.
8. Test all remotes.

## **PAIR CODE 5**

1. Insert a working key into the ignition.
2. Turn the ignition from OFF to RUN (without starting the engine) 4 times within 6 seconds.
3. Turn the ignition OFF. The LED in the clock/trip computer will light up continuously to confirm pairing mode.
4. Within 20 seconds, press any button on the first remote. The LED in the clock will flash 4 times to confirm pairing.

5. Within 20 seconds, press any button on the second remote. The LED in the clock will flash 4 times to confirm pairing.
6. Repeat step 5 for any additional remotes.
7. Turn the ignition to RUN. The LED will turn off to indicate end of pairing mode.
8. Test all remotes.

## FCC REGULATORY STATEMENT

### FCC ID: 2AOKM-FD1

47 CFR §15.19(a)(3) THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS. (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**Note:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### HELP

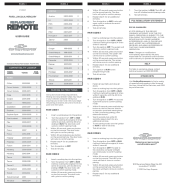
For help or assistance, please contact technical support at: 888-598-8910.

## OTHER KEYS



Visit [CarKeysExpress.com](https://www.carkeysexpress.com) to find a variety of award-winning products, like Universal Car Keys, Universal Car Remotes, and OEM keys and remotes.

12101 Sycamore Station Place Ste. 140 Louisville, KY 40299 © 2021 Car Keys Express

## Documents / Resources

	<a href="#">Car Keys Express V3.0221 Remote Control Keys</a> [pdf] User Guide V3.0221 Remote Control Keys, V3.0221, Remote Control Keys
---	--

## References

-  [Car Keys Express - Discount Key Replacement](#)
-  [Car Keys Express - Discount Key Replacement](#)