



CARBINE CARF-AM2 Remote Control System Instructions

[Home](#) » [CARBINE](#) » CARBINE CARF-AM2 Remote Control System Instructions 



CARF-AM2 Remote Control System Instructions

Contents

- [1 CARF-AM2 Remote Control System](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

CARF-AM2 Remote Control System

 
Pairing a Replacement Remote Control

Your CARBINE system remote controls are already paired to the control module. If you are replacing or adding remotes to your system, they must be programmed (paired) to the control module before they will operate the system. In order to perform remote control pairing, you must know where your "Valet Button" is located as you will use the button and the LED indicator to perform the pairing function.


Remote Pairing Procedure

1. Open the driver's door.
2. Insert the ignition key into the key cylinder. Turn ON the ignition key.
3. Press and release the valet button then press and hold the valet button for 1.5 seconds. The LED flashes and the horn/siren chirps (if connected). Release the valet button. The system is now in pairing mode and will stay in Pairing mode for 60 seconds.

4. Press and hold the  button on the new remote control.



 B. The word (PAir) will be displayed in the clock area of a 5 button LCD transmitter. The remote will remain in this state for 15 seconds.



7. Turn the ignition key to the Off position. A long chirp from the horn confirms that the pairing mode is off.

The Carbine logo, featuring the word "CARBINE" in a bold, blue, italicized sans-serif font with a registered trademark symbol.

Documents / Resources

[illegible]