





Carrier SC-41-0200-0001-99 SmartCell Dual Output Device for Fire Zones Owner's Manual

Home » Carrier » Carrier SC-41-0200-0001-99 SmartCell Dual Output Device for Fire Zones Owner's Manual



Contents

- 1 Carrier SC-41-0200-0001-99 SmartCell Dual Output Device for Fire
- 2 Technical specifications
- 3 Overview
- 4 Installation
- **5 Connection**
- **6 Battery Replacement**
- 7 FAQs
- 8 Documents / Resources
 - 8.1 References



Carrier SC-41-0200-0001-99 SmartCell Dual Output Device for Fire Zones



Technical specifications

General

• Wireless frequency 868 MHz

Input

- Input quantity 2
- Input type and rating Resistor monitored inputs

Output

- Output quantity 2
- Output type and rating: Voltage-free outputs, rated 1 A at 30 VDC

Physical

- Physical dimensions 150 x 200 x 55 mm (W x H x D)
- Net weight 0.45 kg
- Mounting type: Wall mount
- Batteries: 3 x ER14505M 3.6 V lithium thionyl chloride batteries (Fanso or Titus)

Environmental

• Operating temperature- -10 to +55°C

- Storage temperature -10 to +30°C (with batteries) -10 to +55°C (without batteries)
- Relative humidity 95% noncondensing max.
- · Environment Indoor

Regulatory

- · Compliancy CE
- · Certification CPR
- Standards EN54-13
 - EN54-18
 - EN54-25

Overview

The SmartCell Input / Output Device is quick and easy to install and offers individual addressing at the SmartCell Control Panel. Features include two resistor-monitored inputs, two voltage-free outputs, and bidirectional 868 MHz communication. This device is third-party certified and compatible with the full.SmartCell product range.

Details

- · Full wireless communication with the panel
- · Quick and easy to install
- Two resistors monitored the inputs
- Twvoltage-free outputs
- · For connection to remote fire devices

Installation

- 1. Choose a suitable location for mounting the SmartCell Dual Input/Output Device on a wall.
- 2. Ensure the area is within the specified temperature and humidity range for proper functioning.
- 3. Mount the device, securing appropriate mounting hardware.

Connection

- 1. Connect the resistor monitored inputs to the corresponding sensors or devices.
- 2. Connect the voltage-free outputs to the desired remote fire devices for operation.

Battery Replacement

When replacing batteries, follow these steps:

- 1. Remove the device from the wall mount carefully.
- 2. Replace all three batteries with new ER14505M 3.6 V lithium thionyl chloride batteries.
- 3. Ensure proper polarity while inserting the batteries.
- 4. Remount the device securely on the wall.

As a company of innovation, Carrier Fire & Security reserves the right to change product specifications without notice. For the latest product specifications, visit <u>firesecurityproducts.com</u> online or contact your sales representative.

Last updated on 8 February 2024 - 12:15

FAQs

Q: Can the SmartCell Dual Input/Output Device be used outdoors?

A: No, the device is designed for indoor use only.

Q: What is the wireless communication frequency of the device?

A: The device operates at 868 MHz for wireless communication.

Q: How many inputs and outputs does the device have?

A: The device has two resistor-monitored inputs and two voltage-free outputs.

Documents / Resources



<u>Carrier SC-41-0200-0001-99 SmartCell Dual Output Device for Fire Zones</u> [pdf] Owner's Manual

SC-41-0200-0001-99 SmartCell Dual Output Device for Fire Zones, SC-41-0200-0001-99, SmartCell Dual Output Device for Fire Zones, Output Device for Fire Zones, Device for Fire Zones, Fire Zones

References

- Security Products
- TCPDF
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.