

# CAS PR-II Price Computing Scale User Manual

Contents

1

CAS PR-II Price Computing Scale

2

Product Usage Instructions

3

OVERALL VIEW

4

DISPLAY & KEY BOARD

5

Documents / Resources

## CAS PR-II Price Computing Scale

### Product Information

Thank you for purchasing CAS PR series. These series have been designed with CAS reliability, under rigid quality control and with outstanding performance. Your special departments can enjoy these high-quality reliable CAS products. We believe that your needs will be satisfied, and you will have proper reliability. This manual will help you with proper operation and care of the PR. Please keep it handy for future reference.

### Key Functions

Keys	Functions
~	Used to enter all the numeric data
PLU key	Used to enter PLU setting
Price Clear key	Used to clear all the numeric price display
Total Clear key	Used to clear sum total price
Daily Clear key	Used to clear all the daily total prices
Zero Correction key	Used to correct the zero point
Tare key	To set or clear tare value
PLU Save key	To make several sales transactions by adding up
Total Sales key	To check total sales amount or finalize sales transaction
Decimal Point key	Used to enter the decimal point when the price is entered
Backlight Setting key	Used to change backlight setting (OFF, ON, AUTO)
Power Save Mode key	Used to enter price per 100g (\$/100g)

### Product Usage Instructions

## Chapter 1. Basic Operation

**a. Zero function:** Press the ZERO key to set Zero.

**b. Tare function:** Tare means the weight of the container. You may use the tare function when you weigh an item with a container and measure only the weight of the item.

*One-time tare:*

1. Place a container on the platter (e.g., 200g of tare).
2. Press the TARE key to set the zero point (e.g., 200g of tare).

*Successive tare:*

3. Place another container on the platter (e.g., 100g of tare).
4. Press the TARE key to set the zero point.
5. After weighing the item, remove all of the containers from the platter.
6. Press the TARE key again to set zero.

**NOTICE:** To remove the TARE function, press the TARE Key again after removing the container from the platter. Automatic tare clearing function may not be applied to all of the PR series.

## Chapter 2. PLU Saving & Calling-up

**a. Saving unit price on PLU:** This section explains how to save unit price in PLU.

PLU NAME	Number of PLU	Range	Remarks
Press the 'Fn' key for a few seconds then, Set-up menu will be shown.	7	1~7	

**b. Calling up PLU:** After inputting the unit price, press the number of PLU that you want to set up.

Press M1 ~ M7 key to call up PLU (e.g., Press M1 key).

Press C key to clear and return to the normal weighing mode.

## Chapter 3. User's Set-up Mode

This section explains how to set up the following functions:

KEY	Display	FUNCTION
bL-At	Use back-light when you put on the weight	
bL-oFF	Do not use a back-light	
bL-on	Use back-light always	
ps – 0	Do not use power save mode	Use power save mode
up- kg	Used to price per kg	
up-100g	Used to price per 100g (\$/100g)	
rS-Co	Continually mode	
rS-PC		
rS-St	Command mode	Stable mode

## PRECAUTIONS

### Warning

Precautions when installing the scale. To ensure that you get the most from your scale, please follow these instruction.

- Do not disassemble the scale.  
When any damage or defect occurs, contact your CAS authorized dealer immediately for proper repair.
- Do not overload beyond the maximum weight limit.
- Scale must be grounded to minimize electricity static.  
This will minimize defect or electric shock.
- Do not pull the plug by its cord when unplugging.  
Damaged cord could cause electric shock or fire.
- To prevent from fire occurring, Do not place or use the scale near flammable or corrosive gas.
- To reduce electric shock or incorrect reading, Do not spill water on the scale or place it in humid condition.
- Avoid placing the scale near heater or in direct sunlight.
- Insert plug firmly to wall outlet to prevent electric shock.
- Use proper Adapter.  
Incorrect adapter could damage the scale.
- Attention  
Make sure to plug your scal into the proper power outlet.  
For maximum performance, plug into a power outlet 30 minutes before the usage for warm up.

### Attention

Make sure to plug your scal into the proper power outlet.

For maximum performance, plug into a power outlet 30 minutes before the usage for warm up.

- For consistent and accurate reading, maintain perlodical check by your CAS authorized dealer.
- Avoid sudden shock to the scale.
- Grab on the bottom of the scale when moving.
- Keep the scale away from other electromagnetic enerating devices.

This may interfere with accurate reading.

- Place the scale on firm and temperature consistent environment.
- By adjusting 4 comers of the scale, set the scale even using the built in scale leveling indicator.
- Take the battery out when scale is not in use for long time. Leakage from the batteries is hazardous.

## PREFACE

Thank you for purchasing CAS PRII series.

These series have been designed with CAS reliability, under rigid quality control and with outstanding performance. Your special departments can enjoy these high quality reliable CAS products.

We believe that your needs will be satisfied and you will have proper reliability.

This manual will help you with proper operation and care of the PRII.

Please keep it handy for future reference.

## OVERALL VIEW


## DISPLAY & KEY BOARD

### PR II – B Front display

### PR II – B Rear display

### PR II – P Front cover & key

## Documents / Resources

	<a href="#">CAS CAS PR-II Price Computing Scale</a> [pdf] User Manual CAS PR-II Price Computing Scale, CAS PR-II, Price Computing Scale, Computing Scale, Scale
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------