



CASAMBI LINE 5CV 5 Channel Output Dimmer LED User Manual

[Home](#) » [CASAMBI](#) » CASAMBI LINE 5CV 5 Channel Output Dimmer LED User Manual 

CASAMBI LINE 5CV 5 Channel Output Dimmer LED



Contents

- 1 FEATURES
- 2 PRODUCT DESCRIPTION
- 3 PRODUCT CODE
- 4 PROTECTIONS
- 5 TYPE OF PROFILES
- 6 REFERENCE STANDARDS
- 7 TECHNICAL SPECIFICATIONS
- 8 WIRING DIAGRAM
- 9 LOCAL COMMANDS FUNCTIONALITY
- 10 UNPAIR DEVICE FROM THE CASAMBI NETWORK
- 11 OPERATING WINDOW
- 12 FLICKER PERFORMANCE
- 13 DIMMING CURVE
- 14 MECHANICAL DIMENSIONS
- 15 TECHNICAL NOTE
- 16 WARNINGS
- 17 Customer Support
- 18 Documents / Resources
 - 18.1 References
- 19 Related Posts

FEATURES

DIMMER LED CASAMBI

Power Supply: 12-24-48 Vdc

Voltage Output for strip LED and LED module

WHITE, MONOCOLOR, DYNAMIC WHITE, RGB, RGB+W, RGB+WW and RGB+TW Light Control

Command: CASAMBI APP

Local Command: N°2 Button Normally Open

Control voltage output R

Minimum brightness level: down to 0.8%

PWM Modulation

Frequency PWM 4000Hz

Linear curve

Soft start and soft stop

Soft dimming of brightness

Extended temperature range

100% Functional Test

PRODUCT DESCRIPTION

The LINE-5CV-CASAMBI is a 5-channel output dimmer LED, controllable via Bluetooth thanks to the Casambi APP or locally through two normally open buttons.

The dimmer LED is suitable for driving loads such as Strip LED and LED modules, White, monochromatic colour, Dynamic White, RGB, RGB+W, RGB+WW and RGB+TW at constant voltage. You can connect a power supply at 12-24-48 Vdc.

The maximum value of the output current is equal to 12A. The dimmer LED has the following protections: over-power protection, under-power protection, reverse polarity protection and input fuse protection.

The LINE-5CV-CASAMBI enables you to make not only simple brightness adjustments but also more intricate lighting control systems. This is made possible through the creation of multiple scenarios, animations, timers, daylight controls, and more. The CASAMBI APP can be downloaded for free from the Apple App Store and the Google Play Store.

→ For the always updated manual, consult our website: www.dalcnet.com or QR Code



→ For the correct functioning of the CASAMBI APP, consult the forum on the Casambi website:
<https://support.casambi.com/support/home>

PRODUCT CODE

CODE	SUPPLY VOLTAGE	LED OUTPUT	N° OF CHANNELS	TYPE OF COMMAND
LINE-5CV-CASAMBI	12-24-48 VDC	5 x 5A (max 12A)1	5	APP CASAMBI N°2 Button N.O.

PROTECTIONS

OVP	Over voltage protection2	
UVP	Under voltage protection2	
RVP	Reverse polarity protection2	
IFP	Input fuse protection2	

TYPE OF PROFILES

NAME OF PROFILE	# PROFILE	DESCRIPTION
LINE 5xDIM (Lin)	25222	N°5 LED output channels, five slides to dim the outputs. PWM frequency = 4000Hz. Linear dimming curve. PWM resolution 1000step.
LINE TW x TW (Lin)	25223	N°2+2 LED output channels, two slides to dim the outputs and two slides to vary the Colour Temperature PWM frequency = 4000Hz. Linear dimming curve. PWM resolution 1000step.
LINE RGB (Lin)	25224	N°3 Output channels for RGB LEDs. PWM frequency = 4000Hz. Linear dimming curve. PWM resolution 1000step.
LINE RGB+W (Lin)	25225	N°3+1 Output channels for LEDs. RGB and White can be dimmed separately. PWM frequency = 4000Hz. Linear dimming curve. PWM resolution 1000step.
LINE RGB+W+W (Lin)	25226	N°3+2 Output channels for LEDs. RGB and two white channels can be dimmed separately. PWM frequency = 4000Hz. Linear dimming curve. PWM resolution 1000step.
LINE RGB+TW (Lin)	25227	N°3+2 Output channels for LEDs. RGB and Tunable white loads can be dimmed separately. PWM frequency = 4000Hz. Linear dimming curve. PWM resolution 1000step.

1. The maximum output current depends on the operating conditions and the ambient temperature of the installation. For the correct configuration, check the maximum deliverable power in the “Technical Specifications” section and the “Operating Window”.

2. Protections refer to the control logic of the board.

REFERENCE STANDARDS

EN 55015	Limits and methods of measurement of radio disturbance characteristics of electrical lighting and similar equipment
EN 61547	Equipment for general lighting purposes – EMC immunity requirement
EN 61347-1	Lamp Controlgear – Part 1: General and safety requirement
EN 61347-2-13	Lamp Controlgear – Part 2-13: Particular requirement for d.c. or a.c. supplied electronic Controlgear for LED modules

TECHNICAL SPECIFICATIONS

LINE 5CV CASAMBI			
Supply voltage		Min: 10,8Vdc – Max: 52,8Vdc	
Output voltage		=Vin	
Input current		Max 12A	
Output current³		5x max 5A	1x max 12A
Nominal power	12 Vdc	60W	144W
	24 Vdc	120W	288W
	48 Vdc	240W	579W
Power loss in standby mode		< 0.5W	
Type of load⁴		R	
Dimming curves		Linear	
Dimming range⁵		0,8 – 100%	
Minimum dimming level		0,8% (Linear curve 4kHz)	
Dimming method		Pulse Width Modulation “PWM”	
PWM Frequency⁵		4000 Hz	
PWM Resolution⁵		1000 Step	

Operating Frequencies ⁵		2402 – 2483 MHz
Maximum output power ⁵		7dBm
Storage temperature		Min: -40°C – Max: 60°C
Ambient temperature, Ta range ³		Min: -10°C – Max: 60°C
Type of connector		Push-In terminals
Wiring section	Solid Size	0.2 ÷ 1.5mm ² / 24 ÷ 16 AWG
	Stranded Size	
Wire strip length		9 ÷ 10 mm
IP protection grade		IP20
Casing material		Plastic
Packaging units (pieces/units)		1pcs
Mechanical dimensions		186 x 29 x 21 mm
Packaging dimensions		197 x 34 x 29 mm
Weight		71g


For the full range check the “Operating Window” of product.

Type of load: Resisve and DC/DC Converter.

The parameters are derived from the configuration of the Casambi module


WIRING DIAGRAM

Follow the steps below for product installation as shown in the connection diagram:


- Connect the positive of the LED load to the “L” terminal with the “+” symbol, instead the negatives of the LED load to the terminals “L1”, “L2”, “L3”, “L4” and “L5” with the “-” symbol.
- Connect the N.O. push button to the “INPUT 1” and “INPUT 2” terminals with the “” symbol.
Be sure not to connect live parts to “INPUT” terminals.
- Connect a 12-24-48 Vdc constant voltage SELV power supply (depending on the technical characteristics of LED load) to the DC IN terminal block with the “+” and “-” symbols. Be sure not to use constant current LED Driver and check that the polarity of the cables is correct.

Like any other product with Bluetooth control, be sure not to place the product inside a metal case or placed near large metal structures. The metal will significantly obstruct the radio signal, which is crucial for the proper functioning of the device.


CONNECTION SCHEME PROFILE: LINE 5xDIM (Lin)

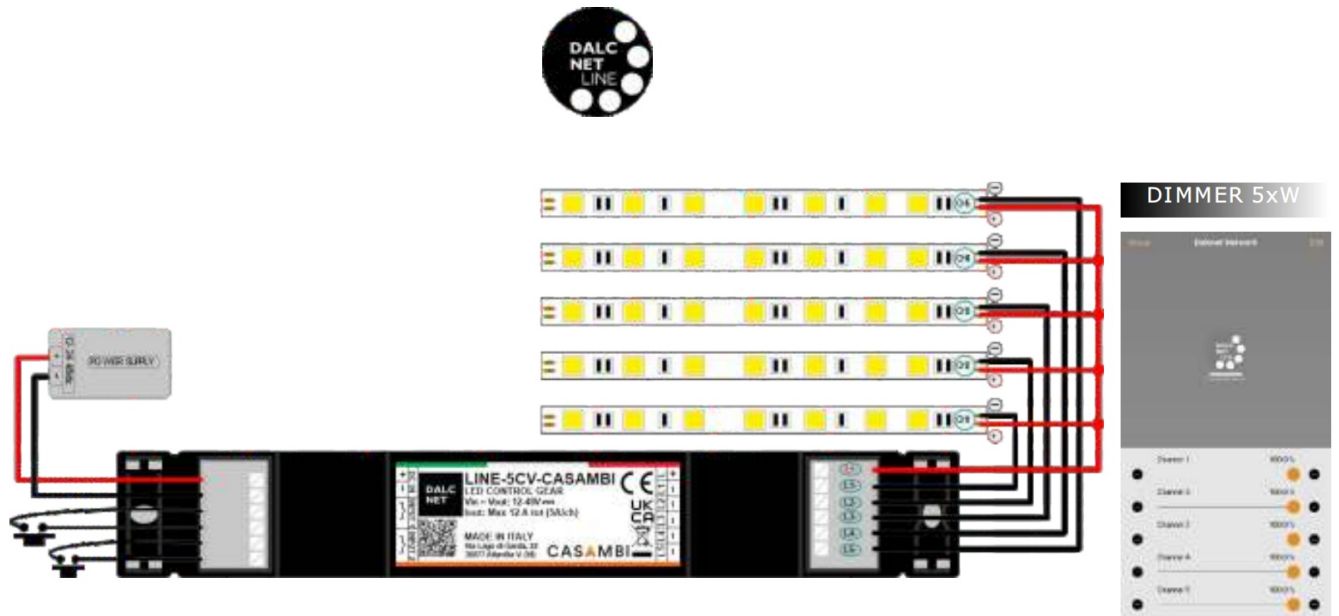

CONNECTION SCHEME PROFILE: LINE TW x TW (Lin)

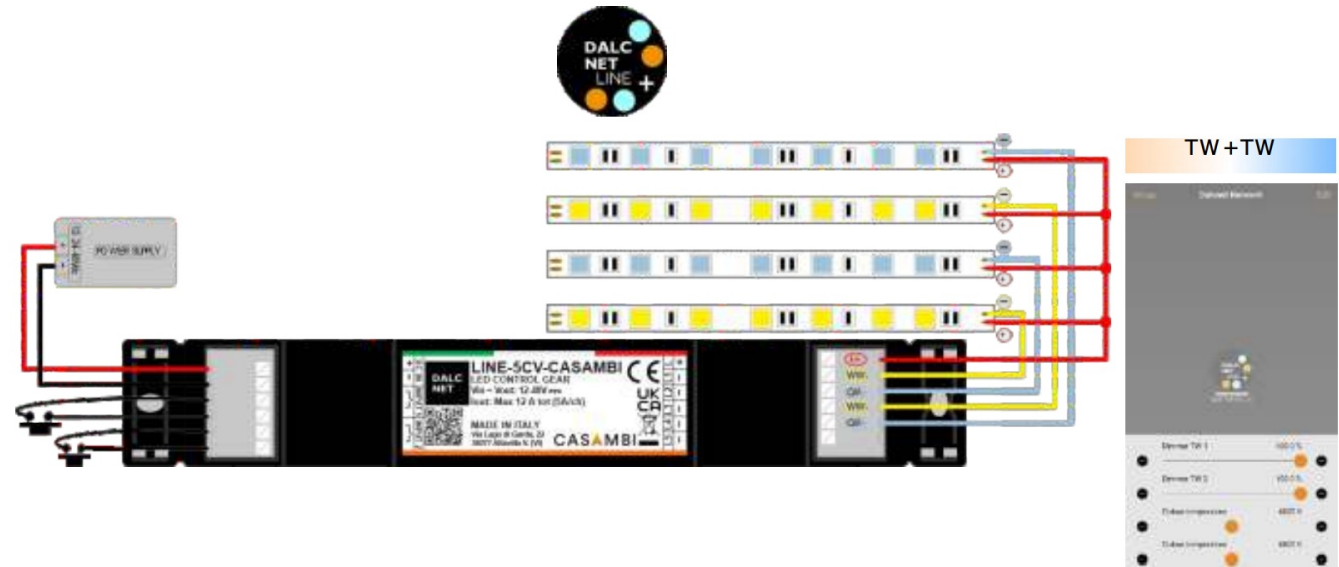


CONNECTION SCHEME PROFILE: LINE RGB (Lin)

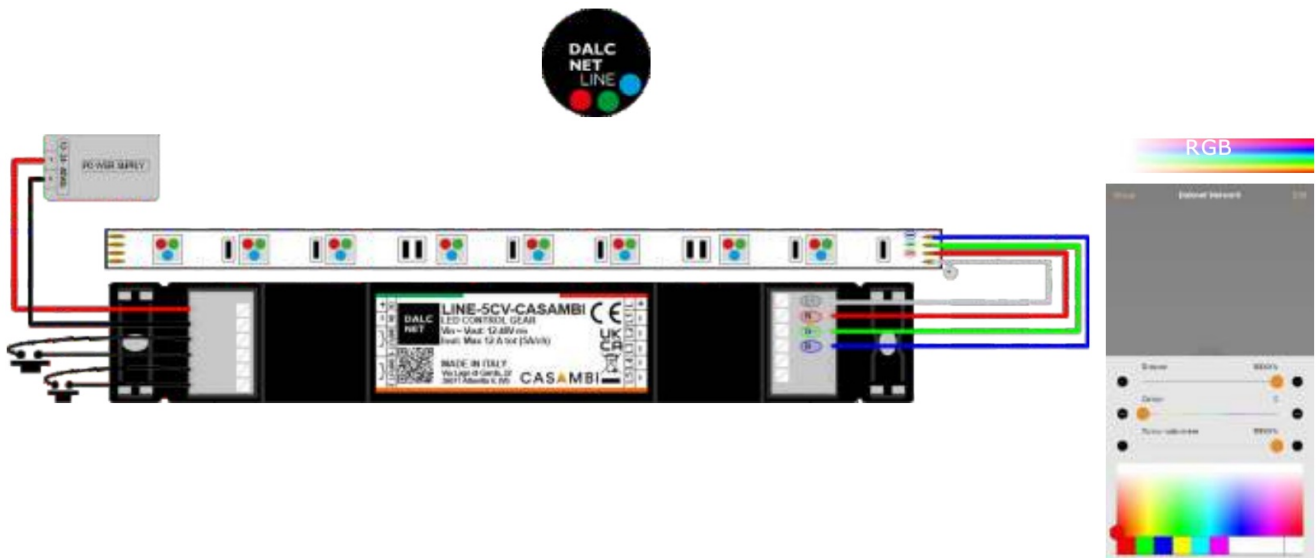


CONNECTION SCHEME PROFILE: LINE RGB+W (Lin)



CONNECTION SCHEME PROFILE: LINE RGB+W+W (Lin)

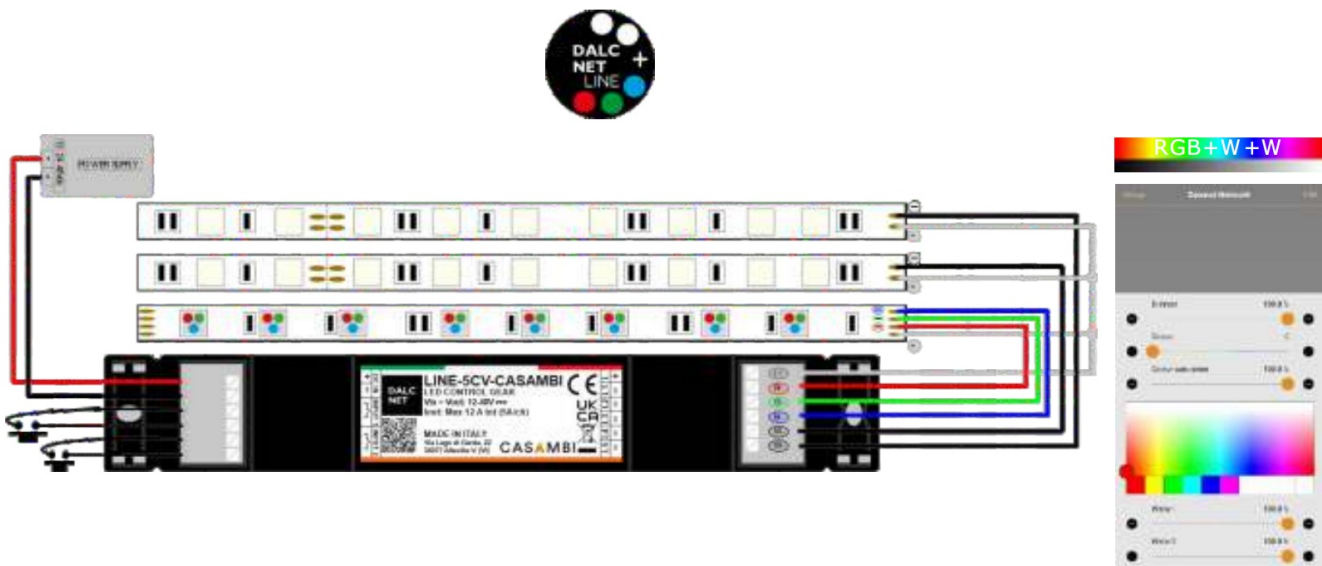

CONNECTION SCHEME PROFILE: LINE RGB+TW (Lin)

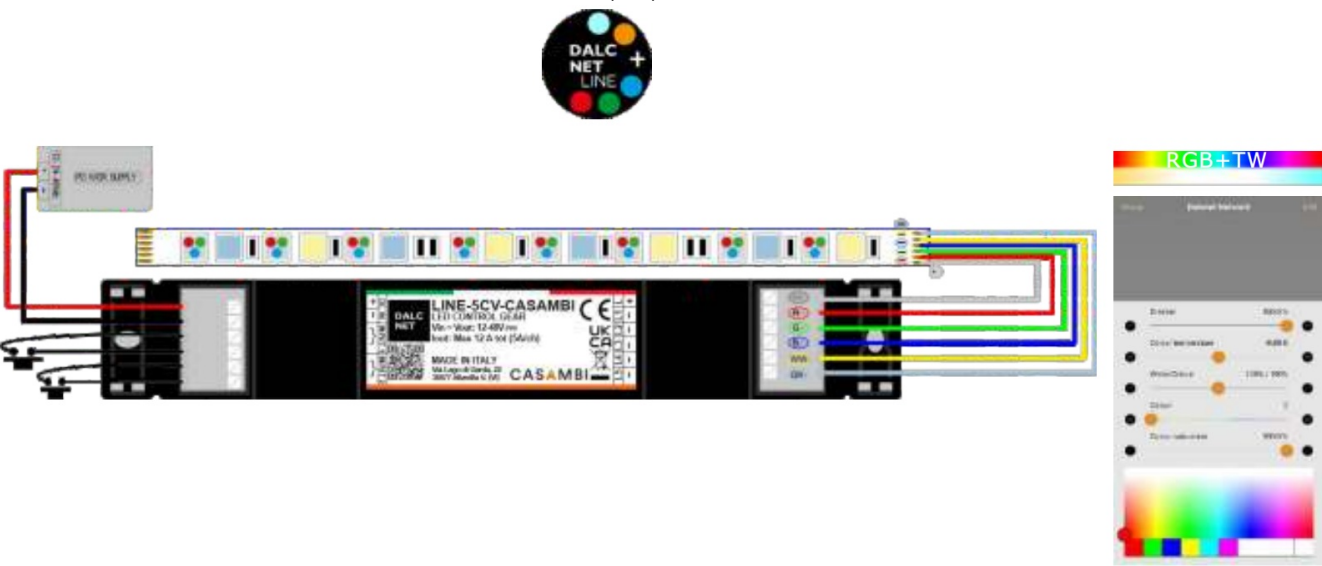

LOCAL COMMANDS FUNCTIONALITY

N.O. PUSH BUTTON 6

N° Button	Function		
1-2	Controls a luminaire	Click Long pressure (>1s)	Tap to turn a luminaire on or off – hold to adjust luminaire brightness
	Controls an element	Click Long pressure (>1s)	Tap to turn a device element on or off – hold to adjust the element value
	Control a group	Click Long pressure (>1s)	Tap to turn a group on or off – hold to adjust brightness
	Control scene	Click Long pressure (>1s)	Tap to turn a scene on or off – hold to adjust scene brightness
	Control all luminaires	Click Long pressure (>1s)	Tap to turn all luminaires on or off – hold to adjust brightness
	Cycles scenes	Click Long pressure (>1s)	Tap to cycle through the list of scenes – hold to adjust current scene brightness
	Active/Standby	Click Long pressure (>1s)	Tap to switch between two scenes – hold to adjust current scene brightness
For all other functions consult the documentation of the CASAMBI APP at: https://support.casambi.com/support/home			

UNPAIR DEVICE FROM THE CASAMBI NETWORK

If the device is already connected to a network for which you don't have the credentials and you wish to associate it with a new network, please follow the instructions provided in the Casambi APP's "Nearby Devices" section. Once you have selected the unpair function and started the procedure, turn off the main power of the power supply connected to the LINE-5CV-CASAMBI and turn it on again after 1 – 2 seconds.


If the main power supply is switched off and on again quickly, unpair may not be done properly. Repeat the unpair sequence by allowing 1 or 2 more seconds to elapse between the moment you turn off and re-turn on the main power of the power 7 .

A second method to unpair the product is to connect an N.O. push button to an "INPUT" terminal of the LINE-5CV CASAMBI and during the decoupling procedure press the button.

By default, the N.O. Push button is set as "Control a luminaire" and controls the output of the LINE-5CV-CASAMBI.

The discharge time of the power supply secondary depends on the construction characteristics of the power supply used.

OPERATING WINDOW

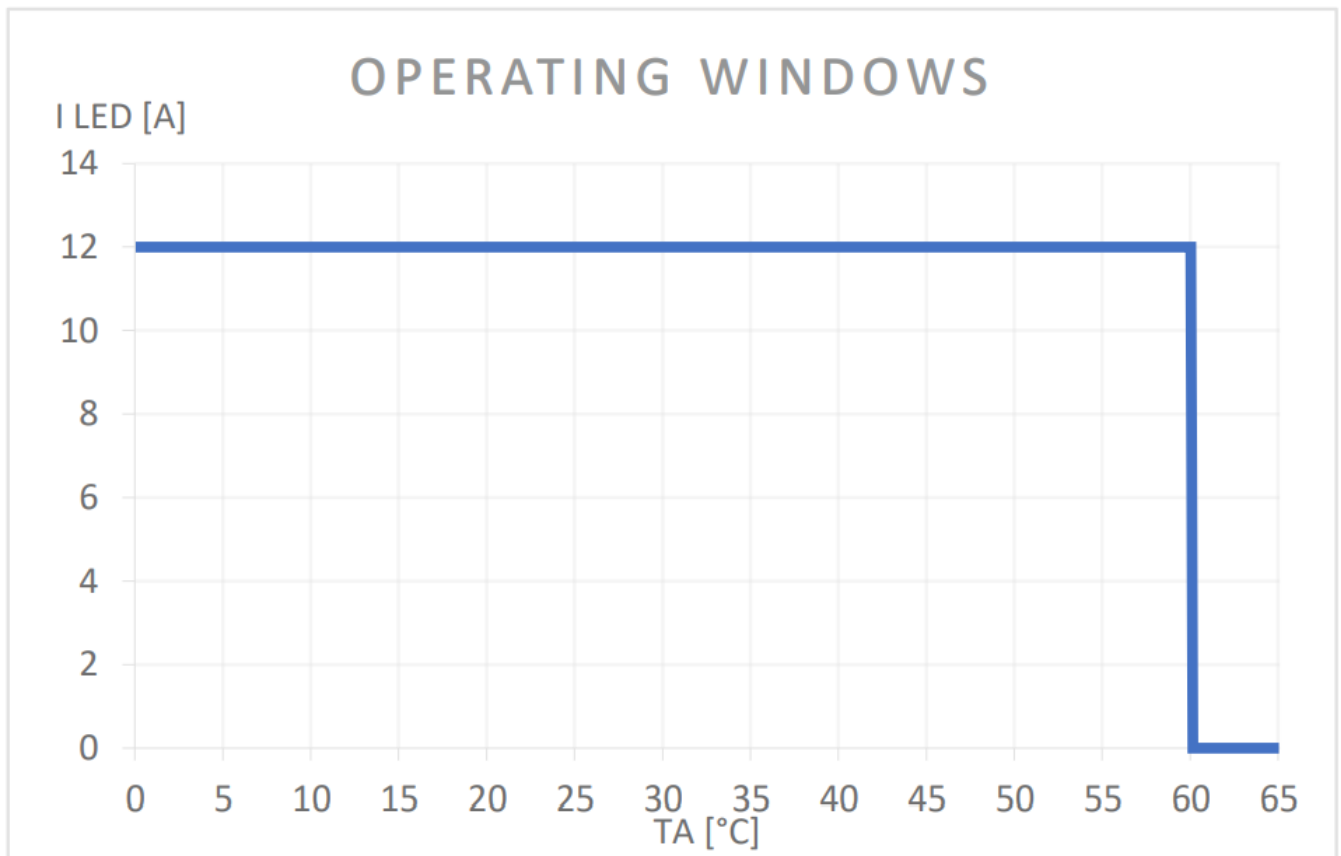

Ambient temperature [T_A]:

– provides a current up to 12A, with a working temperature range of $-10^{\circ}\text{C} \div +60^{\circ}\text{C}$.


These maximum current values can be applied only under proper ventilation conditions.

FLICKER PERFORMANCE


Thanks to its 4kHz dimming frequency, the LINE-5CVCASAMBI effectively reduces the occurrence of the Flicker phenomenon. Depending on an individual's sensitivity and the nature of their activities, flickering can impact one's well-being, even if the changes in luminance are beyond the threshold detectable by the human eye.

The graph shows the phenomenon of Flickering in function at the frequency, measured throughout the dimming range.


The results show the low-risk zone (yellow) and the noeffect zone (green). Defined by IEEE 1789-20158

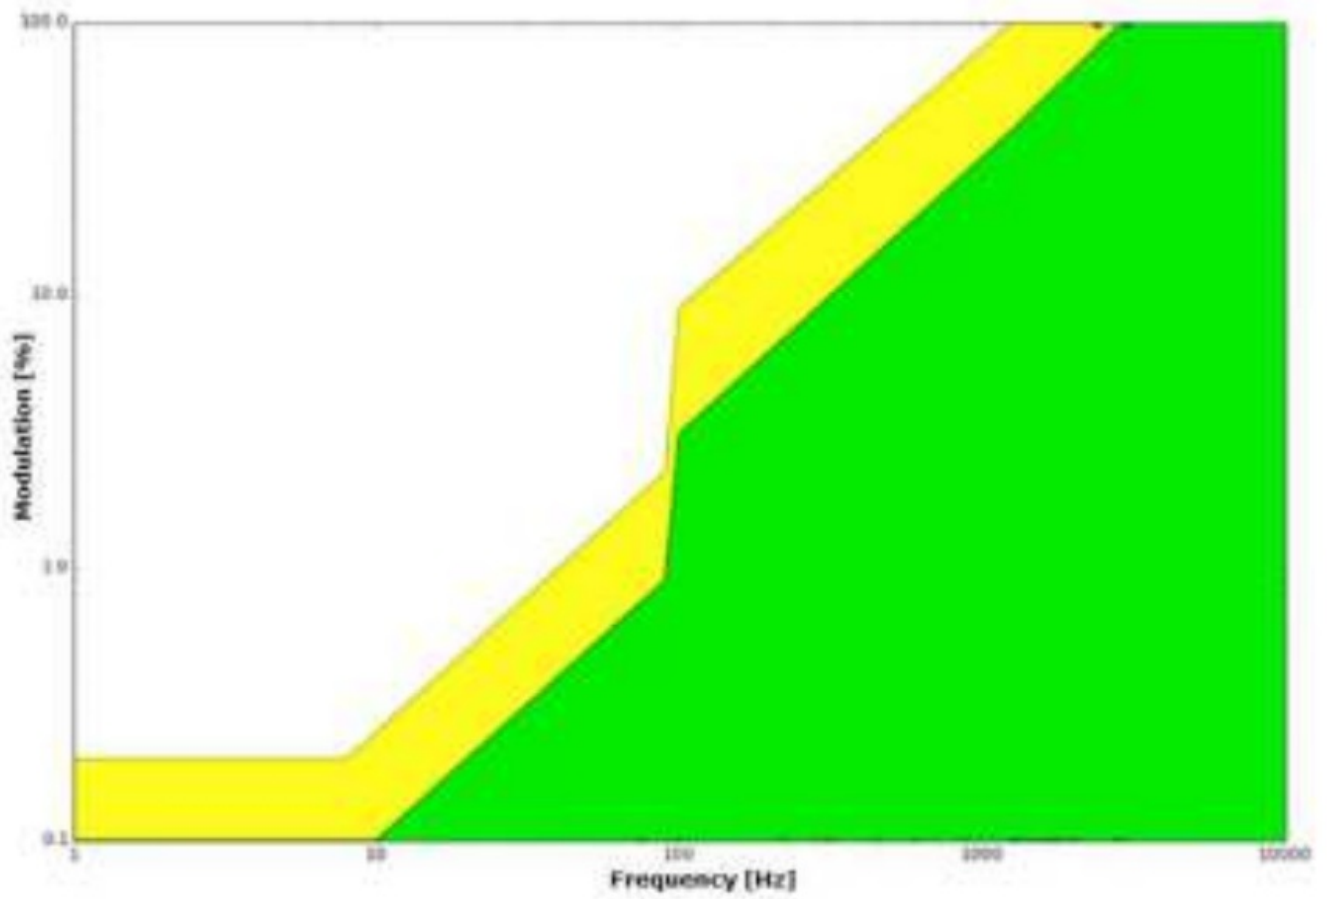

DIMMING CURVE

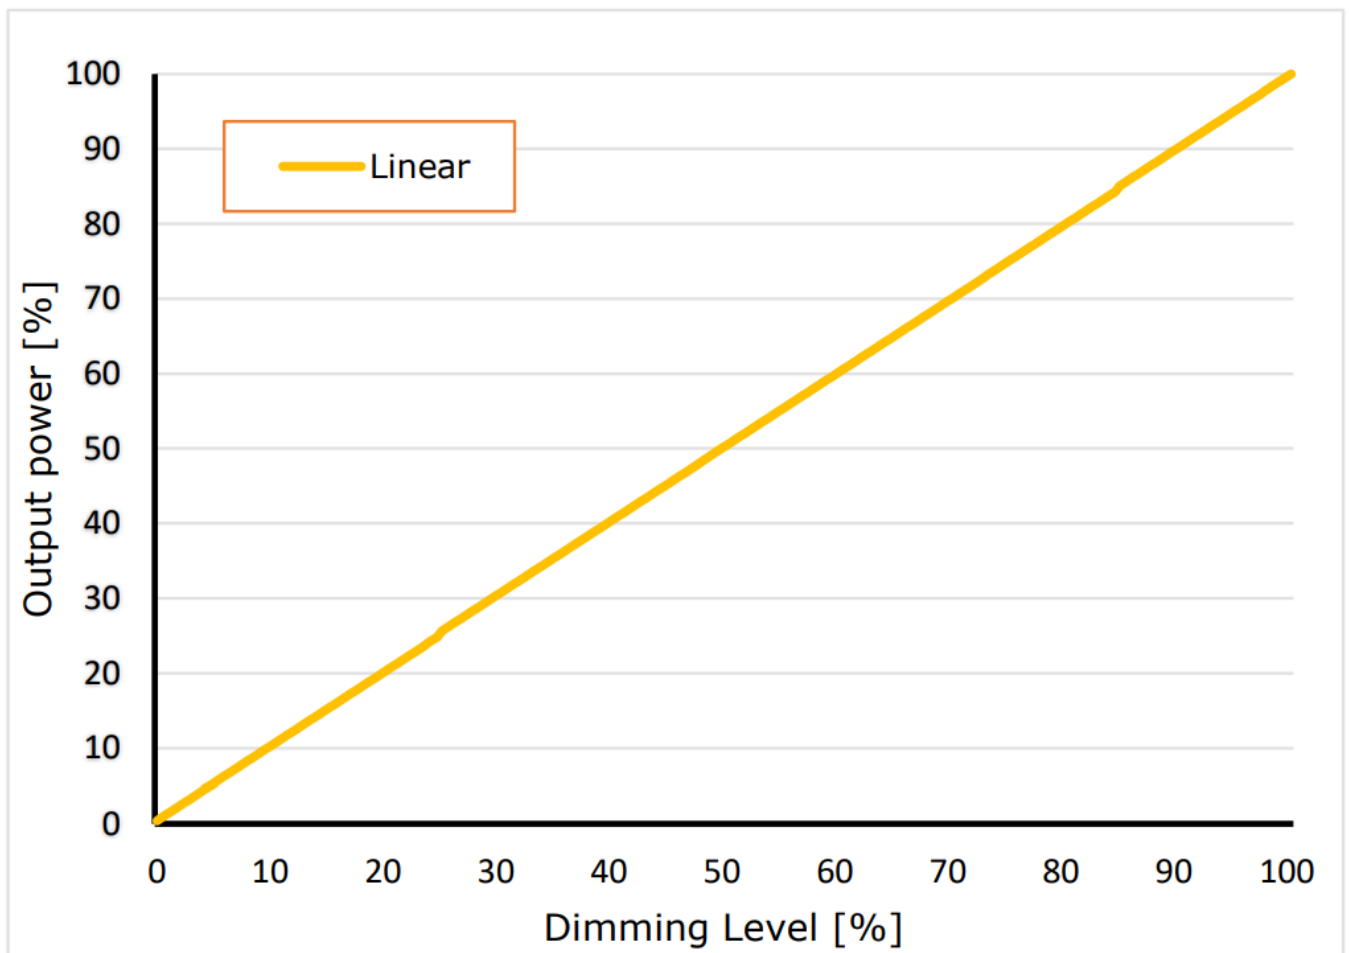

MECHANICAL DIMENSIONS

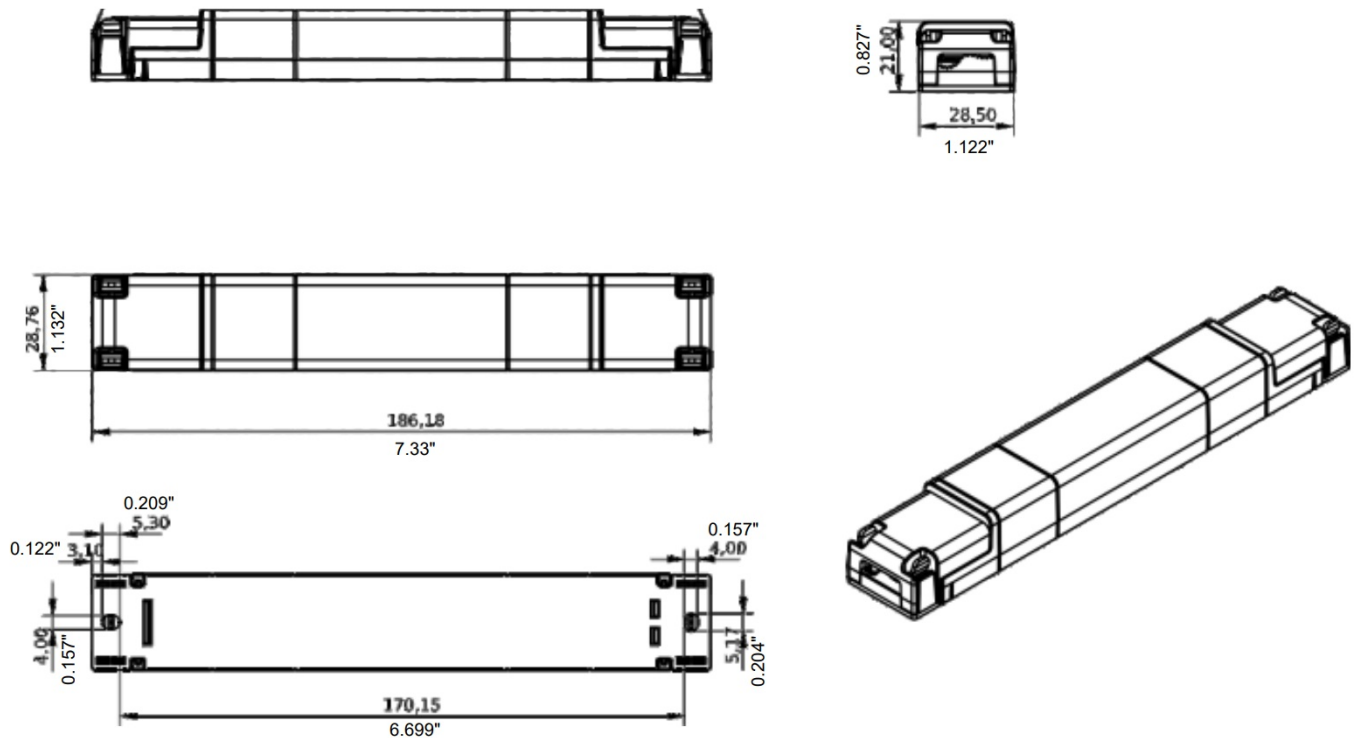

TECHNICAL NOTE

INSTALLATION


- **CAUTION:** The product may only be connected and installed by a qualified electrician. All applicable regulations, legislation, and building codes must be observed. Incorrect installation of the product can cause irreparable damage to the product and the connected LEDs.
- Maintenance must be performed only by a qualified electrician in compliance with current regulations. Pay attention when connecting the LEDs: polarity reversal results in no light output and often damages the LEDs.
- The product is designed and intended to operate LED loads only. Powering non-LED loads may push the product outside its specified design limits and is, therefore, not covered by any warranty. Operating conditions of the product may never exceed the specifications as per the product datasheet.
- The product must be installed inside a switchgear/controlgear cabinet and/or junction box protection against overvoltage.
- The product must be installed in a vertical or horizontal position with the label/top cover facing upwards or vertically. Other positions are not permitted. The bottom position is not permitted (label/top cover facing down).
- Keep separated 230Vac (LV) circuits and not SELV circuit from safety extra low voltage (SELV) circuit and from any connection with this product. It is absolutely forbidden to connect, for any reason whatsoever, directly or indirectly, the 230Vac mains voltage to the product (terminal block of BUS included).
- The product must be dissipated correctly.
- The use of the product in harsh environments could limit the output power.
- For built-in components inside luminaires, the t_a ambient temperature range is a guideline given for the optimum operating environment. However, integrator must always ensure proper thermal management (i.e.

correct mounting of the device, air flow etc.) so that the touch point temperature does not exceed the touch maximum limit in any circumstance. Reliable operation and lifetime is only guaranteed if the maximum touch point temperature is not exceeded under the conditions of use.

POWER SUPPLY

- Only use SELV power supplies with limited current for device power supply, short circuit protection and the power must be dimensioned correctly.
In the case of power supplies equipped with ground terminals, it is mandatory to connect ALL protective ground points (PE= Protection Earth) to a properly and certified protection earth.
- The connection cables between the very low voltage power source and the product must be properly dimensioned and must be insulated from any wiring or part at non-SELV voltage. Use double insulated cables.
- Dimension the power of the power supply in relation to the load connected to the device. In case the power supply is oversized compared to the maximum absorbed current, insert a protection against over-current between the power supply and the device.

COMMAND

- The length of the cables connecting between the local commands (N.O. Push button or other) and the product must be less than 10m. The cables must be properly dimensioned and must be insulated from any non-SELV wiring or voltage. It is recommended to use double insulated cables, if deemed appropriate also shielded.
- ALL device and control signal connected to the local command "N.O. Push button" with  symbol, they must not supply any type of voltage.

OUTPUTS

- It is recommended a length of the connecting cables between the product and the LED module less than 10m. The cables must be properly dimensioned and must be insulated from any wiring or circuits at voltage not SELV. It is recommended to use double insulated cables. In case you want to use connecting cables between the product and the LED module greater than 10m, the installer must guarantee the correct operation of the system. In any case, the connection between the product and the LED module must not exceed 30m.

ONLY CASAMBI/BLEETOOTH PRODUCT

- **WARNING:** For optimal functionality of the Casambi signal, do not put the device into metal or aluminium boxes and do not shield the device. As any other Casambi product, should not be placed in a metal enclosure or next to large metal structures. Metal will effectively block all radio signals which are crucial to the operation of the product.

WARNINGS

- To guarantee the best performances and the full use of functions, make sure to download on your device the last release of CASAMBI APP.
- Whenever CASAMBI APP requires an upgrade of the profile installed in the LED Dimmers, follow the

instruction to do it. This allows you to stay always up to date and benefit of new functions released.

- Functionality test are done on all dimmers to ensure the right working. In case the device is still paired to “Dalcnet network”, you are asked to unpair it by following the instructions on CASAMBI APP and in paragraph “UNPAIR DEVICE FROM THE CASAMBI NETWORK”.

Customer Support

DISTRIBUTED BY
Wired 4 Signs USA
+1 (865) 339 4956
info@w4susa.com


CASAMBI



Documents / Resources

	<p>CASAMBI LINE 5CV 5 Channel Output Dimmer LED [pdf] User Manual LINE 5CV 5 Channel Output Dimmer LED, LINE 5CV, 5 Channel Output Dimmer LED, Output D immer LED, Dimmer LED, LED</p>
--	---

References

-  [Led dimmer and RGB controller for professional lighting systems](#)
-  [Wired4Signs USA - Architectural and Signage LED Lighting Specialists](#)
-  [Support : Casambi Support](#)