



CASIO 10B Plus 7L Smart Watch User Manual

[Home](#) » [Casio](#) » CASIO 10B Plus 7L Smart Watch User Manual 

 
CASIO 10B Plus 7L Smart Watch User Manual



Contents

- [1 Reading the display](#)
- [2 Setting daily alarm](#)
- [3 Setting time and calendar](#)
- [4 Stopwatch operation](#)
- [5 Specifications](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)


Reading the display

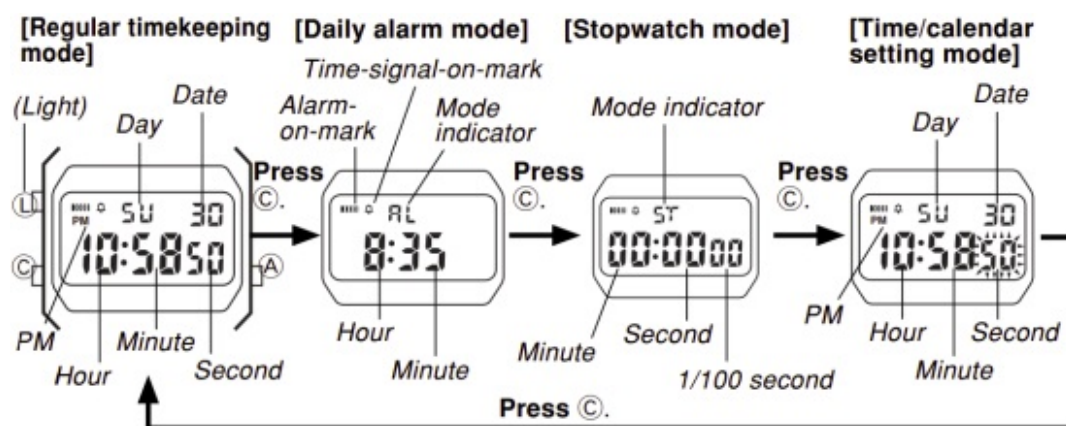

SU: Sunday, MO: Monday, TU: Tuesday, WE: Wednesday, TH: Thursday, FR: Friday, SA: Saturday (Changeover between 12-hour and 24-hour formats) In regular timekeeping mode, with every push of A, the display is switched between 12-hour and 24-hour formats.

Setting daily alarm

 
If the daily alarm is set, the buzzer sounds for 20 seconds at the preset time every day until cleared. To stop the buzzer, press the L button. If the time signal is set, the watch sounds every hour on the hour. (Sound demonstration) Press and hold the A button in alarm mode to sound the buzzer.

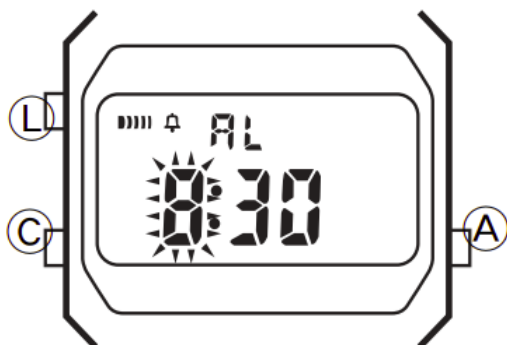

[Hour setting]

Press L in the daily alarm mode to set hour. One hour advances with every push of A.

 [Minute setting]

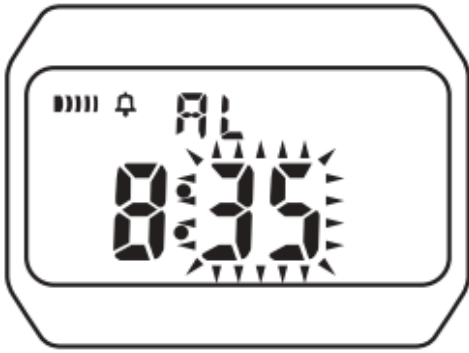

Press L to set minute digits.

 
One minute advances with every push of A. Press L to complete.*

**If the C button is pressed, the watch reverts to the regular timekeeping mode.*

(Quick digit advance) When the A button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.

[On or off setting of daily alarm and time signal]

[The alarm-onmark and timesignal-on-mark appear.] [The alarm-onmark and timesignal-on-mark disappear.] [The alarm-on-mark only appears.] [The time-signal-on-mark only appears.]

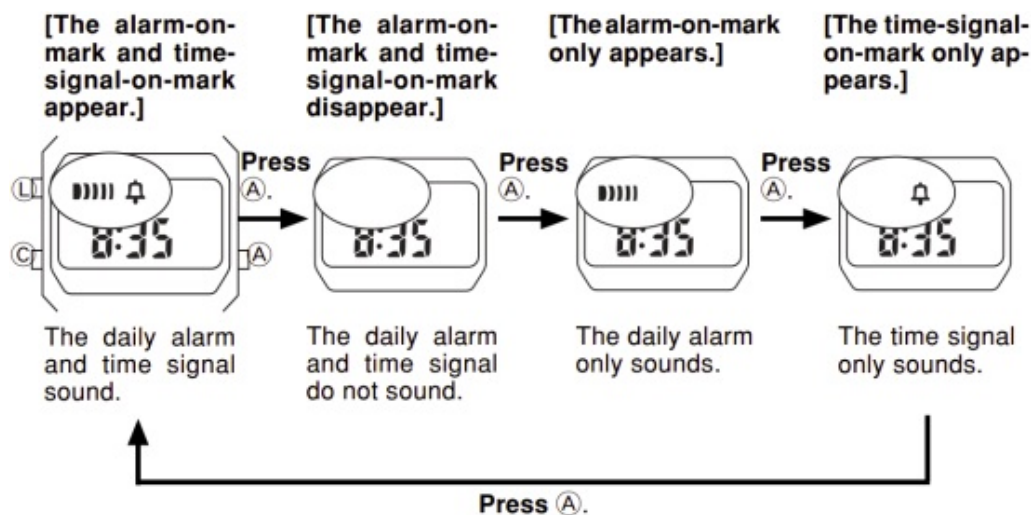


Setting time and calendar

[Regular timekeeping]



Press C three times to change regular timekeeping mode to time/calendar setting mode.

 [Second adjusting]

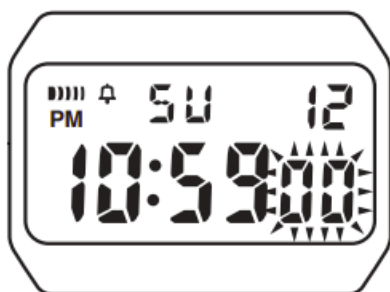


Press A to adjust seconds.*

[Hour setting]



Press L to move to the hour setting.
Press A to increase the number.

 [Minute setting]

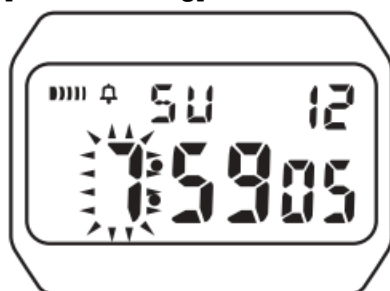

Press L to move to the minute setting.
Press A to increase the number.

**Precise time can be maintained by correcting the seconds once a month on a time signal from a radio, TV, telephone, etc.*

(Quick digit advance) When the A button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.

 
IMPORTANT: Setting sequence *MUST BE FOLLOWED* when making any new setting.

[Month setting]




Press L to move to the month setting. Press A to increase the number.

[Date setting]

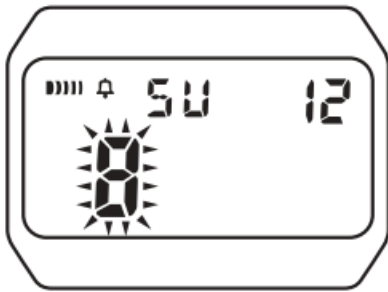

Press L to move to the date setting. Press A to increase the number.

 [Day setting]

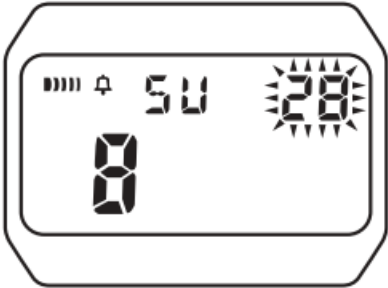

Press L to move to the day setting. Pressing A advances to the next day. And press C to complete.

- Correction of any digit, if not required, can be skipped by pressing the L button repeatedly.
- If you do not operate any button for a few minutes while a selection is flashing, the flashing stops and the watch goes back to the regular timekeeping mode automatically.

Stopwatch operation



A signal confirms start/stop operation.

(Working range) The stopwatch display is limited to 59 minutes 59.99 seconds, for longer times reset and start C again.

(a) Net time measurement



A 
Stop

L
Reset

(b) Split time measurement

A 
Start

L 
Split


L 
Split release


A 
Stop


L
Reset

(c) 1st-2nd place times

A 
Start

L 
Split
The first runner finishes.

A 
Stop
The second runner finishes. Record the time of the first runner.

L 
Split release
Record the time of the second runner.

L
Reset

Specifications

Accuracy at normal temperature: ± 30 seconds a month

Display capacity:

- Regular timekeeping mode Hour, minute, second, am/pm, date and day

Calendar system: Auto-calendar set at 28 days for February

- Daily alarm mode
- Hourly time signal function
- Stopwatch mode

Measuring capacity: 59 minutes 59.99 seconds

Measuring unit: 1/100th of a second

Measuring modes: Normal time, net time, split time and 1st-2nd place times


Battery:

One lithium battery (type: CR-2016-except Module 1271/BR-2020 – Module 1271 only) Approx. 7 years operation on type CR-2016 (except Module 1271) /10 years on type BR-2020 (Module 1271 only). [assuming alarm operation for 20 sec./day and one light operation for 1 sec./day]


NOTE: THERE IS NO WAY unit components can be damaged or malfunction, due to maloperation of buttons. If confusing information appears on the display it means entry sequence was incorrect. Please read the manual and try again.



Documents / Resources

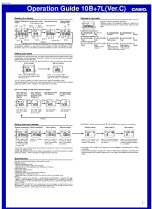	<p>CASIO 10B Plus 7L Smart Watch [pdf] User Manual 10B_7L VerC, MA1211-ED, 10B Plus 7L Smart Watch, 10B Plus 7L, Smart Watch, Watch</p>
---	---

References

-  [One moment, please...](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.