



# Casio Illuminator Manual: Learn to Adjust Time & Features | Model 5416

[Home](#) » [Casio](#) » **Casio Illuminator Manual: Learn to Adjust Time & Features | Model 5416** 

This user guide is designed to help users of the Casio Illuminator watch model 5416 to adjust the time and features of their watch. The guide covers various aspects of the watch, including how to configure digital time settings, select modes, adjust analog hand settings, and use the illumination feature. Additionally, the guide provides information on the watch's specifications, battery life, and water resistance. Users can also find answers to frequently asked questions about the watch, such as how to set daylight saving time, how to adjust the analog hands to match the digital time, and how to claim the Casio warranty. This guide is an essential resource for anyone who owns a Casio Illuminator watch and wants to make the most of its features.

## Contents

- [1 CASIO Watch](#)
- [2 Configuring Digital Time Setting](#)
- [3 Mode Selection and Operations](#)
  - [3.1 Calendar Mode](#)
  - [3.2 Timekeeping Mode](#)
  - [3.3 Alarm Mode](#)
  - [3.4 Stopwatch Mode](#)
  - [3.5 Dual Time Mode](#)
- [4 Adjusting the Analog Hand Setting](#)
- [5 Specifications](#)
- [6 DOWNLOAD RESOURCES](#)
- [7 FAQ'S](#)
- [8 VIDEO](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

# CASIO®

 


CASIO Watch

### Configuring Digital Time Setting



- In the Timekeeping Mode, hold down B for at least two seconds until the second start to This is the setting mode.
- Press B to move the flashing in the sequence shown below to select settings.

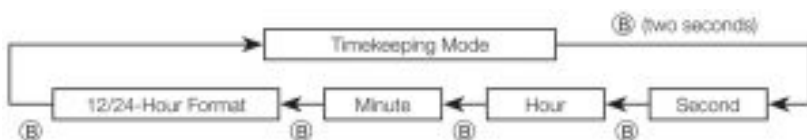


Use to change the selected setting.

Screen	To do This:
36	Reset the second to <b>00</b>
P 10:08	Change the hour or minute
12:14	Toggle between 12-hour ( <b>12H</b> ) and 24-hour ( <b>24H</b> ) timekeeping

Mode Selection and Operations

 - Press to cycle between modes.

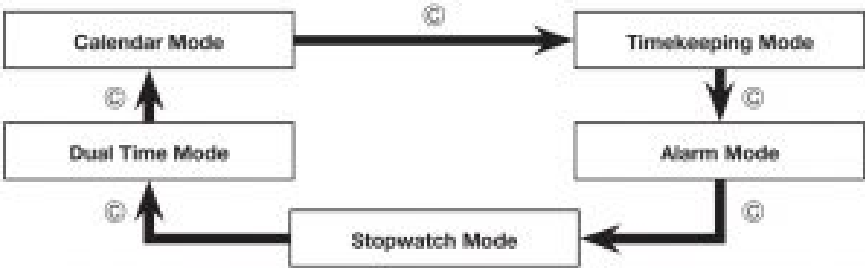


Calendar Mode

- B: (two seconds): Enters date setting Mode.  
B: Selects year, month or day.  
: Changes selected setting.  
B: Exits setting mode.



 Timekeeping Mode

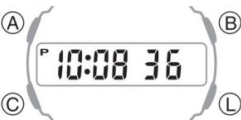


## Alarm Mode

- B (two seconds): Enters alarm time setting mode.


B: Selects hour or minute.

: Changes selected setting.

 B: Exits setting mode

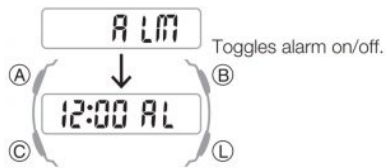

## Stopwatch Mode

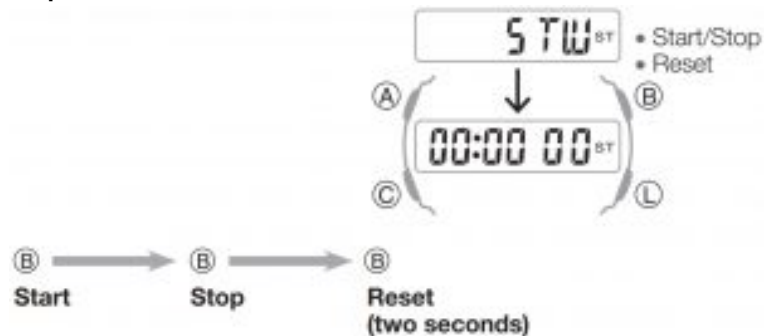 

## Dual Time Mode

- B (two seconds): Enters dual time setting mode.

B: Selects hour or minute.

: Changes selected setting.

B: Exits setting mode.



## Light

: Illuminates face

## Adjusting the Analog Hand Setting

Use the operations below to adjust the analog hands so their setting matches the digital time in the Timekeeping Mode.

- A (in any mode): Advances minute hand 20



## Specifications

- **Accuracy at normal temperature:**  $\pm 15$  seconds a month
- **Calendar:** Month, day, day of the week Calendar system: Full Auto-calendar pre-programmed from the year 2000 to 2099
- **Digital Timekeeping:** Hour, minute, second, p.m. (P) Time format: 12-hour and 24-hour
- **Time Format:** 12-hour and 24-hour
- **Analog Timekeeping:** Hour, minute (hand moves every 20 seconds)
- **Alarm:** Setting units: Hour, minute Beeper: 20 seconds
- **Stopwatch:** Measuring unit: 1/100 second (1 second after 1 hour) Measuring capacity: 23:59'59"
- **Measuring mode:** Elapsed time
- **Dual Time:** Hour, minute, second
- **Illumination:** EL (electro-luminescent) backlight
- **Battery:** One lithium battery (Type: CR2016) Approximately 7 years on type CR2016 (assuming alarm operation 20 seconds per day and one illumination operation 2 seconds per day) Frequent use of illumination runs down the battery. Specifications are subject to change without notice.
- **Water resistance:** Most models are water resistant up to 200 meters (that's 656.168 feet). For the amphibious among us, this collection of waterproof digital watches is for you.



## DOWNLOAD RESOURCES

- [CASIO CASIO Watch](#) [pdf] User Guide CASIO, 5416, Watch
- Read more: <https://manuals.plus/casio/casio-watch-manual#ixzz7kRoLGeu6>

## FAQ'S

### Why does the time on my watch sometimes change by a few minutes?

The watch may be affected by the difference between the time standard set in the Timekeeping Mode and the time standard used in your area. To correct this, set the Timekeeping Mode to match your local time standard.

## **Why does my watch sometimes switch between 12-hour and 24-hour timekeeping?**

The watch uses 12-hour timekeeping by default. To change to 24-hour timekeeping, press **Mode** in any mode to cycle through modes until "24H" appears on the screen. Press **Mode** again to toggle between 12-hour and 24-hour timekeeping.

## **How do I set daylight saving time?**

In Timekeeping Mode, press **B** for at least two seconds until "DST" appears on the screen. Press **B** to toggle daylight saving time on or off.

## **How do I adjust the analog hands so they match the digital time?**

In Timekeeping Mode, press **A** for at least two seconds until "HANDS" appears on the screen. Press **B** to advance or reverse the minute hand 20 seconds at a time. Press **Mode** to advance or reverse the hour hand 10 minutes at a time. Press **A** again when you have finished adjusting both hands.

## **How do you set a Casio 5146 watch?**

Until you see the current city flashing on the top screen use the two buttons on the right side of the watch the forward and reverse buttons to choose your current city.

## **How do you reset a 4 button watch?**

Press and hold mode for about 2 seconds and then release.  
Press mode once more and now you are in time edit mode.  
Use the stop button to select what to edit, i.e. hour minute, etc.  
Use the reset button to make the changes once you have selected the hour/minute, etc.  
Press mode to stop Good Luck.

## **Is Casio watch water resistant?**

Most models are water resistant up to 200 meters (that's 656.168 feet). For the amphibious among us, this collection of waterproof digital watches is for you.

## **What are the features of Casio watch?**

Display type. Digital Analog Digital and analog.  
Band. Stainless steel Resin Genuine leather Synthetic leather.  
Water resistance function. Water resistance up to 20 bar Water resistance up to 10 bar Water resistance up to 5 bar Day-to-day water resistance.

## **Why are my watch not working?**

Chances are, your battery is dead or something has made the hands stick. To fix these problems replace the battery and if that didn't work, you'll need to clean the watch hands.

## **How do I open the back of my Casio watch?**

Use it like a lever to pop the back open gently push the handle away from the watch back the back will pop loose. And you will be able to remove it with your fingers.

## **How do I claim my Casio warranty?**

To avail these benefits, all you need to do is approach our Authorized Service Center with the Warranty Card bearing the Barcoded Serial Number duly filled and stamped along with the Original Purchase Invoice of your watch.




## **How do I know if my Casio battery is low?**

If the numbers on the LCD display are dimming, even with the backlight switched to on.  
If the lights temporarily vanish when the backlight is on, only to reappear again when the backlight is switched to off.



CASIO Watch  
[www://casio.co.uk/](http://www.casio.co.uk/)

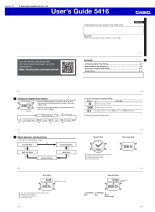Documents / Resources

	<a href="#">CASIO CASIO Watch</a> [pdf] User Guide CASIO, 5416, Watch
	<a href="#">CASIO Casio Watch</a> [pdf] User Guide 3490 Casio, M02004-EA Casio, Casio Watch
	<a href="#">CASIO CASIO Watch</a> [pdf] User Guide CASIO, Watch, QW-5662

References

- [C Timepieces \(Watches\) - Manual - CASIO Worldwide](#)