

CASIO®
CT-S1 Keyboard
in Black
Andertons Music



CASIO CT-S1 Keyboard in Black Andertons Music User Guide

[Home](#) » [Casio](#) » CASIO CT-S1 Keyboard in Black Andertons Music User Guide 

Contents

- 1 [CASIO CT-S1 Keyboard in Black Andertons Music](#)
- 2 [Product Usage Instructions](#)
- 3 [Preparation](#)
- 4 [Practicing with the Metronome](#)
- 5 [Basic Operation](#)
- 6 [Selecting a Tone](#)
- 7 [Registering the Current Main Tone Setup to a Button \(Tone Memory\)](#)
- 8 [Playing with Two Layered Tones](#)
- 9 [Specifying the Battery Type](#)
- 10 [Returning Settings to Their Initial Factory Defaults \(Initialization\)](#)
- 11 [Playing with Touch Response](#)
- 12 [Playing with Sustain](#)
- 13 [Recording Your Performance](#)
- 14 [Using the Dedicated App \(CASIO MUSIC SPACE\)](#)
- 15 [Product Specifications](#)
- 16 [FAQ](#)
- 17 [Documents / Resources](#)
 - 17.1 [References](#)

CASIO®

CASIO CT-S1 Keyboard in Black Andertons Music



Specifications

- **Model:** CT-S1-76 / CT-S1
- **Power Supply:** AC Adaptor (included) or AA-size batteries
- **Keys:** CT-S1-76 (76 keys), CT-S1 (61 keys)
- **Auto Power Off:** 20 minutes (30 minutes for CT-S1)

Product Usage Instructions

Preparation: Preparing a Power Supply

Using the AC Adaptor

1. Connect the AC adaptor as shown in the illustration. Ensure to use the specified AC adaptor for the Digital Keyboard.

Using Batteries

1. For CT-S1-76: Insert 8 AA-size batteries; for CT-S1: Insert 6 AA-size batteries into the battery case.
2. For CT-S1-76, connect the power cord to the AC adaptor.

Practicing with the Metronome

Specify a beat value by holding down the respective keys for tempo setting.

Basic Operation: Selecting a Tone

1. Press the main tone buttons to select an instrument.
2. Select a variation using the TONE VARIATION button.

Touch Response

Key sensitivity: Press harder for louder sound, softer for softer sound.

Auto Power Off

The keyboard automatically turns off after 20 minutes of nonuse (switchable to 30 minutes for CT-S1).

Pedal

The pedal sustains notes played while depressed, releasing keys does not stop sustained notes until pedal

release.

Useful Functions

After reading this document, keep it in a safe place along with the warranty certificate. Be sure to read the “Safety Precautions” in the separate “READ THIS!” sheet, and use the product correctly.

Included Accessories

- AC adaptor
- AD-A12150LW (CT-S1-76) |
- Power cord (CT-S1-76 only)
- Music Stand
- AD-E95100L (CT-S1)
- Strap Lock (CT-S1 only)
- Leaflets
- READ THIS! Sheet
- Other (Warranty, etc.)

Items included as accessories are subject to change without notice.

Separately Available Accessories

You can get information about accessories that are separately available for this product from your retailer or from the CASIO website.

Please refer to the website below for more detailed operating instructions and product information, including the USER'S GUIDE, Dedicated App (CASIO MUSIC SPACE) download, Operating Precautions, etc.

- CT-S1-76: <https://support.casio.com/global/en/emi/manual/CT-S1-76/>
- CT-S1: <https://support.casio.com/global/en/emi/manual/CT-S1/>



Preparation

 
Preparing a Power Supply

Using the AC Adaptor


- Connect the AC adaptor as shown in the right illustration.
- Make sure that you use only the AC adaptor specified for this Digital Keyboard.

Using Batteries

1. Bottom of console
2. Insert AA-size batteries into the battery case (CT-S1-76: 8 batteries/CT-S1: 6 batteries).
- 3.

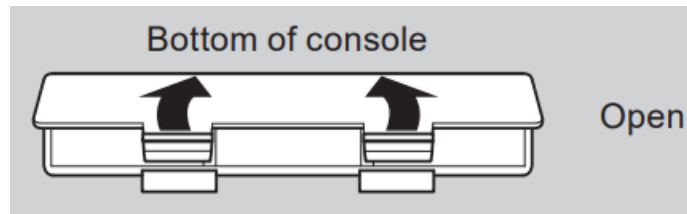

 
4. Specify the battery type. See “Specifying the Battery Type” on the reverse side of this sheet.

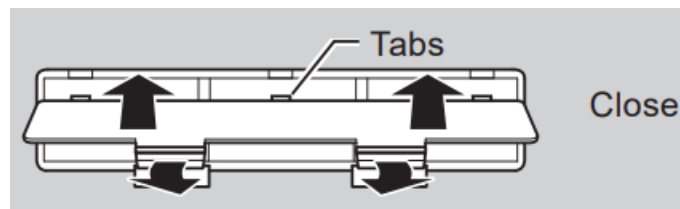

The illustration shows the CT-S1. The CT-S1 has 61 keys; the CT-S1-76 has 76 keys.

Computer, smartphone, etc. (commercially available)

 
Connect using a USB cable that is no more than two meters long. For the CT-S1-76, connect the power cord to the AC adaptor.

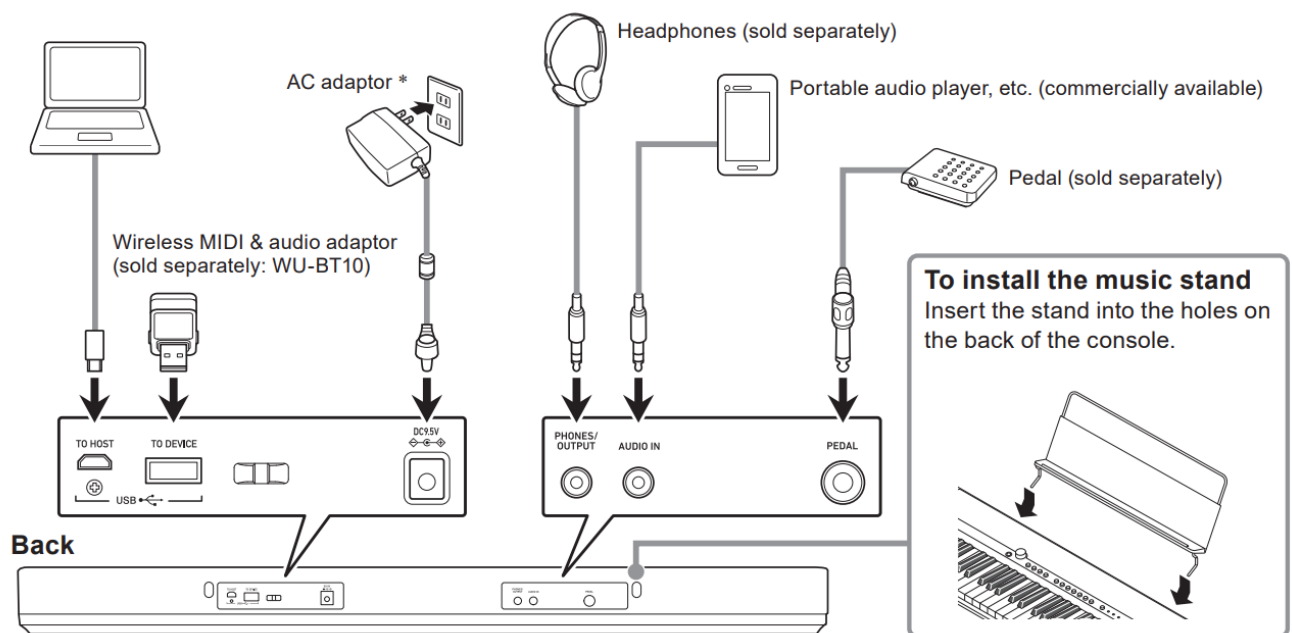


Practicing with the Metronome



 ② Specify a beat value.

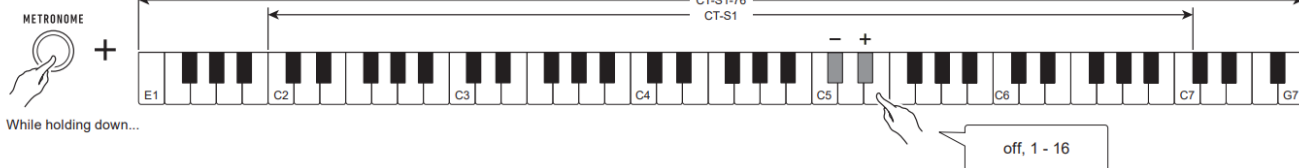


③ Specify the tempo.

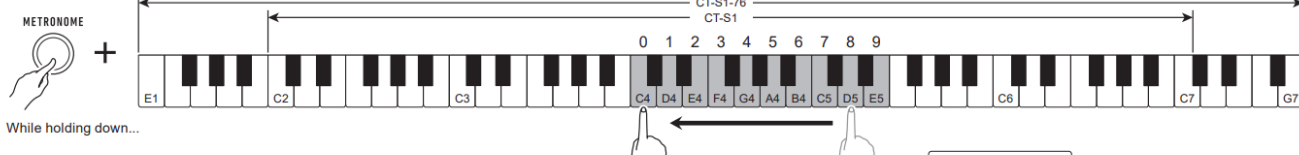 

Example: To set a tempo of 80, press 8 (D5) and then 0 (C4), and then release METRONOME.

 Basic Operation

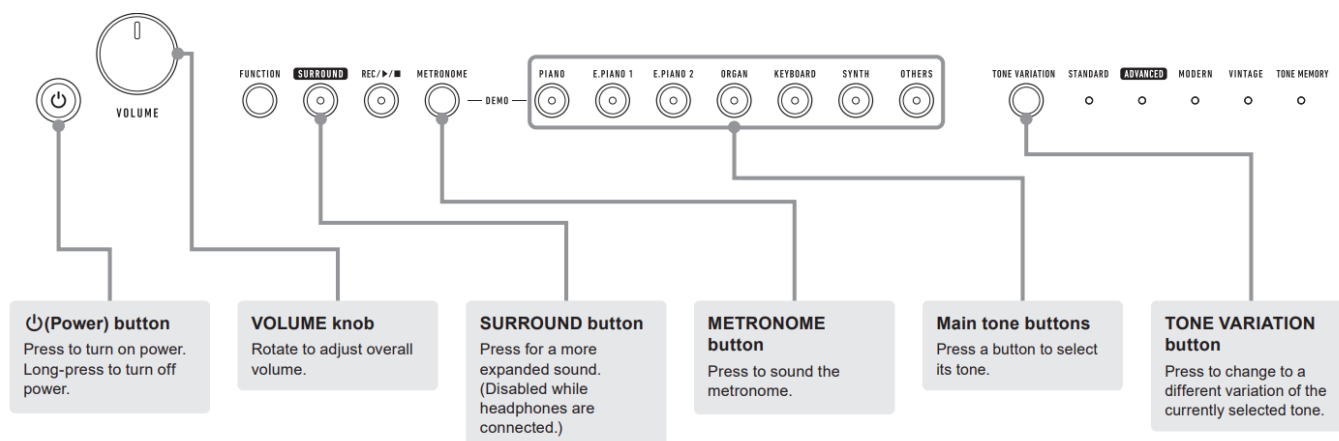

• Touch Response

Pressing a key harder produces louder sound, while a softer key press produces softer sound.

• Auto Power Off

 
Automatically turns off power after 20 minutes* of non-use. (On, Off switchable) * 30 minutes for the CT-S1

• Pedal


Sustains notes played while the pedal is depressed. Even if the keys played are released, notes are sustained as if the keys remain pressed, until the pedal is released.

Selecting a Tone

To use the main tones to select an instrument

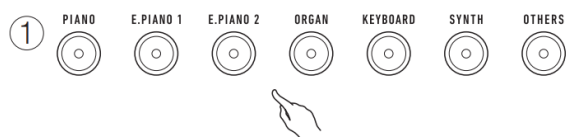


② Select a variation.

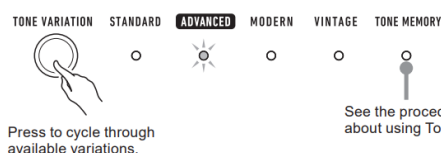 


See the procedure below for information about using Tone Memory.

 
To select a tone using the keyboard keys

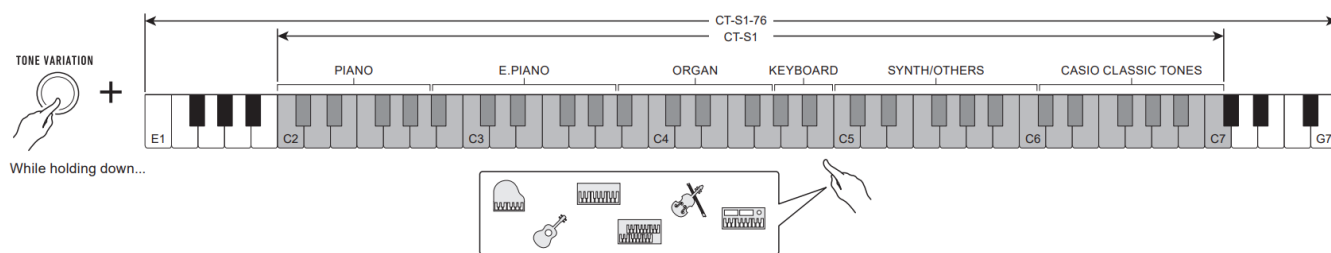

 
Registering the Current Main Tone Setup to a Button (Tone Memory)

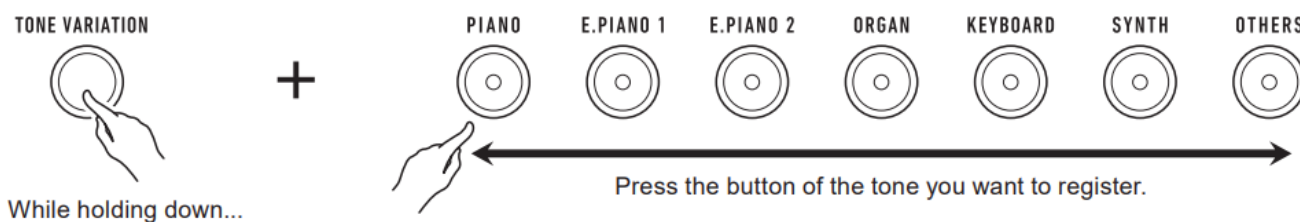


Playing with Two Layered Tones

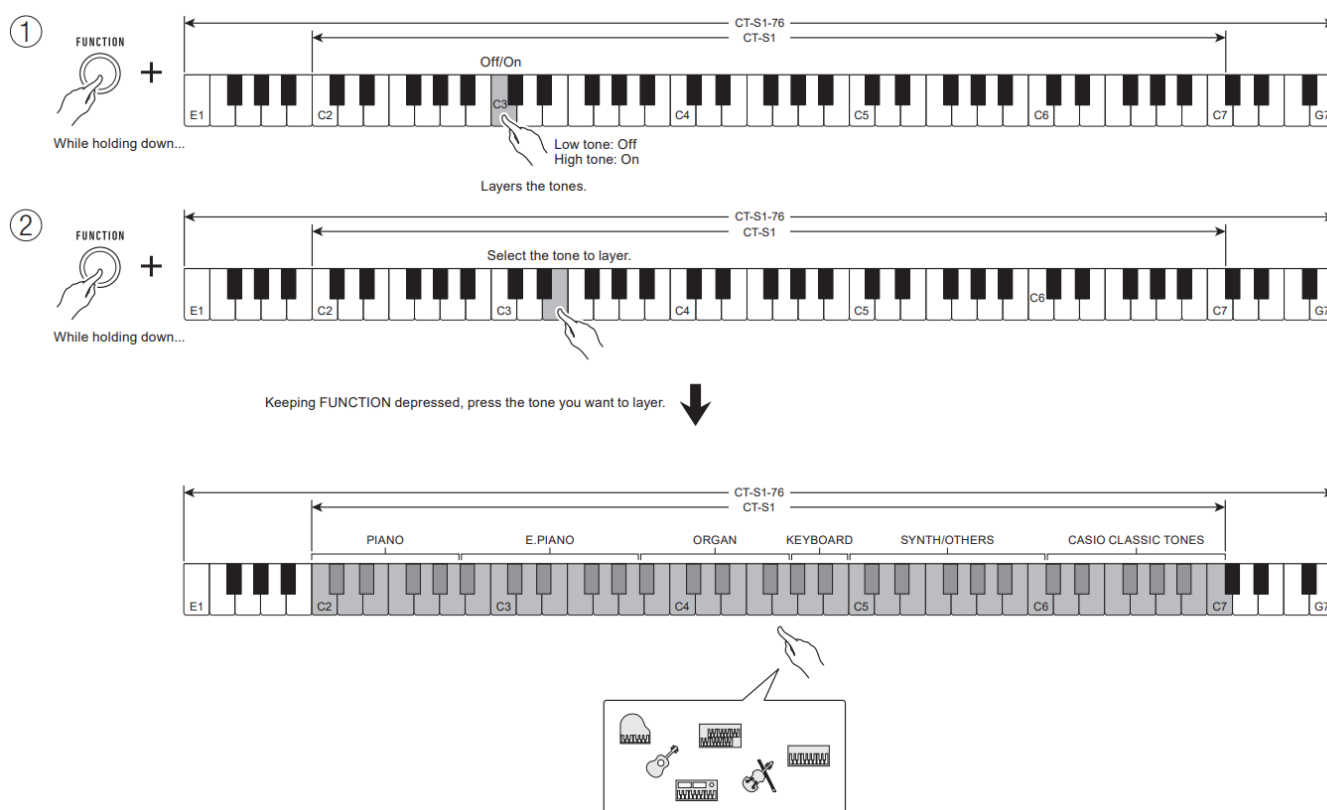 


Specifying the Battery Type

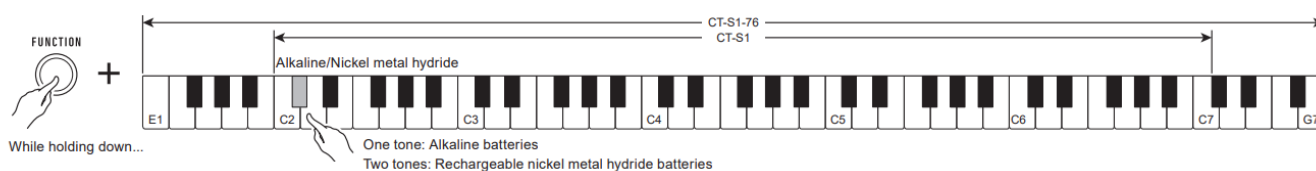 

 
Returning Settings to Their Initial Factory Defaults (Initialization)

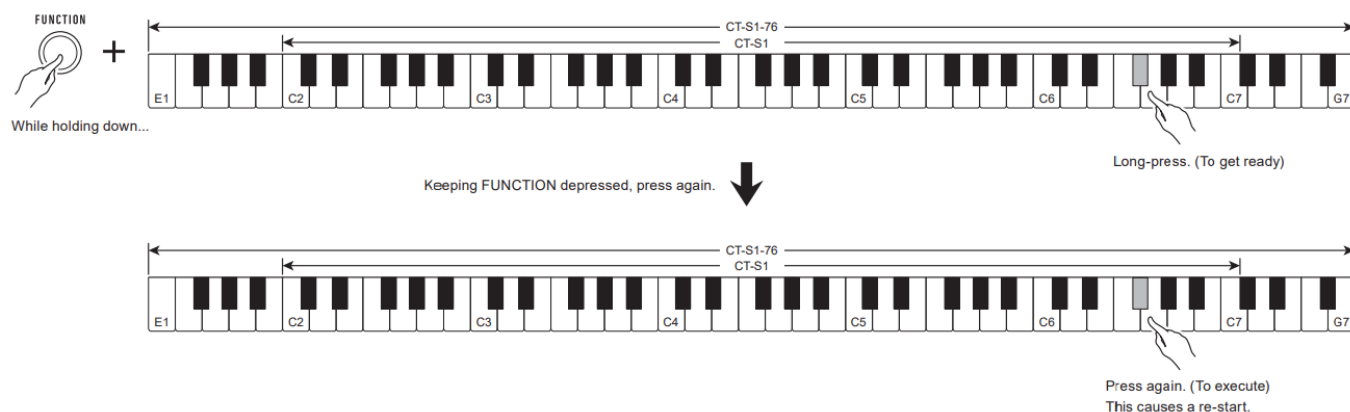


Playing with Touch Response

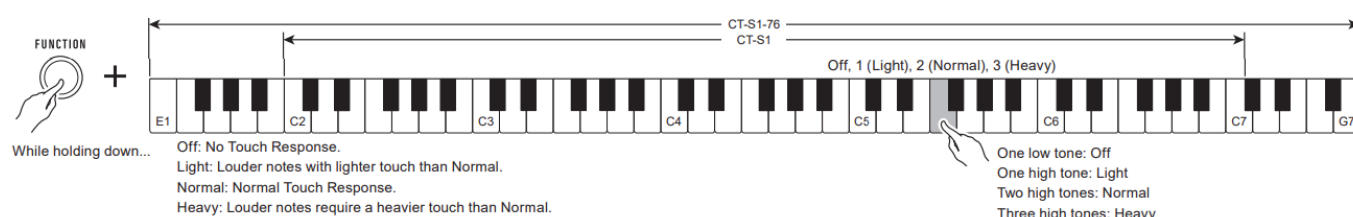 

Playing with Sustain

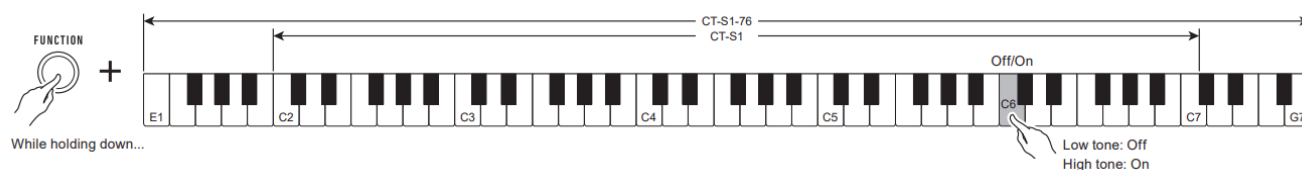 

Recording Your Performance

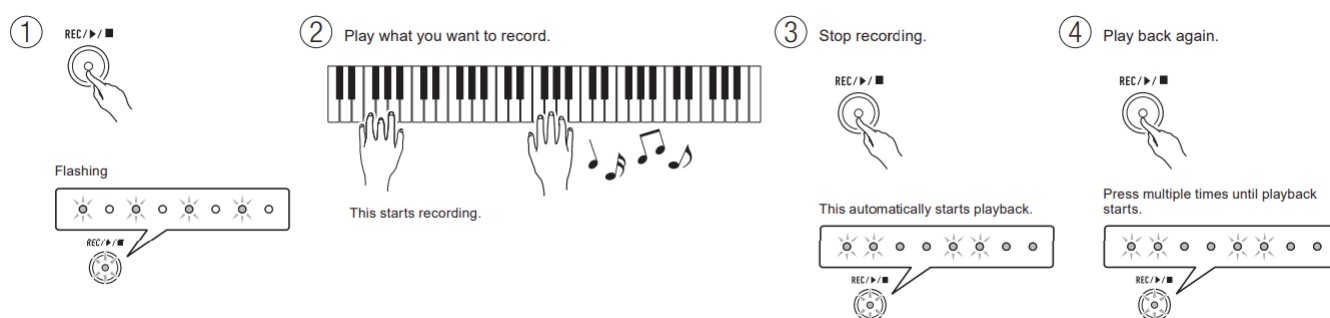 

Using the Dedicated App (CASIO MUSIC SPACE)

Enjoy a range of fun functions using the Digital Keyboard together with the CASIO MUSIC SPACE app. Please visit the “Downloads” section of our website. Only the CT-S1-76 is compatible with the Remote Controller, which allows remote control of functions and settings on the Digital Keyboard via an app. The WU-BT10 (sold separately) or a commercially available USB cable is required to connect the Digital Keyboard to a smart device.

Product Specifications

- **Model:** CT-S1-76BK/CT-S1-76WE

- **Keyboard:** 76 keys
- **Acoustics:** Amp output: 6.5W + 6.5W
- **Speakers:** 13cm x 6cm (oval) x 2
- **Power Supply:** 2-way power supply
- **Batteries:** 8 AA-size alkaline batteries or AA-size rechargeable nickel metal hydride batteries
- **AC Adaptor:** AD-A12150LW
- **Power consumption:** 12V ==- 10W
- **Dimensions:** 114.0(W) x 25.8(D) x 8.3(H) cm (44 7/8 x 10 3/16 x 3 1/4 inch)
- **Weight:** Approximately 5.3 kg (11.7 lbs) (Excluding batteries)
- **Model:** CT-S1BK/CT-S1WE/CT-S1RD
- **Keyboard:** 61 keys
- **Acoustics:** Amp output: 2.5W + 2.5W
- **Speakers:** 13cm x 6cm (oval) x 2
- **Power Supply:** 2-way power supply
- **Batteries:** 6 AA-size alkaline batteries or AA-size rechargeable nickel metal hydride batteries
- **AC Adaptor:** AD-E95100L
- **Power consumption:** 9.5V ==- 7.5W
- **Dimensions:** 93.0(W) x 25.8(D) x 8.3(H) cm (36 5/8 x 10 3/16 x 3 1/4 inch)
- **Weight:** Approximately 4.5 kg (9.9 lbs) (Excluding batteries)

Specifications and designs are subject to change without notice.

- Any reproduction of the contents of this manual, either in part or its entirety, is prohibited. Except for your own, personal use, any other use of the contents of this manual without the consent of CASIO is prohibited under copyright laws.
- IN NO EVENT SHALL CASIO BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, LOSS OF INFORMATION) ARISING OUT OF THE USE OF OR INABILITY TO USE THIS MANUAL OR PRODUCT, EVEN IF CASIO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
- The contents of this manual are subject to change without notice.
- Company and product names used in this manual may be registered trademarks of others.

Declaration of Conformity

- **Model Number:** CT-S1-76/CT-S1
- **Trade Name:** CASIO COMPUTER CO., LTD.
- **Responsible party:** CASIO AMERICA, INC.
- **Address:** 570 MT. PLEASANT AVENUE, DOVER, NEW JERSEY 07801
- **Telephone number:** [973-361-5400](tel:973-361-5400)

CFR 47 §2.938 (b)(2) Attestation

As of the date of first importation or marketing of this device, the device is not produced by any entity identified on the Covered List, established pursuant to 47 CFR § 1.50002, as producing covered communications equipment.

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation. A labels rating is affixed to the bottom of the product.

WARNING

If Auto Power Off is set to [Off], the Digital Keyboard does not automatically turn off and continues to use power.

CASIO COMPUTER CO., LTD.

6-2, Hon-machi 1-chome Shibuya-ku, Tokyo 151-8543, Japan

Published: 2/2024

MA2402-A Printed in China

© 2024 CASIO COMPUTER CO., LTD.

FAQ

 
Q: Where can I find more detailed operating instructions?

A: You can refer to the CASIO website for operating instructions, user guides, dedicated app downloads, and operating precautions.

Q: How do I change the battery type?

A: Refer to the reverse side of the sheet for instructions on specifying the battery type.

Documents / Resources

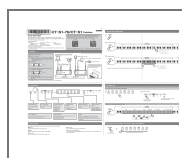

[CASIO CT-S1 Keyboard in Black Andertons Music](#) [pdf] User Guide

76, CT-S1, CTS1-76, CT-S1 Keyboard in Black Andertons Music, CT-S1, Keyboard in Black Andertons Music, Black Andertons Music, Andertons Music, Music

References

- [C CT-S1-76 - CASIO](#)
- [C CT-S1 - CASIO](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.