

CASIO HK-X Analog Watch User Guide

Home » Casio » CASIO HK-X Analog Watch User Guide

Contents

- 1 CASIO HK-X Analog Watch
- **2 Product Usage Instructions**
- **3 INTRODUCTION**
- **4 Usage Instructions**
- **5 Frequently Asked**

Questions

- 6 Documents / Resources
 - **6.1 References**
- **7 Related Posts**



CASIO HK-X Analog Watch



Product Specifications

• Model: MA0803-EA

• Operation Guide: ANALOG (HK-X)

• Supported Modules: 1362, 1398, 1770, 2799, 3378, 4370, 705, 706, 1300, 1311, 1330, 1344, 1360, 1399, 1747, 1771, 4394, 5049, 1782, 4328, 4747, 707, 708, 1331, 1332, 1342, 1345, 1346, 1787, 2717, 2718, 2719, 2725, 2731, 2748, 2749, 2783, 2784, 3363, 3711, 3712, 4393, 5025, 5044, 5058, 4746, 709, 1333, 1347, 3716

Product Usage Instructions

Crown Operation (Modules: 705, 706, 1300, 1311, 1330, 1344,...)

- 1. When the second hand is at noon, pull out the crown to stop it.
- 2. Set the hands by rotating the crown. Move the minute hand past the setting you want and then back it up to the setting.
- 3. Push the crown back in on a time signal to resume timekeeping.

Crown Operation (Modules: 707, 708, 1331, 1332, ...)

- 1. When the second hand is at noon, pull out the crown to the second click to stop it.
- 2. Set the hands by rotating the crown. Move the minute hand past the setting you want and then back it up to the setting.
- 3. Push the crown back in on a time signal to resume timekeeping.
- 4. Pull out the crown to the first click to set the day by rotating it. Push back into normal position.
- 5. Pull out the crown to the second click to set the day and day of the week by rotating it. Confirm language selection and push back in.

Elapsed Time Bezel Operation

- 1. Rotate the elapsed time bezel to align the mark with the minute hand.
- 2. After a certain amount of time has elapsed, read the graduation on the bezel where the minute hand points to for elapsed time indication.


INTRODUCTION

- Your watch may differ somewhat from the one shown in the illustration.
- [Modules 1362, 1398, 1770, 2799, 3378, 4370]

Usage Instructions

To set the time


 Pull out the crown. Set the hands by rotating the crown. Push the crown back in on a time signal to resume timekeeping.

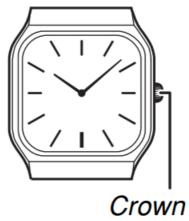

• [Modules 705, 706, 1300, 1311, 1330, 1344, 1360, 1399, 1747, 1771, 4394, 5049]

To set the time

- 1. When the second hand is at noon, pull out the crown to stop it.
- 2. Set the hands by rotating the crown. Move the minute hand four or five minutes past the setting you want, and then back it up to the setting.
- 3. Push the crown back in on a time signal to resume timekeeping.
 - [Modules 707, 708, 1331, 1332, 1342, 1345, 1346, 1787, 2717, 2718, 2719, 2725, 2731, 2748, 2749, 2783, 2784, 3363, 3711, 3712, 4393, 5025, 5044, 5058]

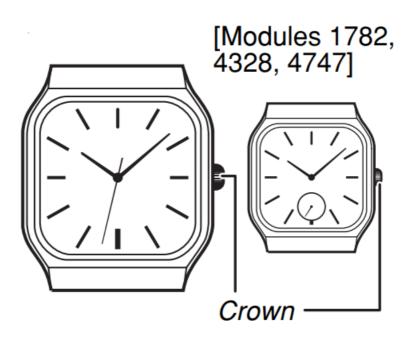


To set the time

- 1. When the second hand is at noon, pull out the crown to the second click to stop it.
- 2. Set the hands by rotating the crown.
 - Move the minute hand four or five minutes past the setting you want, and then back it up to the setting.
- 3. Push the crown back in on a time signal to resume timekeeping.

To set the day

Avoid setting the day between 8:00 p.m. and 2:00 a.m. The day may not change in the following day if you do.


- 1. Pull out the crown to the first click.
- 2. Set the day by rotating the crown.
- 3. Push the crown back into its normal position.

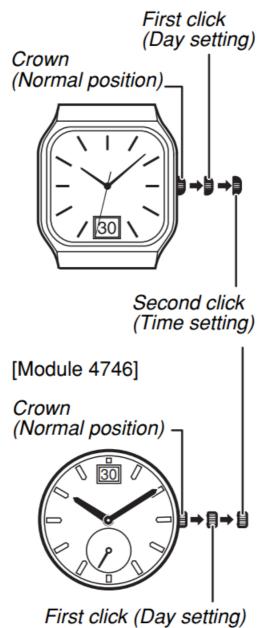

• [Modules 709, 1333, 1347, 3716]

To set the time

- 1. When the second hand is at noon, pull out the crown to the second click to stop it.
- 2. Set the hands by rotating the crown.
 - Move the minute hand four or five minutes past the setting you want, and then back it up to the setting.
- 3. Push the crown back in on a time signal to resume timekeeping.

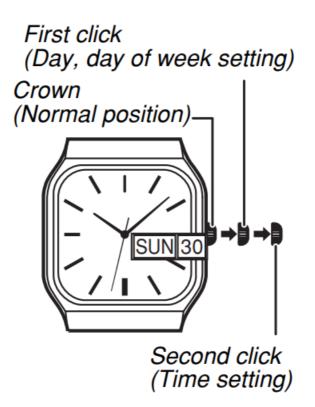

To set the day and the day of the week

Avoid setting the day and day of the week between 8:00 p.m. and 4:00 a.m. The day and day of the week may not change in the following day if you do.

- 1. Pull out the crown to the first click.
- 2. Set the day by rotating the crown counterclockwise.
- 3. Set the day of the week by rotating the crown clockwise. Confirm that the correct language (English or Spanish) is selected.
- 4. Push the crown back into its normal position.

[Days of the Week]


English Spanish

- SUN DOM
- MON LUN
- TUE MAR
- WED MIER
- THU JUEV
- FRI VIER
- SAT SAB
- To watch with the elapsed time bezel, rotate the elapsed time bezel to align the mark with the minute hand.
- After a certain amount of time has elapsed, read the graduation on the elapsed time bezel, which the minute hand points to.
- The elapsed time is indicated.



Elapsed time bezel

- Some water resistant models are equipped with a screw lock crown.
- With such models, you must unscrew the crown in the direction noted in the illustration to loosen it before you can pull it out. Do not pull too forcibly on such crowns.
- Also note that such watches are not water resistant while their crowns are loosened. Be sure to screw the crowns back in as far as they will go after making any setting.

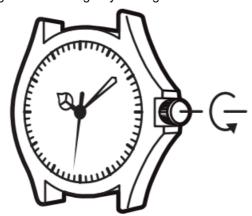

Frequently Asked Questions

- Q: How do I confirm the language selection on my watch?
 - **A:** To confirm the language selection (English or Spanish), follow these steps when setting the day and day of the week using the crown operation.
- Q: What should I do if my watch's second hand is not aligning properly at the start position?
 - **A:** If the second hand is not aligned at the start position correctly when setting the time or day/day of the week, gently adjust it by rotating the crown until it aligns with the proper starting position.

Documents / Resources



CASIO HK-X Analog Watch [pdf] User Guide

1362, 1398, 1770, 2799, 3378, 4370, 705, 706, 1300, 1311, 1330, 1344, 1360, 1399, 1747, 177 1, 4394, 5049, 1782, 4328, 4747, 707, 708, 1331, 1332, 1342, 1345, 1346, 1787, 2717, 2718, 2 719, 2725, 2731, 2748, 2749, 2783, 2784, 3363, 3711, 3712, 4393, 5025, 5044, 5058, 4746, 70 9, 1333, HK-X Analog Watch, HK-X, Analog Watch, Watch

- Your Ultimate Resource for Millions of User Manuals
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.