



casselin CVG413B Table Top Ice Cream Display Case Instruction Manual

[Home](#) » [casselin](#) » casselin CVG413B Table Top Ice Cream Display Case Instruction Manual 

casselin CVG413B Table Top Ice Cream Display Case Instruction Manual



ICE CREAM DISPLAY



CVG413B

SAS CASSELIN

83 rue Marcel Mérieux 69960 Corbas FRANCE

Tel: +33 (0)4 82 92 60 00 – Email: contact@casselin.com

Contents

1 PRESENTATION

- 1.1 Information
- 1.2 Description of symbols
- 1.3 Rights'author
- 1.4 Declaration of conformity
- 1.5 Warranty

2 SECURITY

- 2.1 Principles
- 2.2 Intended use
- 2.3 Safety instructions when use of the device

3 TRANSPORT, PACKAGING AND STORAGE

- 3.1 Inspection following transport
- 3.2 Packaging
- 3.3 Storage

4 HARDWARE FEATURES

5 INSTALLATION AND USE

- 5.1 Safety instructions
- 5.2 Use

6 CLEANING AND MAINTENANCE

- 6.1 Safety instructions
- 6.2 Daily maintenance
- 6.3 Safety instructions for maintaining the device

7 Documents / Resources

- 7.1 References

PRESENTATION

Information

This user manual serves as information to all its users. It describes the installation and handling of the device. Safety instructions and technical knowledge of the device are detailed in this manual. They are essential conditions for the proper use of professional equipment. Each user must scrupulously respect all instructions for use. This user manual must be kept next to the product for proper use and access to the instructions at all times for each user.

Description of symbols

Information, instructions for use and safety instructions are represented by symbols. It is essential to follow these instructions in order to avoid material damage and personal injury.

WARNING

This symbol means that there is a danger that could cause injury. Concentration and caution are imperative when operating this device.

ELECTRICAL DANGER

This means that there is a danger from electric current. Failure to follow instructions may result in risk of injury and death.

ATTENTION

This symbol is used to indicate that failure to follow the instructions may result in failure or destruction of the device.

NOTICED

This symbol indicates good practices and advice that must be applied for effective use of the device.

NOTICED

You must read these instructions for use before putting the device into service. We accept no liability for damage and breakdowns resulting from non-compliance with the instructions for use. The Casselin company reserves the right to make any modifications, whether technical, informative or marketing, to our product without notice.

Rights'author

The user manual is protected by copyright law. Reproductions of all types and forms – even partial – as well as the exploitation and/or transmission of its contents are not permitted without our authorization. Any violation of these provisions entitles you to damages. Other rights remain reserved.

Declaration of conformity

The device complies with current European Union standards and directives. We attest to this in the CE declaration of conformity.

Warranty

The instructions given in this user manual have been drawn up taking into account the regulations in force, current technical developments, our knowledge and experience. All translations have been produced professionally. However, we decline all responsibility in the event of a translation error. The attached French version is authentic.

SECURITY

Safety instructions are used to avoid dangers. They are mentioned in the individual chapters and are characterized by symbols. Their compliance guarantees optimal protection against risks and allows ideal operation of the device. Safety instructions must be available and legible on the devices.

Principles

Safety instructions are established to avoid errors, dangerous uses and breakdowns. Therefore, the device must neither be altered nor misused. The device is designed according to currently developed technical rules. This notice must be kept. The device must be used in premises intended for this purpose and only by a responsible person with knowledge of the operation of the device.

Intended use

The operation of the device and the safety of use are only guaranteed in the event of normal and correct use of it. Assembly and technical interventions must be carried out by professionals.

ATTENTION

Any other use is considered non-compliant. Any accusation linked to improper use of the device is not admissible and will be void. Intended use corresponds to use described in these instructions for use. Proper use corresponds to compliance with safety, hygiene, cleaning and maintenance rules.

Safety instructions when use of the device

The information relating to occupational safety refers to the European Union regulations valid at the time of manufacture of the device. For commercial use of the device, the operator undertakes, throughout the duration of its use, to verify the conformity of the measures cited in terms of work safety with the current state of the arsenal

of advice and to comply with the new regulations.

For non-EU countries, the laws and provisions of the country must be respected. All environmental protection provisions must also be respected.

ATTENTION

The device must be operated by people with sufficient physical and intellectual means. People with limited physical and intellectual means must be supervised to use this device. Use prohibited by children and minors (exceptions made within a legal framework provided for by law)

If the device is used by a third party, the instructions for use must be available before any use. Any new user must have read the instructions for use.

The device must only be used in premises intended for this purpose.

TRANSPORT, PACKAGING AND STORAGE

Inspection following transport

Verification of the absence of damage and the completeness of the device must be carried out upon receipt of the package. If transport damage is identified, refuse or accept the delivered product only with reservation

*. A complaint detailing the defects noted must subsequently be made. The collection of damages is only possible in the event of a complaint made within the stipulated time limits, i.e. 24-48 hours maximum.

* written on the carrier's paper or digital delivery notes.

Packaging

The packaging of the device must be kept in the event of moving, or for return to after-sales service. The interior and exterior packaging must be completely removed before using the device. The standards in force in your country regarding environmental protection must be respected before destruction of the packaging.

Storage

ATTENTION

The device can be kept in stock but only in its original closed packaging.

Storage can be carried out in accordance with these conditions:

- Storage in a dry, non-humid room
- Sheltered from the sun
- Stock control for more than 2 months (general condition of the device and all the elements constituting it)
- No shaking of the material
- Storage in closed premises and not outside.


HARDWARE FEATURES


* Subject to change





Model	CVG413B
Temperature	Up to -18°C
Supply voltage	220W/230V/50Hz
Dimensions (mm)	L 865 × D 735 × H 446
Weight	45 kg

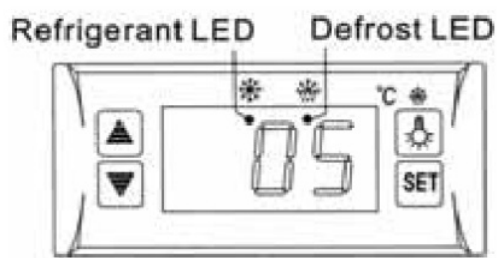

Digital temperature regulator:



- The regulator is located on the back of the device
- There are two buttons to lower or increase the temperature
- The first liquid crystal indicator corresponds to the compressor, lit when the compressor is running for cooling
- The second liquid crystal indicator corresponds to defrost, lit when automatic defrost is in operation
- This key corresponds to LED lighting 

1. Adjust the temperature: Press the button **SET**, the set temperature is displayed. Push the button  Or  to modify and store the displayed value. Push the button **SET** to exit the setting and display the cold room temperature.
2. If you do not press any other buttons within 10 seconds, the cold room temperature is displayed.
3. Lighting: Press the button , it lights up; press again, it stops. Manual defrost with stop/start:
Press the button  and hold it for 6 seconds to defrost or stop defrosting.
4. Refrigeration LED: During refrigeration, the indicator light is on; When the cold room temperature is constant, the indicator light is off; During delayed start, the indicator flashes.
5. Defrost LED: during defrosting, the LED is on; When defrosting stops, the LED is off. During the defrost delay display, the LED flashes.

6. Resetting the digital controller

When the screen shows “disorder”, press the button for 2 seconds until the beep sounds, quickly press the button for 6 seconds until the beep sounds again, the screen flashes for 3 seconds and restores factory settings.

INSTALLATION AND USE

Safety instructions



ELECTRICAL DANGER

Risk linked to electric current!

- No contact with heat sources should take place with the electrical cord.
- The cord should not hang over the edge of a table or counter.
- Do not pour water into a device that is operating or still hot.
- The device must be properly connected and comply with current regulations.



WARNING

When operating, the device can reach high temperatures. To avoid burns and accidents, do not use the device when it is malfunctioning, and do not use spare parts that are not original.



ELECTRICAL DANGER

Risk linked to electric current!

If incorrectly installed, the device may be dangerous and cause injury. Before any installation, check the electrical network data. Plug in the device only when it complies. The device must be unpacked and checked completely before connection by a professional.

Use



WARNING

The installation of the device and maintenance should only be carried out by professionals.

- Do not leave the device running without monitoring it.
- During use, your hands must be dry.
- Do not move or tilt the device during operation.

Manual :

- The device must be completely removed from its packaging. All protection must be completely removed.
- Place the appliance upright on a solid, flat surface. Never place the refrigerated display case on a flammable surface. Place this machine to ensure optimal air circulation. We advise you to keep a minimum distance of 10 cm from the wall and other objects.
- Do not install this device near open fires or other heating devices.
- Do not install the device in a wet or humid place.
- The electrical cable must be protected at least 16 amps. The device must be plugged directly into a wall outlet. Using a power strip will cause the device to trip.
- To avoid damage to the compressor, the device must not be tilted more than 45° during transport or installation.
- Leave the device to rest for 2 hours before its first use.
- Before use, the device must be cleaned
- Plug in the device and press the ON button, choose the desired temperature. Do not add drinks until the desired temperature has been reached.

- LCD indicator: the indicator light is on during the refrigeration phase and remains off as long as the temperature of the refrigeration chamber is stable and flashes when the compressor remains off for too long.
- LCD defrost indicator: the device is equipped with automatic defrosting which activates 4 times per 24 hours. The indicator light comes on during the defrosting phase and turns off at the end of defrosting. It flashes when the appliance has not been defrosted for a long time.
- Manual defrosting is also possible if the efficiency of the refrigeration decreases, for example during accidental opening.
- Any hot dish must be cooled before inserting it into the appliance.
- The height of the shelves must be adapted to the height of the dishes. Dishes should be properly spaced to maximize the effect of refrigeration.

WARNING !

The compressor may reach a high temperature. It is prohibited to touch the surface of the compressor when the device is running or immediately after use to avoid any risk of injury!

CLEANING AND MAINTENANCE

Safety instructions

Any maintenance, cleaning or repair of the device must be carried out with the device unplugged (isolated from all electrical sources).

The use of caustic detergents and baking soda for cleaning is prohibited. Water must not penetrate inside the device.

Never immerse the device in water or other liquid.

Use Casselin brand products intended for this purpose.



WARNING

The device cannot be cleaned with a direct water jet (no pressurized water jet).

Daily maintenance

- Clean the device regularly
- Remove the shelves and clean them with a mild product and a clean cloth.
- Clean the interior with a lukewarm cloth and a specific cleaning product
- Rinse with clean water
- Use a soft, dry cloth to polish the surfaces.
- After cleaning, use a soft, dry cloth to polish and dry the device.
- Leave the doors open and allow the appliance to dry
- If the display case is not used, store the device in a dry place.

Safety instructions for maintaining the device

Daily check for damage to the power cord. Never use the appliance when the cord is damaged. If the cord shows defects, it must be replaced by a qualified technician.

In the event of a breakdown, contact your dealer.

Any maintenance or repair work should only be carried out by a professional.

NOTICED


In the event of a disconnection, unplug the appliance, allow it to cool and contact your retailer. If the unit does not start, check your power cord. The device should not be plugged into a power strip but directly into a wall outlet. For any other anomaly, contact your dealer.

NOTICED

Waste from used devices: any used device must, during its disposal, comply with the regulations in force in its country *. It is imperative to render the device unusable before disposal by removing the power cable.

* in terms of ecology and recycling

Documents / Resources

 <p>The image shows a white, rectangular table-top ice cream display case with a hinged lid. The lid is open, revealing the interior. The brand name 'Casselin' is visible on the lid. Below the main image, there is a smaller image of the same case with the lid closed. Text at the bottom of the image reads 'CVG413B' and 'VITRINE A GLACES A POUCE'.</p>	<p>casselin CVG413B Table Top Ice Cream Display Case [pdf] Instruction Manual CVG413B Table Top Ice Cream Display Case, CVG413B, Table Top Ice Cream Display Case, Ice Cream Display Case, Display Case</p>
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.