



Contents [[hide](#)]

- [1 CCACHE A18 Button Slide Video Body Worn](#)
- [2 Customer Support](#)
- [3 Function introduction](#)
- [4 LED Indicators](#)
- [5 Function introduction](#)
- [6 Quick Guide](#)
- [7 Charging & Data Transfer](#)
- [8 Timestamp setting](#)
- [9 Announcements](#)
- [10 Relevant Parameter](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

CCACHE

CCACHE A18 Button Slide Video Body Worn



Customer Support



Video Instruction

Scan the “QR” Code to view the Video Manual, which makes A18 easier to set up and use.



Customer Service

Scan “QR” Code enter your question, to realize your 1-year warranty or help you arrange the replacement.

Function introduction



LED Indicators

Indicator Code	Condition
BLUE Light	Boot/ Standby/ Video/ Photo indicator light
YELLOW Light	Infrared indicator light
GREEN Light	Motion detection indicator light
RED Light	Charge light

Function introduction

Night Vision ON/OFF:

In any mode after powering on:

- Short-press the power button to record night vision.(YELLOW light turns on: infrared night vision light turns on)
- Short-press the power button again, the yellow light turns off and the infrared light turns off.

- **Motion detection:**

In standby mode (blue light solid):

- Long-press the video button for 3 seconds to turn on motion detection mode (GREEN light turns on):
 - Object moves, the Green light flashes slowly, and motion detection recording is entered. (The object moves once and the recording lasts for 1 minute. If it moves continuously, the recording lasts for five minutes and is saved in segments.
 - No object moves, the Green light is solid, and motion detection standby is in progress.
- Press the Record button once to exit the motion detection mode.

Quick Guide

Please check whether the SD card is installed before starting to use.

Long-press the power button for 3 seconds to power on the device, the blue light turns on.

In standby mode (BLUE light solid):

- Press the photo button once and take a photo. (The BLUE light flashes once, one

photo is taken, and the photo is automatically saved)

- Press the video button once to start recording, and press the video button again to stop recording. (The BLUE light flashes slowly during recording)
- Short press the power button to record night vision.(YELLOW light turns on)
- Long press the video button for 3 seconds to turn on motion detection mode. (GREEN light turns on)

Press and hold the power button to turn off the device. The LED light goes out.

Charging & Data Transfer

- Connect the provided cable with a 5V 1A/2A adapter or power bank to charge the device. (The RED light flashes when charging & RED light solid when fully charged.)

Tips: Insert a TF card and an external USB cable, and connect an external 5V USB power supply or charger (mobile power supply) to automatically turn on the device and directly enter the recording mode.

- The device supports recording while charging. You can manually shut down the camera and stop recording.
- Connect the provided cable with the Computer to read the data.(A new flash disk will show . Open the disk to view the files)
- Remove the SD card to use it as a computer camera.

Timestamp setting

- Turn on the device and record a video;
- After shutting down, connect the device to the computer using a data cable;
- Open the “ time.txt ” text document in the removable disk and edit the correct time; “21:30:23, April 1, 2025” format example: 20250401213023 Y
- After saving this article file, turn on the device to record the video, and the edited time will be displayed on the saved video file.

*How to remove the timestamp:

Change the tail Y to N. The reference format is as follows:

1. 20191001235959 Y (with timestamp)
2. 20191001235959 N (without timestamp)

Announcements

1. Make sure that the T-flash (Micro SD) card has been inserted into the product before use. If the card is not inserted, the machine cannot be used normally.
2. Please aim the lens at the subject to be photographed in an environment with sufficient lighting, and keep a distance of more than 50cm from the subject to be photographed. This will obtain a correct, natural color, clear scenery, and stable image.
3. TF card requirements: 16/32/64G, C10 high-speed brand card, format the card before inserting it into the machine for use.
4. Reset: Reset: When the machine crashes, no button work and the machine can not be used normally, you can press the photo key and the boot key at the same time to reset the machine.

Relevant Parameter

Items	Relevant parameters
Video format	AVI
Video decoding	M-JPEG
Video resolution	1920×1080P
Video frame rate	30fps
Image scale	16:9
Photo resolution	4032×3024
Image format	JPG
Battery type	Built-in high-capacity polymer lithium battery
Battery capacity	1000mAh
Working hours	Photography can last for 360 minutes.

Charging voltage	DC-5V
Supporting storage	Supporting 32G TF card at maximum
Transmission speed	High-speed USB2.0
Interface type	Micro USB
Supporting systems	Windows; Mac Os; Linux
Media player	System-provided or mainstream audio and video player software

Notes:


1. It takes about 2 to 3 hours to fully charge the battery after each use. After the indicator light indicates that it is fully charged, try to charge it for another 30 minutes to ensure that the battery is fully charged.
2. It is normal for the product to be slightly hot. Please do not worry about the product being defective. This product is shipped after a long period of aging testing to ensure that there are no quality problems.

Precautions:

- **Occasions of use:** Please strictly abide by the relevant laws of the country where it is used. This product must not be used for any illegal purposes; otherwise, the consequences will be at your own risk.
- **Working temperature:** Please use it at a natural temperature, and do not use it at a temperature that the human body cannot adapt to.
- **Working humidity:** Please use it under the appropriate environmental humidity for humans. Do not place the product in a humid working environment. This product is not waterproof, so avoid water or exposure to rain.
- **Shooting requirements:** Please use it in an environment with sufficient light. Do not point the camera directly at strong light sources such as the sun to avoid damage to the optical device.

- **Cleaning requirements:** Do not use it in an environment with too high dust density to avoid dust on the lens and other parts, which will affect the camera's performance.

Documents / Resources

	CCACHE A18 Button Slide Video Body Worn [pdf] User Manual A18 Button Slide Video Body Worn, A18, Button Slide Video Body Worn, Slide Video Body Worn, Video Body Worn, Body Worn
-----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

CCACHE

A18, A18 Button Slide Video Body Worn, Body Worn, Button Slide Video Body Worn, CCACHE, Slide Video Body Worn, Video Body Worn

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.