



## **Contents** [ [hide](#) ]

- [1 CDA ECH Canopy Extractor](#)
- [2 Product Usage Instructions](#)
- [3 Using your extractor](#)
- [4 Cleaning](#)
- [5 Operating modes](#)
- [6 Mains electricity connection](#)
- [7 Electrical Information](#)
- [8 Troubleshooting](#)
- [9 Determining the position of your extractor](#)
- [10 Installation](#)
- [11 Product fiche](#)
- [12 CONTACT](#)
- [13 FAQ](#)
- [14 Documents / Resources](#)
  - [14.1 References](#)



## **CDA ECH Canopy Extractor**



## Product Usage Instructions

- The CDA Group Ltd cannot be held responsible for injuries or losses caused by incorrect use or installation of this product.
- Please note that CDA reserves the right to invalidate the guarantee supplied with this product following incorrect installation or misuse of the appliance or use in a commercial environment.
- This appliance should not be used by individuals with reduced physical, sensory, or mental capacity without proper supervision or instructions.
- External covers should not be removed for servicing or maintenance except by qualified personnel.
- For best performance, switch on the extractor 15 minutes before cooking and leave it running for about 15 minutes after cooking.
- To switch the extractor light on or off, press the Lamp indicator button.
- To change the speed level (Low, Mid, Max) while the extractor is running, press the relevant button.
- To turn off the extractor, press the Off button.
- The lights on your extractor are only for cooking use, not as ambient lighting.
- Switch off the electricity supply before performing any maintenance or cleaning on the extractor.
- Clean the extractor using a non-abrasive cleaner. Avoid abrasive cleaners that can scratch the surface.
- Use a dilute solution of water and mild detergent, then dry with a clean cloth.

## Important

- The CDA Group Ltd cannot be held responsible for injuries or losses caused by

incorrect use or installation of this product.

- Please note that CDA reserves the right to invalidate the guarantee supplied with this product following incorrect installation or misuse of the appliance or use in a commercial environment.
- This appliance is not designed to be used by people (including children) with reduced physical, sensory or mental capacity, or who lack experience or knowledge about it, unless they have had supervision or instructions on how to use the appliance by someone who is responsible for their safety.
- Under no circumstances should any external covers be removed for servicing or maintenance except by suitably qualified personnel.

### Appliance information

- Please enter the details on the appliance rating plate below for reference, to assist CDA Customer Care in the event of a fault with your appliance and to register your appliance warranty.

Appliance model	
Serial number	

### EU Declarations of Conformity

This appliance has been designed and manufactured to comply with all applicable UK and EU legislation,

- Low voltage Directive, 2014/35/EU
- Electromagnetic compatibility Directive, 2014/30/EU
- ErP Directive, 2009/125/EC
- RoHS Directive, 2011/65/EU and has been marked with the following symbols



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EU DIRECTIVE 2012/19/EU. At the end of its working life, the

product must be taken to a special local authority waste collection site, or to a dealer providing appliance recycling services.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health. It also enables the constituent materials to be recovered, saving both energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.




### **Please note**

- Under no circumstances should the extractor be connected to any gas ventilation system, flue system or hot air ducting system.
- Do not vent the extractor into an attic or loft space.
- Only house the extractor in rooms with adequate ventilation. Remember that the extractor is powerful and whatever air is extracted needs to be replaced.
- Do not tile the extractor in. It should be removable for service or maintenance.
- Do not use silicone sealant to secure the hood to the wall.
- You must be able to isolate the extractor from the mains electrical supply after installation.
- This extractor has been designed to be used in a room with a volume of less than 36m<sup>3</sup>.
- Steam cleaners must not be used when cleaning this appliance.
- The performance of your extractor will vary depending on several factors. These include type of extraction, length of ducting, room volume, ventilation available and cleanliness of the filters.
- The extractor should be cleaned regularly to prevent the build-up of grease. We recommend cleaning both inside and outside the appliance monthly. Failure to observe the requirements specified in this manual can result in a fire risk.

### **Using your extractor**

- For best performance, you should switch on the extractor 15 minutes before starting to cook and leave it to run for approximately 15 minutes after the end of cooking.

## Control Panel

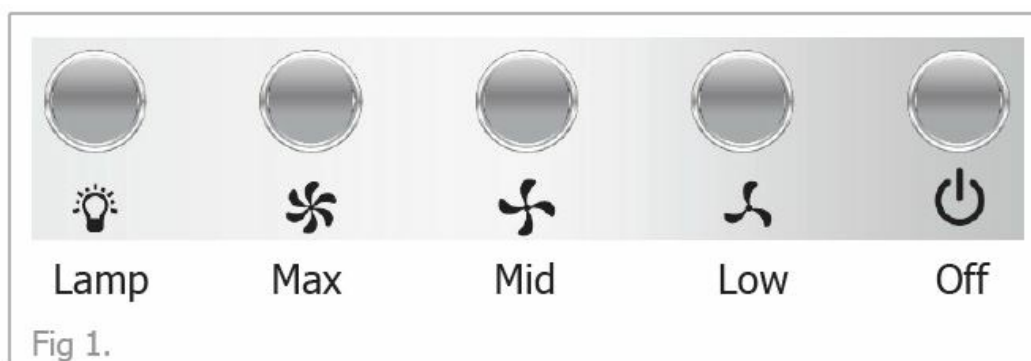

### To switch the extractor light on or off

- Press the “Lamp” indicator button.

### To switch on the extractor or to change the speed at any time when the extractor is running

- Press the relevant button for the “Low”, “Mid” or “Max” speed level as required.

### To switch the extractor off

- Press the “Off” button.

**IMPORTANT:** THE LIGHTS ON YOUR EXTRACTOR ARE TO BE USED ONLY FOR THE DURATION OF COOKING. THEY ARE NOT FOR USE AS AMBIENT LIGHTING.

**IMPORTANT:** DO NOT PERFORM MAINTENANCE OR CLEANING OF THE EXTRACTOR WITHOUT FIRST SWITCHING OFF THE ELECTRICITY SUPPLY.


## Cleaning

- You should use a non-abrasive cleaner.
- Any abrasive cleaner (including Cif) will scratch the surface and could erase the control panel markings.
- You can clean your extractor effectively by simply using a dilute solution of water and

mild detergent and drying to a shine with a clean cloth. Ensure that the extractor is dry after cleaning.

### **Removing the grease filter**

- To remove the grease filter, pushing the button on the handle and then pull down on the filter at the front, as shown in figure 2.
- Once released at the front it can be pulled completely away.

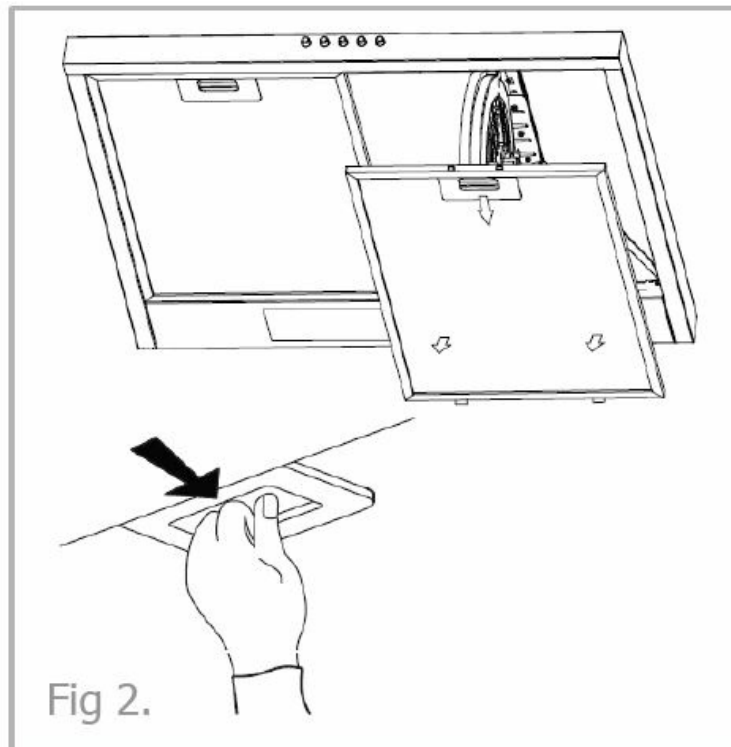


### **Cleaning the grease filter**

- The grease filter should be kept clean to minimise the risk of fire.
- At least once a month you should remove and clean the grease filter with hot soapy water.
- You can also wash the grease filter in a dishwasher, ensuring that you place it in an upright position to prevent damage from other items in the dishwasher. After rinsing and drying, replace the filter.
- Please note that cleaning the grease filter(s) in a dishwasher may cause the filters to discolour.
- This is normal and does not constitute a fault with the appliance.

### **Changing the charcoal filter**

- To ensure the best performance of your extractor, you should replace the charcoal filter every three to six months, depending on the frequency of use and the style of cooking.
- To attach new charcoal filters, first remove the grease filter(s) as described on the previous page. Offer up the charcoal filters to the sides of the motor as shown in figure 3, turning it clockwise until it locks in place.

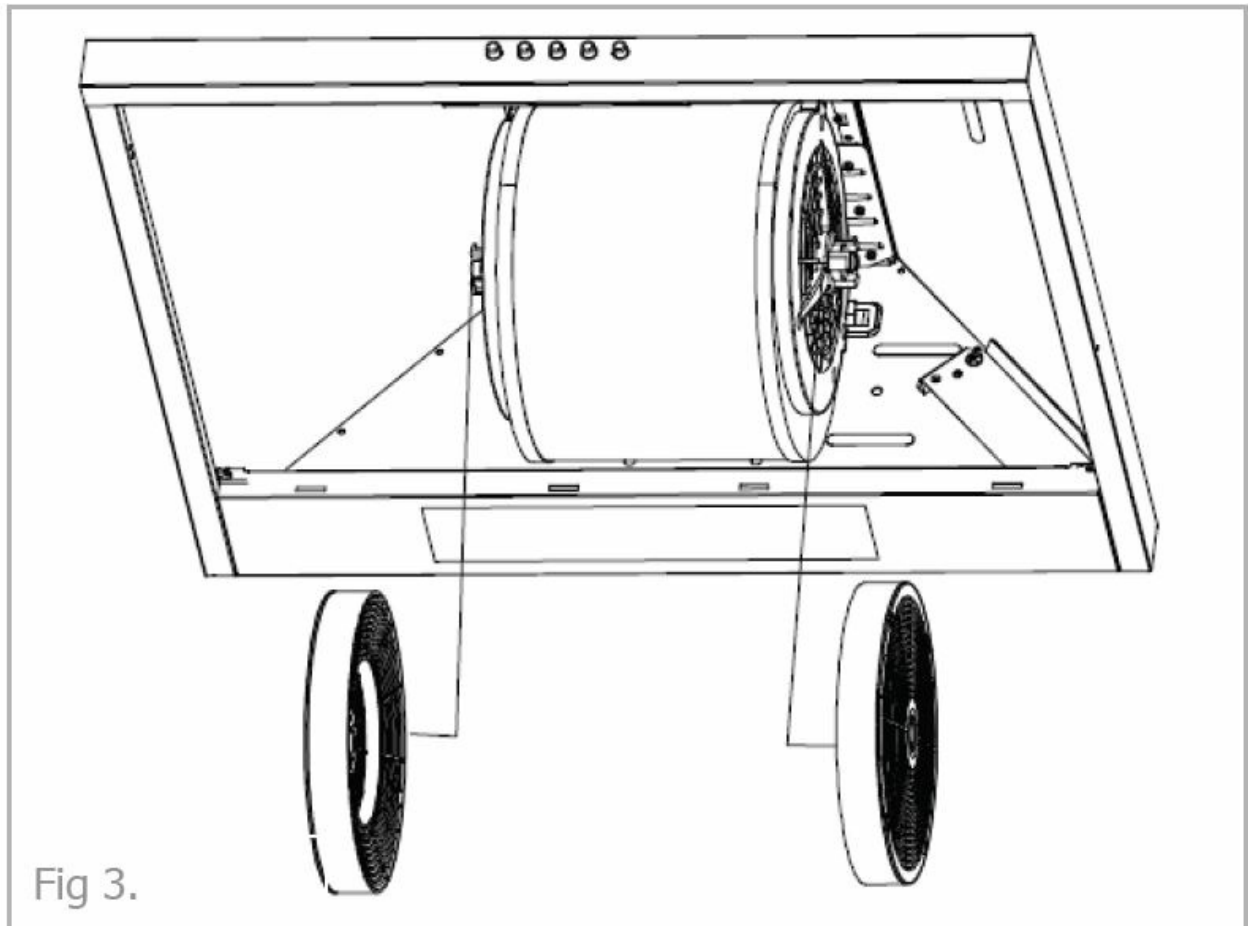


- Please note that charcoal filters are only required when the extractor is being used in recirculation mode. Charcoal filters are not supplied and are available to purchase from our Customer Care team

### **Extractor lighting**



- The lighting on your extractor uses energy-efficient LED technology and is designed to last the lifetime of the product.
- If the LED system malfunctions, please contact CDA Customer Care.

The LED units must only be replaced by a competent appliance service engineer.

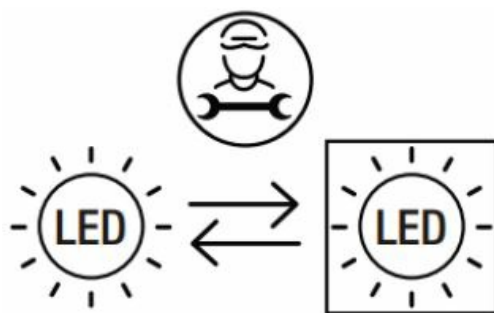

## Operating modes

- Your extractor can be used in either of two modes – recirculation or extraction.
- The choice often depends on the specific installation requirements. Your installer will be able to advise which is best for you.

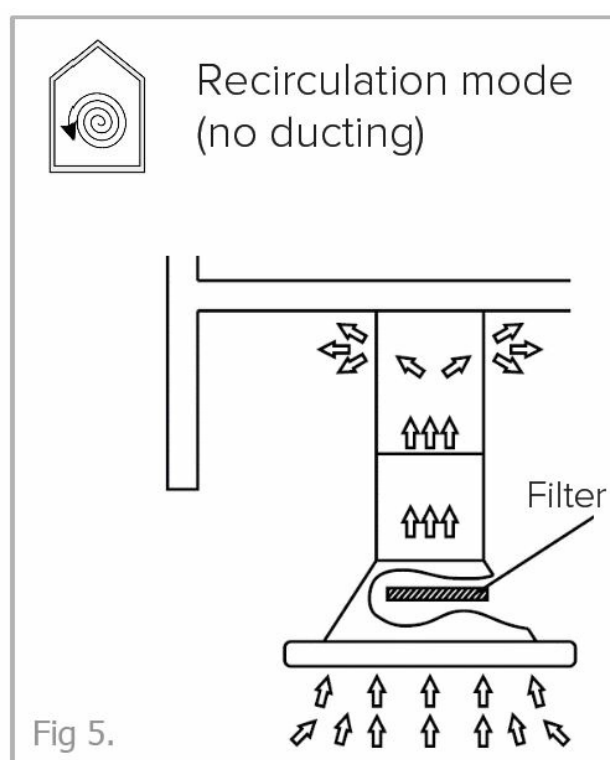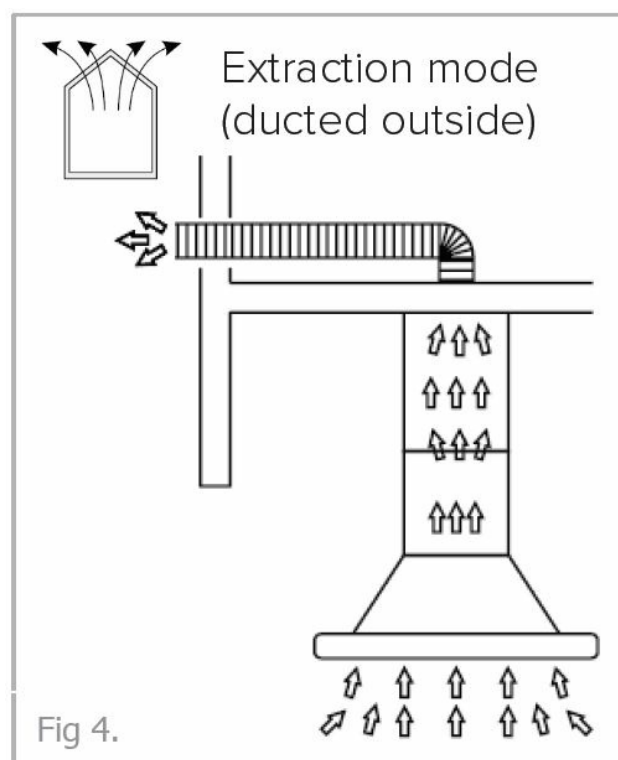

Note that when used in recirculation mode, the extractor will only remove grease and odours from cooking. It will not remove steam.

## Mains electricity connection


THIS APPLIANCE MUST BE CONNECTED TO THE MAINS SUPPLY BY A COMPETENT PERSON, USING FIXED WIRING VIA A DOUBLE POLE SWITCHED FUSED SPUR OUTLET AND PROTECTED BY A 3A FUSE.

- We recommend that the appliance is connected by a qualified electrician, who is a



member of the N.I.C.E.I.C. and who will comply with the I.E.T. and local regulations.

- The wires in the mains lead of this appliance are coloured in accordance with the following code:

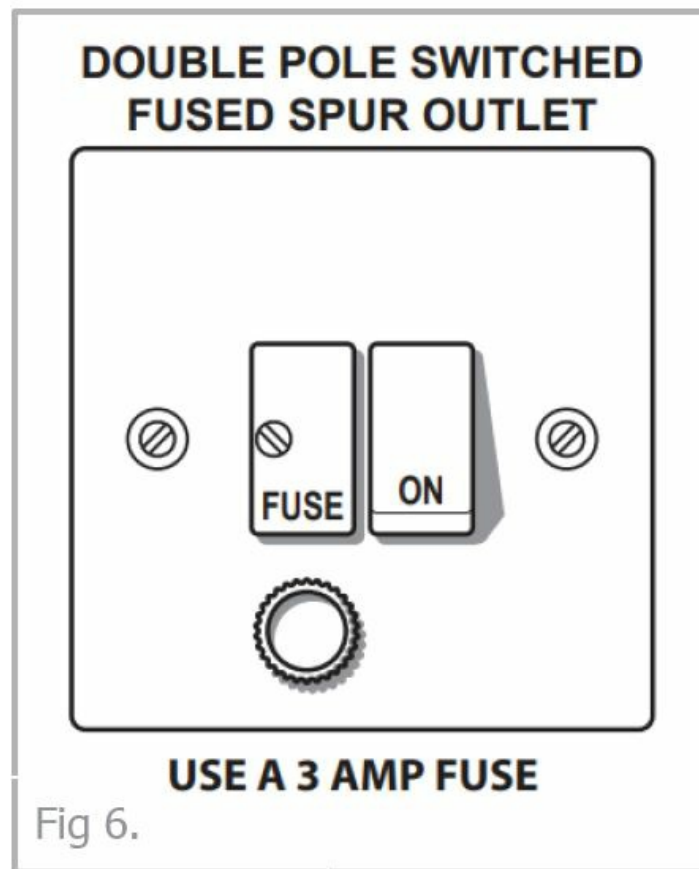

**BLUE = NEUTRAL, BROWN = LIVE, GREEN & YELLOW = EARTH**

As the colours of the wires in the mains lead for the appliance may not correspond with the coloured markings identifying the terminals connecting to the fused spur, proceed as follows:

- The wire which is coloured green & yellow must be connected to the terminal marked E (Earth) or coloured green.
- The wire which is coloured blue must be connected to the terminal marked N (Neutral) or coloured black or blue.
- The wire which is coloured brown must be connected to the terminal marked L (Live) or coloured red or brown.

If the mains cable of this appliance is damaged, it must only be replaced by a CDA approved service engineer, agent, or other suitably qualified person.

## **IMPORTANT – ONLY USE A 3 AMP FUSE**

- The use of a 13A fuse can cause internal wiring damage which will not be covered under the CDA warranty.
- Do not mount the electrical isolation switch behind the chimney section.
- It is a requirement that you must be able to isolate the extractor from the mains electrical supply after installation.

## **Electrical Information**

- Rated voltage (mains electrical voltage): 230 – 240Vac, 50Hz
- Rated input (rated power consumption): 158W
- Motor input: 150W
- Lamp power: 2 x 4W


## **Troubleshooting**

If your extractor is not working

1. Check that the mains electrical supply has not been switched off.
2. Check that the fuse in the spur has not blown.
3. Contact CDA Customer Care.

## **Determining the position of your extractor**

- When the extractor is to be mounted above an electric hob, the distance between the hob and the extractor must be greater than 550mm (600mm is recommended).
- When the extractor is to be mounted above a gas hob, the distance between the hob and extractor must be greater than 650mm.

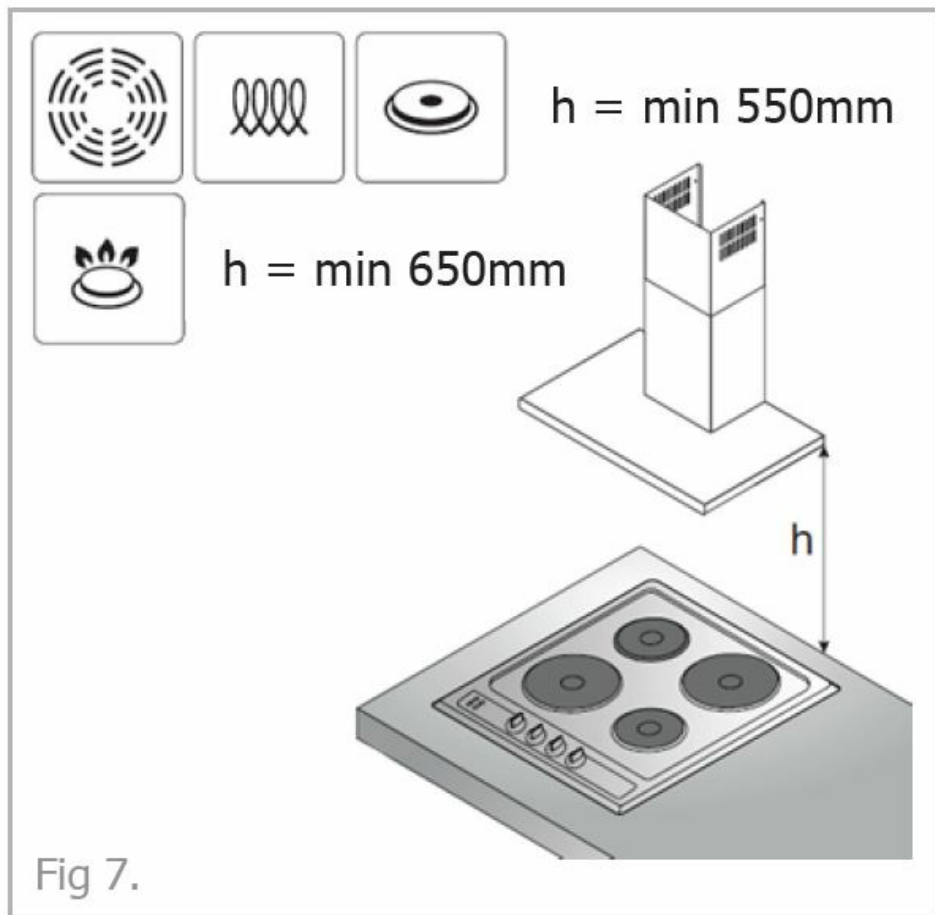

- If the instructions provided with your gas hob dictate that the required distance between hob and extractor must be greater than 650mm then that is the distance that should be observed; this is a legal requirement and failure to comply with the regulations may lead to your hob being disconnected from the mains gas supply, and the installation reported to RIDDOR.
- Any heights measured are from the top of the gas burners.


In the absence of any instructions supplied with the gas hob, the minimum distance between the hob and extractor must be at least 760mm. The width of any hob must not be greater than the width of the extractor.

## Installation

### Fixings provided


- We have provided a set of fixings that are suitable for most walls.
- However, please ensure that the fixings you use to secure the extractor to the wall are appropriate for the type of wall in your kitchen.

## Product dimensions

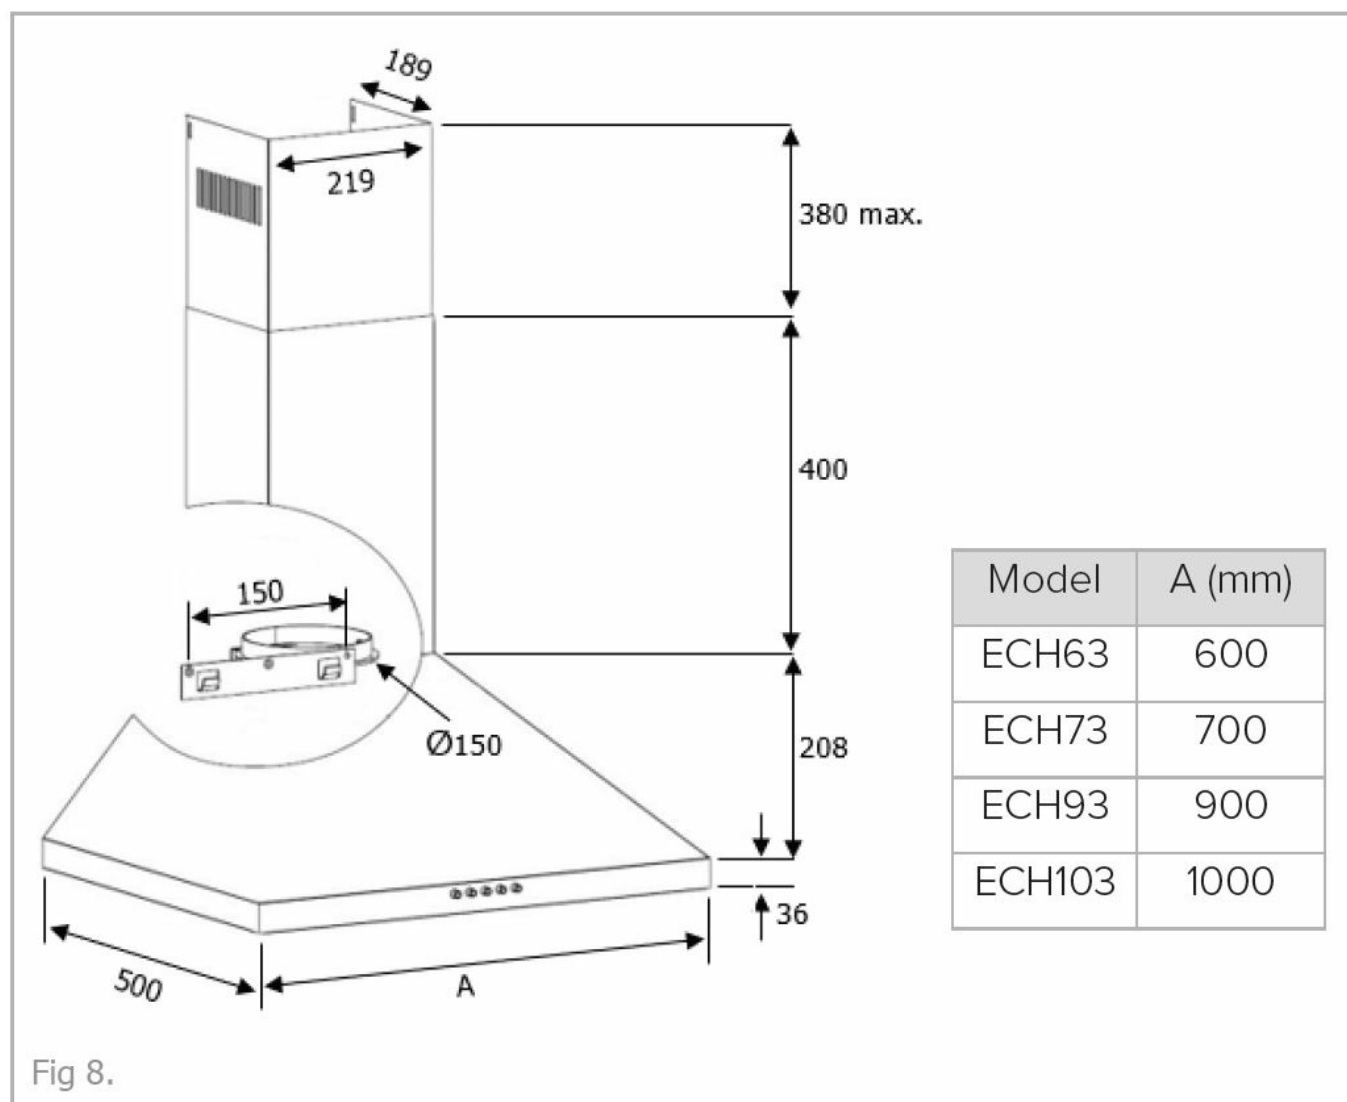


## Installation steps


1. Using the template supplied, mark out the positions of the mounting holes required. Make sure that the extractor height above the hob will be greater or equal to the height necessary for your hob (figure 7).

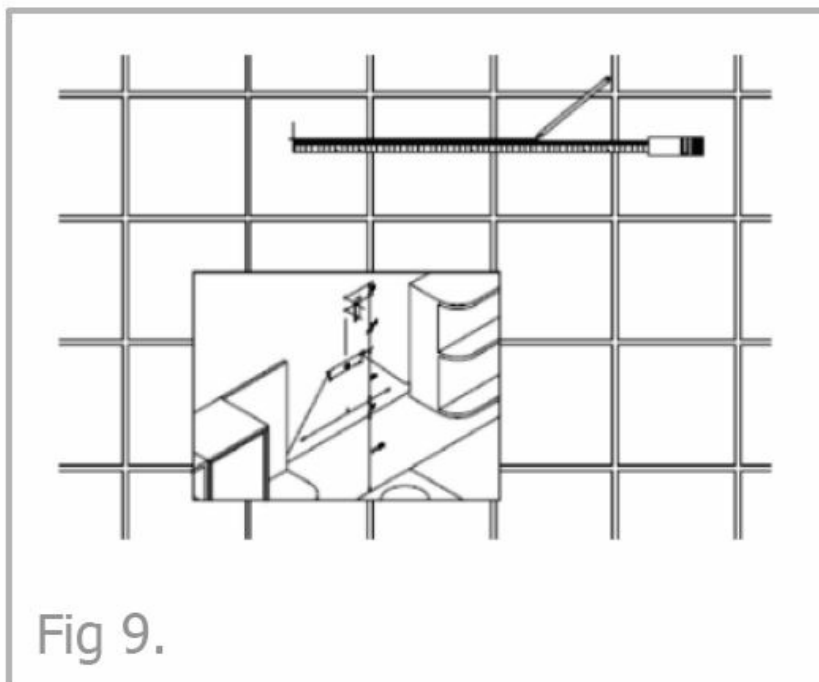


2. Next, drill the fixing holes and insert suitable wall plugs. Please make sure you use fixings suitable for your wall. Seek advice if you are unsure.

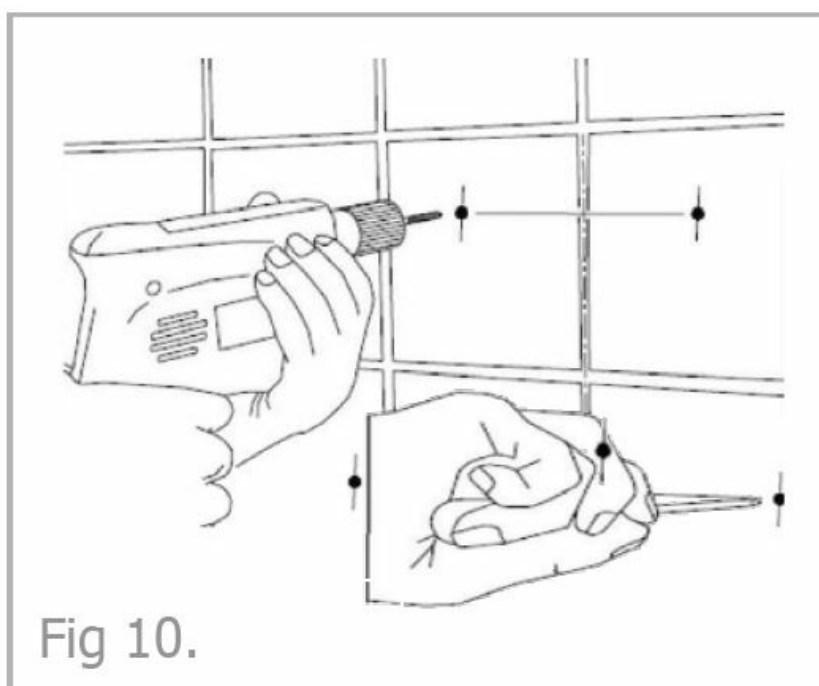


3. Secure the main wall hanging bracket to the wall using the provided screws. Lift the extractor on to the bracket, ensuring it is properly hooked in place.

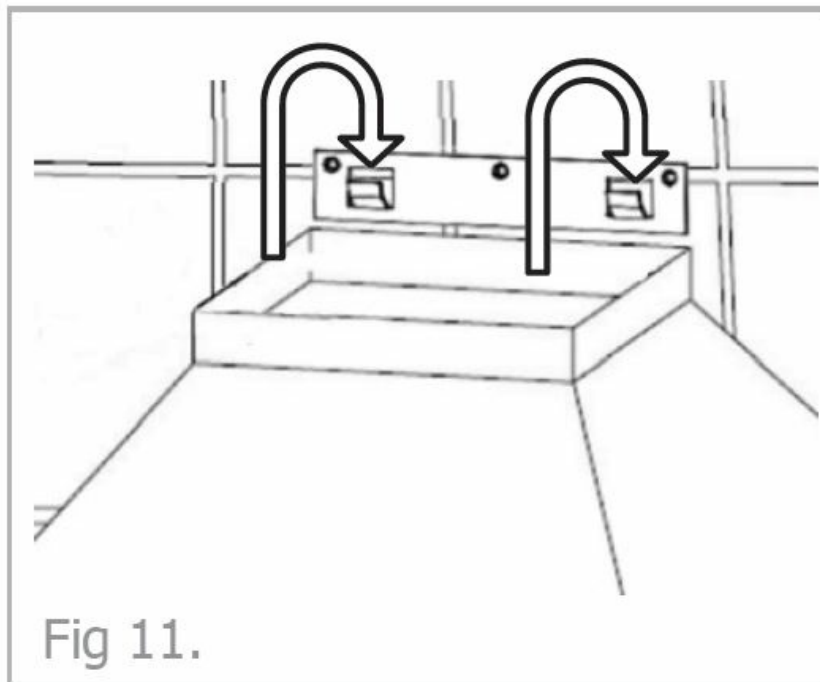


4. Attach the chimney support bracket to the wall, making sure it is central to the extractor body.

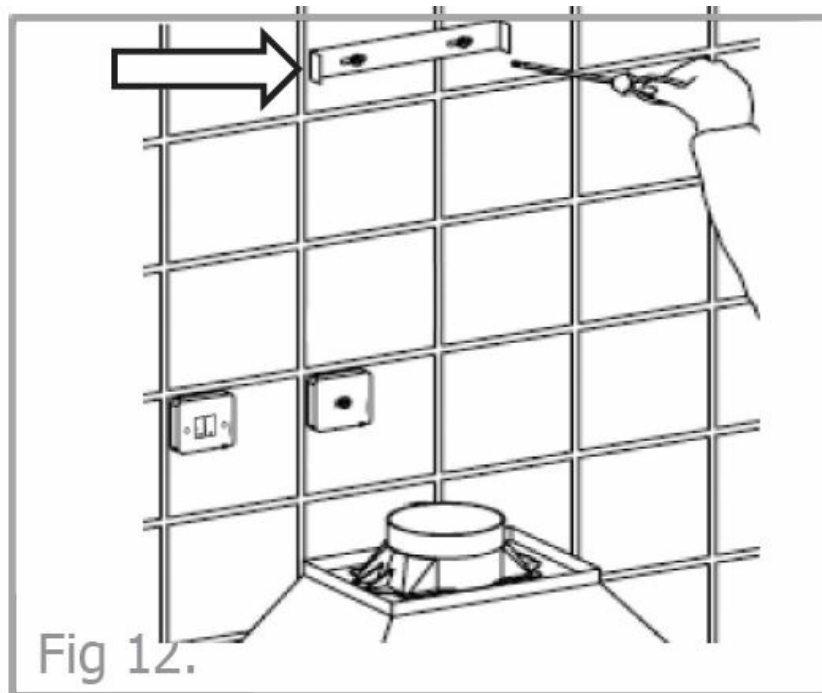


5. Fit the extractor duct pipe and secure to the extractor using duct tape, cable tie or other clamping means.

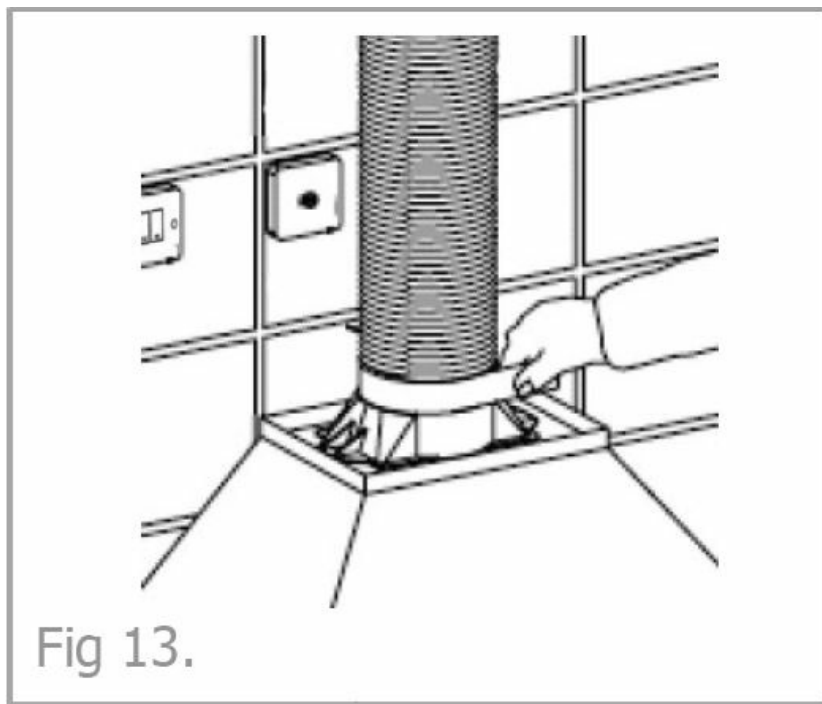


6. Lift the chimney section on to the body of your extractor, taking care not to scratch the two parts.

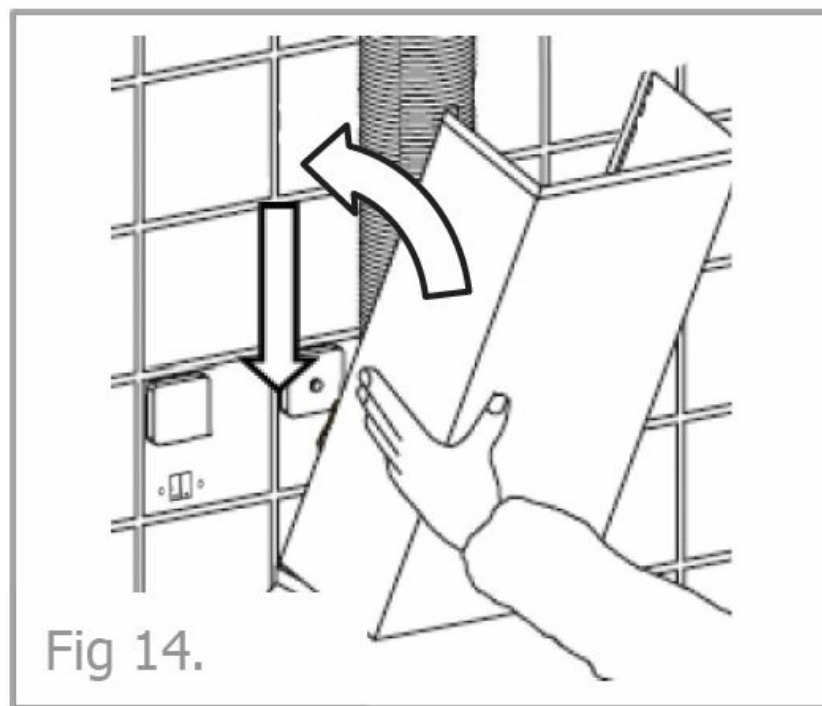

7. Adjust the chimney sections to the correct height and secure to the top bracket using the two supplied screws.

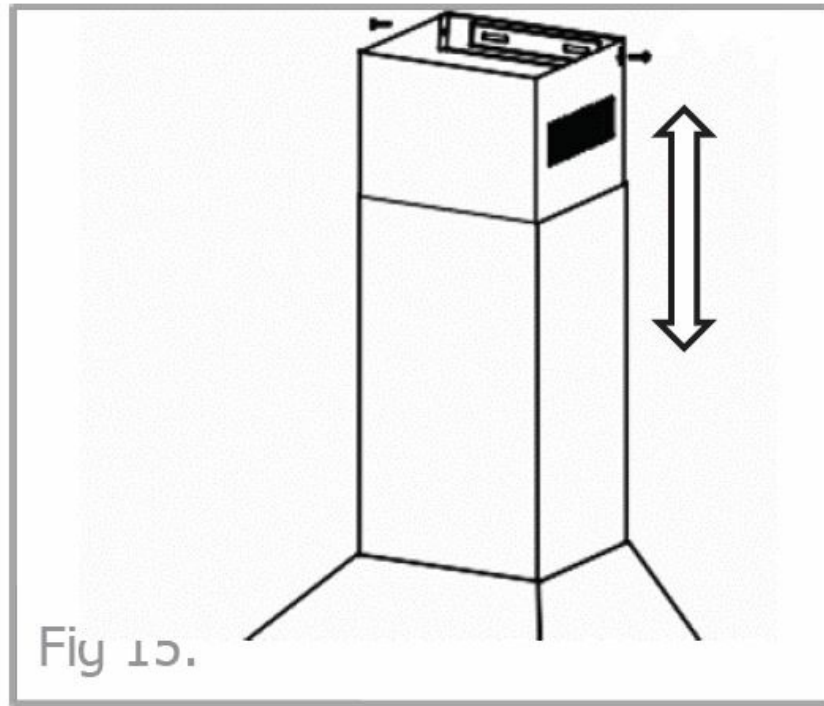

8. Finally, remove the grease filter and secure the extractor body to the wall using the two screws provided.

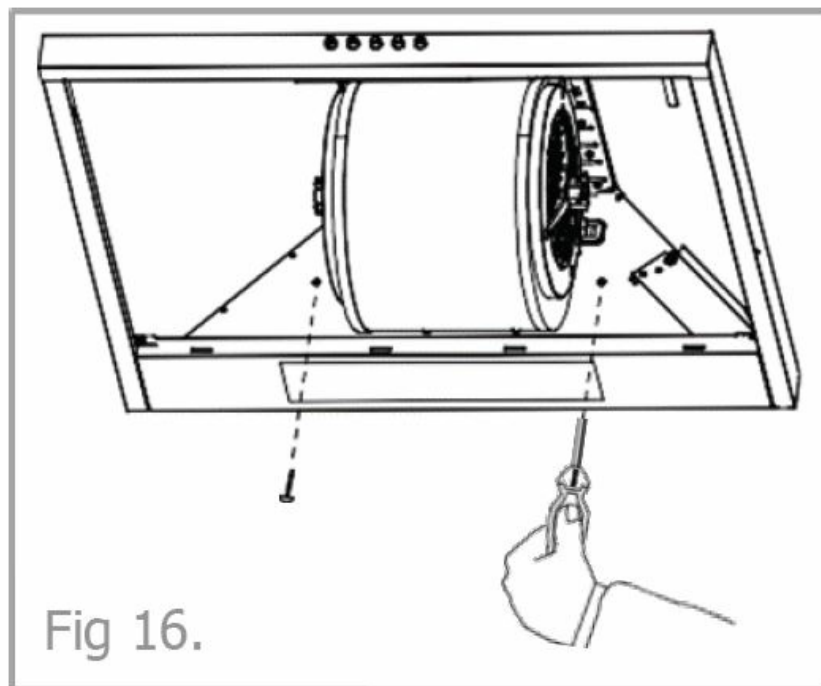

### Ducting and ventilation

For best performance and quietest operation, we recommend the use of 150mm ducting and for the extractor to be used in extraction mode (as shown in figure 4). 125mm ducting may be used but this will reduce the performance and increase the noise of the extractor when in use.

The use of 100mm ducting is not recommended.

Wherever possible, utilize rigid circular or rectangular section pipe which has a smooth



interior, rather than the expanding concertina type ducting. The lengths of ducting with minimal effect on performance are as follows:

- 4 metres with 1 x 90o bend
- 3 metres with 2 x 90o bends
- 2 metres with 3 x 90o bends

Longer ducting can be used, but this will reduce the performance and efficiency of your extractor. Ducting should be sealed to the vent outlet using suitable securing means. Note that ducting components and ducting kits are optional accessories and must be purchased separately.

### Installation for recirculation

- When installing this extractor for recirculating the air within your kitchen, we recommend the use of optional charcoal filters to help remove cooking odours.
- You should change these every three to six months, depending on use.

### Product fiche

#### Product fiche (Technical information)

Model identification, Symbol	Units	ECH63	ECH73	ECH93	ECH103
Annual Energy Consumption, AEC hood	kWh/yr	71	63	67.7	65
Energy Efficiency Index, EEI hood		C			
Fluid Dynamic Efficiency, FDE hood		14.3	20.6	15.4	20.8
Fluid Dynamic Efficiency Class		D	C	D	C

Lighting Efficiency, LE hood	Lux/ W	76		65	
Lighting Efficiency Class		A			
Airflow rate, min	m3/h	280	298	270	291
Airflow rate, max	m3/h	475	498	468	498
Grease Filter Efficiency, GFE hood	%	78		80	
Grease Filter Efficiency Class		C			
Power consumption in standby, Ps	W	0			
Power consumption off mode, PO	W	0			
Noise level at min/max, LWA	dBA	53 / 64			
Noise level on boost		—			

To determine the results, and in accordance with the requirements in relation to the labelling of energy-related products and regarding the eco-design requirements, the following calculations and measurement methods were applied:

- Directive 2010/30/EU, REGULATION NO 65/2014.
- Directive 2009/125/EC, REGULATION NO 66/2014.
- EN 50564 — Electrical and electronic household and office equipment, measurement of low power consumption.
- EN 60704-2-13 — Test methods for the determination of airborne acoustical noise, particular requirements for range hoods.
- EN 61591 — Household range hoods and other cooking fume extractors – methods for measuring performance.

## CONTACT

- For full information and Terms & Conditions, please visit:

<https://www.cda.co.uk/lifetime-warranty/>

- For service or queries relating to your product, please contact:
- The Customer Care Department on 01949 862 012 or email [customer.care@cda.co.uk](mailto:customer.care@cda.co.uk)

## FAQ


Q: Can the extractor be connected to a gas ventilation system?

A: Under no circumstances should the extractor be connected to any gas ventilation system, flue system, or hot air ducting system.

Q: Where should I not vent the extractor?

A: Do not vent the extractor into an attic or loft space. Only house the extractor in rooms with adequate ventilation.

## Documents / Resources

	<p><a href="#">CDA ECH Canopy Extractor [pdf]</a> Installation Guide</p> <p>ECH63, ECH Canopy Extractor, ECH, Canopy Extractor, Extractor</p>
---	---

## References

- [User Manual](#)

Canopy Extractor, CDA, ECH, ECH Canopy Extractor, ECH63,  
CDA Extractor

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.